

BOIFUN DP0168

BOIFUN Portable DVD Player User Manual

Model: DP0168

Brand: BOIFUN

1. INTRODUCTION

This manual provides essential instructions for the safe and efficient operation of your BOIFUN Portable DVD Player, Model DP0168. Please read this manual thoroughly before using the device and retain it for future reference. This portable DVD player features a 15.6-inch HD swivel screen, a 6-hour rechargeable battery, and supports various media formats and connectivity options.



The BOIFUN Portable DVD Player shown open, featuring its 15.6-inch HD screen and control panel.

2. PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- BOIFUN Portable DVD Player (Model DP0168)
- Remote Control
- Power Adapter (AC Charger)
- Car Charger
- AV Cable
- User Manual




The package includes the BOIFUN Portable DVD Player, a remote control, a power adapter for home use, a car charger for on-the-go power, an AV cable for TV connection, and a user manual.

3. PRODUCT FEATURES OVERVIEW

3.1. High-Resolution Swivel Screen

The device features a 15.6-inch HD screen with a resolution of 1280x800 pixels. The screen can swivel 270 degrees and flip 180 degrees, offering versatile viewing angles.

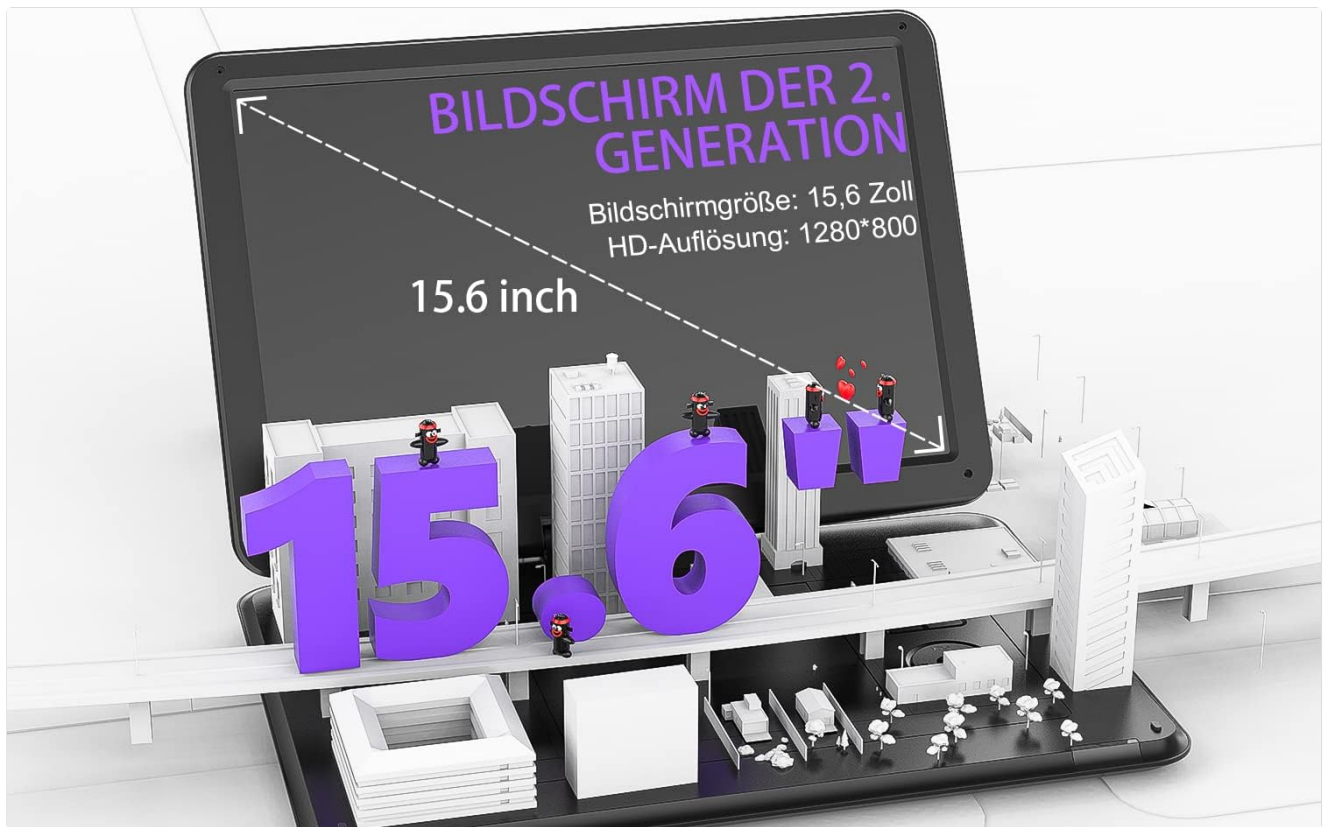

This image highlights the 15.6-inch screen of the portable DVD player, emphasizing its 1280x800 HD resolution for clear viewing.



The screen of the portable DVD player offers flexible viewing angles with its 180-degree flip and 270-degree swivel functionality.

3.2. Long-Lasting Battery

Equipped with a 5000mAh rechargeable lithium-polymer battery, providing up to 6 hours of continuous playback.



The device features a reliable battery providing up to 6 hours of continuous playback on a single charge.

3.3. Multi-Format Support


Supports direct playback of CD, DVD, DVD±R, CD-R(RW), SVCD-R(RW), DVD±RW, and VCD discs (Blu-ray discs are not supported). It also plays media files (VOB, AVI, MPEG, MP3, WMA, JPEG) from USB drives and SD cards (up to 32GB).




This portable DVD player supports multiple disc formats including DVD, VCD, CD, and various R/RW types, along with media files from USB and SD cards.

3.4. Connectivity and Ports

The player includes USB and SD card slots, a 3.5mm audio output, AV input, AV output, and a charging port. It supports synchronization with external TV screens.

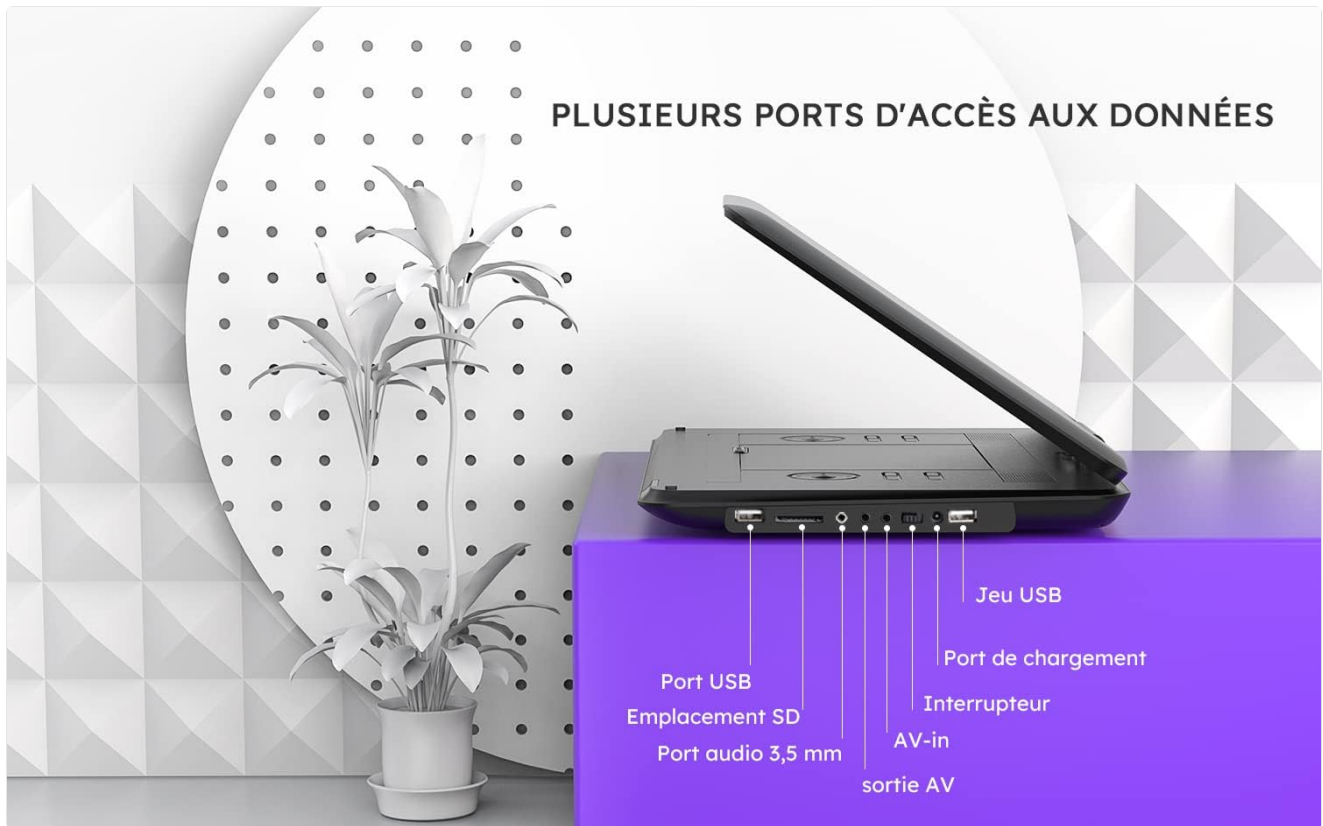

The side of the DVD player features multiple ports for connectivity, including USB, SD card slot, 3.5mm audio jack, AV input/output, charging port, and the power switch.

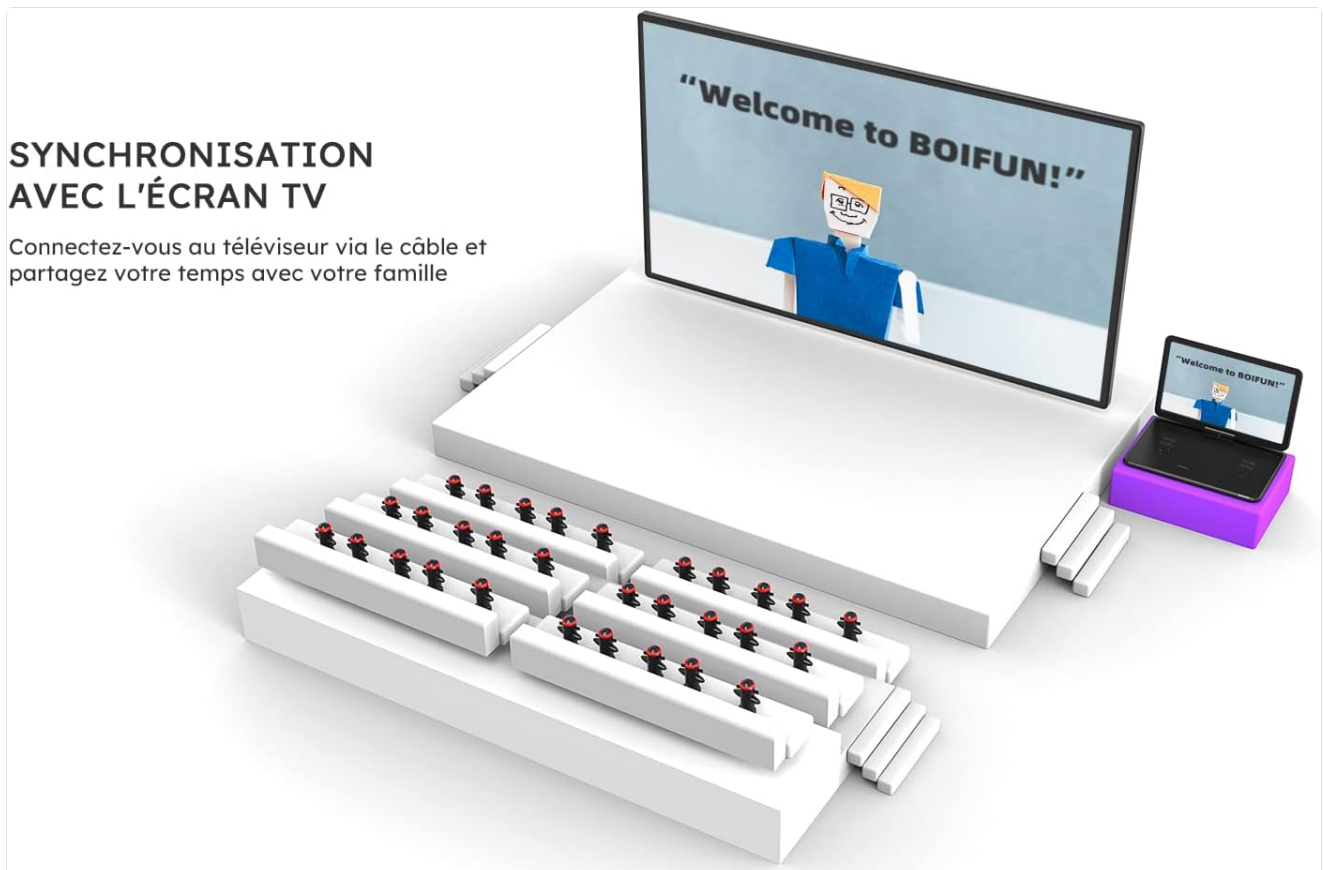

The portable DVD player can be connected to a television, allowing content to be displayed on a larger screen for shared viewing experiences.

3.5. Anti-Shock Function

The Anti-Shock feature protects the disc playback process, reducing video interruption caused by movement or vibrations.

3.6. Resume Playback

The memory function allows the player to resume playback from the last watched point.



The resume playback function allows users to continue watching from where they left off, as depicted by the 'on' and 'off' states of the device.

4. SETUP

4.1. Charging the Device

1. Connect the provided AC power adapter to the DC IN port on the side of the DVD player.
2. Plug the adapter into a standard wall outlet.
3. The charging indicator light will illuminate. A full charge typically takes approximately 4-5 hours.
4. For car use, connect the car charger to the DC IN port and your vehicle's cigarette lighter socket.

4.2. Inserting a Disc

1. Gently open the disc cover.
2. Place the disc onto the spindle with the label side facing up.
3. Press the center of the disc until it clicks into place.
4. Close the disc cover securely.

4.3. Using USB/SD Card

1. Insert a USB drive into the USB port or an SD card into the SD card slot.
2. The player will automatically detect the media or you may need to select the input source using the 'Source' or 'Mode' button.
3. Navigate through your files using the control buttons.

4.4. Connecting to a TV

1. Ensure both the DVD player and the TV are powered off.
2. Connect one end of the provided AV cable to the AV OUT port on the DVD player.
3. Connect the other end of the AV cable to the corresponding AV IN ports on your television (Yellow for Video, Red for Right Audio, White for Left Audio).
4. Power on both devices and select the correct AV input source on your TV.

5. OPERATING INSTRUCTIONS

5.1. Power On/Off

Slide the power switch located on the side of the player to the 'ON' position to power on. Slide to 'OFF' to power off.

5.2. Basic Playback Controls

- **Play/Pause:** Press the **PLAY/PAUSE** button to start or pause playback.
- **Stop:** Press the **STOP** button to stop playback.
- **Fast Forward/Rewind:** Press **FWD** or **REV** buttons to fast forward or rewind.
- **Next/Previous:** Press the **NEXT** or **PREV** buttons to skip tracks or chapters.

5.3. Volume Control

Use the **VOL+** and **VOL-** buttons on the player or remote control to adjust the volume. The player features dual speakers for enhanced audio.

5.4. Menu Navigation

Use the arrow buttons and the **OK** button on the player or remote to navigate through disc menus or file lists.

5.5. Screen Rotation

The screen can be rotated up to 270 degrees and flipped 180 degrees for optimal viewing in various positions.

6. MAINTENANCE

6.1. Cleaning the Device

- Wipe the screen and exterior surfaces with a soft, dry cloth.
- For stubborn marks, slightly dampen the cloth with water or a mild, non-abrasive cleaner.
- Avoid using harsh chemicals or abrasive materials that could damage the finish.

6.2. Disc Care

- Handle discs by their edges to avoid fingerprints.
- Store discs in their cases when not in use to prevent scratches.
- Clean dirty discs with a soft, lint-free cloth, wiping from the center outwards.

6.3. Battery Care

- Charge the battery fully before first use.
- Avoid completely draining the battery frequently to prolong its lifespan.
- If storing the device for an extended period, charge it to about 50% every few months.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Battery drained; Power adapter not connected; Power switch off	Charge the battery; Connect power adapter; Turn power switch to ON
No disc playback	Disc inserted incorrectly; Disc dirty/scratched; Unsupported disc format	Reinsert disc correctly; Clean or replace disc; Check disc format compatibility
No video from USB/SD	Unsupported file format; USB/SD card not inserted correctly; Corrupt files	Check file format compatibility; Reinsert USB/SD card; Try different files/card
No sound	Volume too low; Mute activated; External speakers not connected	Increase volume; Deactivate mute; Connect external speakers if desired
Image distorted/No image on TV	AV cable loose/incorrectly connected; Incorrect TV input selected	Check AV cable connections; Select correct AV input on TV

8. SPECIFICATIONS

Feature	Detail
Brand	BOIFUN
Model Number	DP0168
Screen Size	15.6 inches (17.5 inches diagonal overall)
Screen Resolution	1280 x 800 HD
Battery Type	Lithium-polymer
Battery Capacity	5000mAh (up to 6 hours playback)
Supported Disc Formats	CD, DVD, DVD±R, CD-R(RW), SVCD-R(RW), DVD±RW, VCD (Excludes Blu-ray)
Supported Media Formats (USB/SD)	VOB, AVI, MPEG, MP3, WMA, JPEG
Max SD Card/USB Capacity	32GB

Feature	Detail
Connectivity	USB Port, SD Card Slot, 3.5mm Audio Out, AV In, AV Out, DC In
Energy Efficiency Class (SDR)	C
Power Consumption (SDR)	6.7 W



ENERG 

 


BOIFUN

BFN-161



7 kWh/1000h

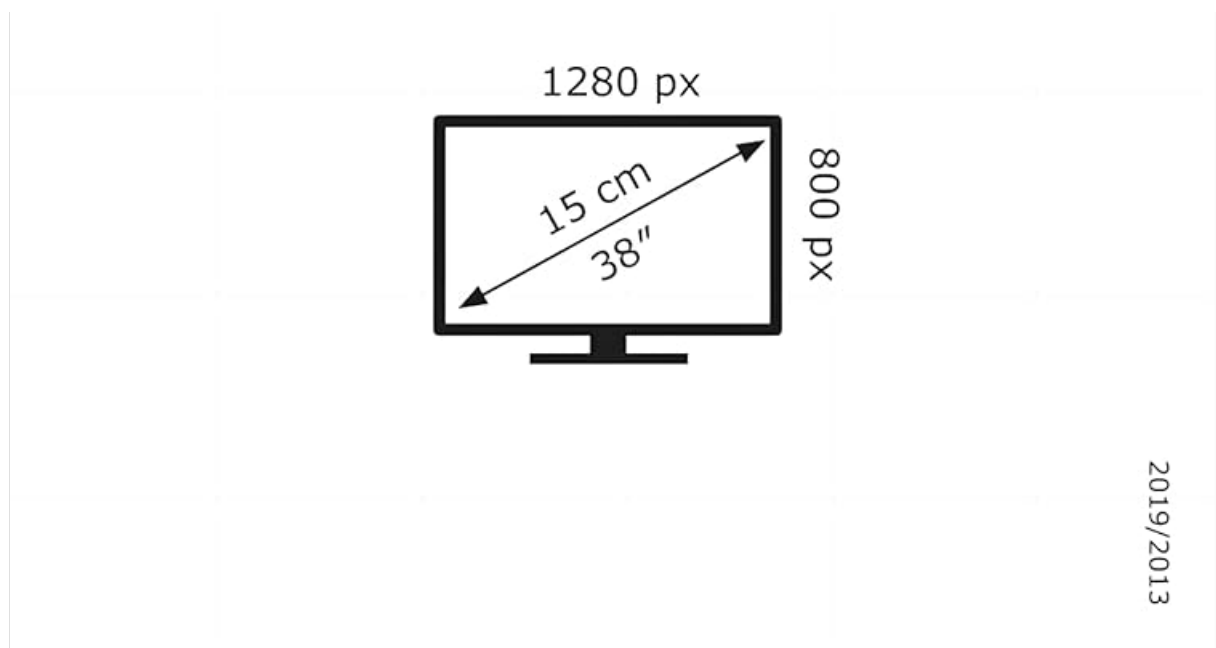

The EU Energy Label provides information on the energy efficiency of the display, indicating a Class C rating and 7 kWh per 1000 hours of operation. For more details, refer to the official EPREL database: [EPREL Product Information](#).

Product Information Sheet

COMMISSION DELEGATED REGULATION (EU) 2019/2013 with regard to energy labelling of electronic displays

	Parameter	Parameter or value and precision			Unit
1.	Supplier's name or trademark.	BOIFUN			
	Supplier's address.	HERMAN INNOVATIONS TECHNOLOGY CO., LIMITED, 6 Rue des Bateliers 92110 Clichy , FR			
2.	Model identifier	BFN-161			
3.	Energy Efficiency Class for Standard Dynamic Range (SDR)	C			
4.	On mode power demand in SDR	6,7			W
5.	Energy Efficiency Class for High Dynamic Range (HDR)	n.a.			
6.	On mode power demand in HDR, if implemented	0,3			W
7.	Off mode, power demand, if applicable	0,5			W
8.	Standby mode power demand, if applicable	2,0			W
9.	Networked standby mode power demand, if applicable	n.a.			W
10.	Electronic display category	Monitor			
11.	Size ratio	16	:	9	
12.	Screen resolution	1 280	x	800	pixels
13.	Screen diagonal	15,0			cm
14.	Screen diagonal	38			inches
15.	Visible screen area	6,9			dm ²
16.	Panel technology used	LED LCD			
17.	Automatic Brightness Control (ABC) available	No			
18.	Voice recognition sensor available	No			
19.	Room presence sensor available	No			
20.	Image refresh frequency rate (default)	50			Hz
21.	Minimum guaranteed availability of software and firmware updates (from the date of end of the placement on the market)	-			Years
22.	Minimum guaranteed availability of spare parts (from the date of end of the placement on the market)	-			Years
23.	Minimum guaranteed product support	-			Years
	Minimum duration of the general guarantee offered by the supplier	-			Years
24.	Power supply type	External			
25.	External power supply (non standardized and included in the product box)				
	<i>i</i>	-			

efficiency, and supplier contact information.

9. WARRANTY AND SUPPORT




The Amazon return window is 30 days from the date of purchase. However, if you encounter any problems with your BOIFUN Portable DVD Player beyond this period, please contact our dedicated customer support center. We are committed to assisting you with any issues.

To receive support, please provide your order number and a detailed description of the problem. The BOIFUN Helping Center aims to respond within 24 hours and will work with you until your issues are resolved.

For customer support, please visit the BOIFUN store on Amazon or refer to the contact information provided with your purchase documentation.

© 2025 BOIFUN. All rights reserved.

Related Documents - DP0168

<div></div>	<p>BOIFUN Portable DVD Player User Manual</p> <p>Comprehensive user manual for the BOIFUN Portable DVD Player, covering safety instructions, setup, operation, playback, troubleshooting, and warranty information.</p>
	<p>Boifun BFN-142 Portable Video Player User Manual</p> <p>Comprehensive user manual for the Boifun BFN-142 portable DVD player, detailing setup, operation, features, specifications, troubleshooting, and warranty information.</p>
<div></div>	<p>BOIFUN BFN-161 Portable DVD Player User Manual</p> <p>Comprehensive user manual for the BOIFUN BFN-161 portable DVD player, covering safety instructions, operation, features, troubleshooting, and warranty information.</p>
<div></div>	<p>BOIFUN Digital Baby Monitor User Manual</p> <p>Comprehensive user manual for the BOIFUN Digital Baby Monitor, covering setup, features, and technical specifications. Learn how to use the parent and baby units, VOX function, music player, talk function, and navigate menu options.</p>



[Boifun Bell J1 Wireless Video Doorbell User Manual](#)

User manual for the Boifun Bell J1 Wireless Video Doorbell, covering features, setup, operation, and specifications. Includes information on battery charging, app download, Wi-Fi setup, live viewing, playback, leaving voice messages, sharing, chime connection, installation, and FAQs.



[Boifun Outdoor Security Camera User Manual](#)

A comprehensive user manual for the Boifun Outdoor Security Camera, covering product introduction, APP installation, camera setup, function descriptions, troubleshooting, and battery management.