

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [AUNA](#) /

> [Auna Arizona Jukebox Mini: User Manual for Model BX-4200](#)

## AUNA BX-4200

# Auna Arizona Jukebox Mini User Manual

Model: BX-4200

## INTRODUCTION

---

This manual provides detailed instructions for the safe and efficient operation of your Auna Arizona Jukebox Mini. Please read this manual thoroughly before using the device and retain it for future reference.

The Auna Arizona Jukebox Mini combines vintage aesthetics with modern technology, offering a versatile audio experience. Enjoy features such as Bluetooth connectivity, CD playback, USB and SD card support, and FM/DAB+ radio, all housed in a classic 1950s-style design with integrated LED lighting.

## SAFETY INSTRUCTIONS

---

- Read all instructions before operating the device.
- Keep the device away from water and moisture.
- Do not expose the device to direct sunlight or extreme temperatures.
- Ensure proper ventilation; do not block any ventilation openings.
- Use only the power adapter supplied with the device.
- Do not attempt to repair the device yourself. Refer all servicing to qualified personnel.
- Clean the device only with a dry cloth.

## PRODUCT OVERVIEW

---

### Front Panel Controls and Features

The Auna Arizona Jukebox Mini features an intuitive layout for easy access to all functions.

# MEILLEURE QUALITÉ DE RÉCEPTION

Profitez de toutes les chaînes  
locales grâce à la radio FM



**Image:** The Auna Arizona Jukebox Mini, highlighting its aesthetic appeal and integrated LED lighting in a home environment.

- **Power Button:** Turns the unit on or off.
- **Volume Control:** Adjusts the audio output level.
- **Source Selector:** Switches between FM/DAB+ Radio, CD, Bluetooth, USB, and SD modes.
- **CD Player:** Front-loading slot for audio and MP3 CDs.
- **USB Port:** For connecting USB flash drives.
- **SD Card Slot:** For inserting SD/MMC memory cards.
- **LED Lighting Switch:** Controls the LED lighting system (static or color-changing).
- **Display Screen:** Shows current mode, track information, or radio frequency.

## SETUP

1. **Unpacking:** Carefully remove the jukebox from its packaging. Ensure all components are present: the main unit and power cable.

2. **Placement:** Place the jukebox on a stable, flat surface. Ensure adequate ventilation around the unit. The compact size makes it suitable for tables or dressers. Four rubber feet are provided to protect surfaces.
3. **Power Connection:** Connect the supplied power cable to the AC input on the back of the jukebox and then plug it into a standard 100-240V, 50/60Hz wall outlet.
4. **Antenna:** Extend the FM/DAB+ antenna for optimal radio reception.

## OPERATING INSTRUCTIONS

---

### 1. Power On/Off

Press the **Power** button on the front panel to turn the jukebox on or off.

### 2. Source Selection

Use the **Source Selector** knob or button to cycle through available modes: FM/DAB+ Radio, CD, Bluetooth, USB, and SD.

### 3. Bluetooth Operation




## LECTURE SANS FIL

Bluetooth pour le streaming audio depuis un smartphone, une tablette ou un ordinateur portable

**Image:** The Auna Arizona Jukebox Mini demonstrating its wireless Bluetooth connectivity with a smartphone.

1. Select **Bluetooth** mode using the Source Selector. The display will show "BT" or "PAIRING".
2. On your smartphone, tablet, or other Bluetooth-enabled device, enable Bluetooth and search for available devices.
3. Select "Auna Arizona" (or similar name) from the list. Once paired, the jukebox will indicate a successful connection.
4. Start playing music on your connected device. Audio will stream wirelessly to the jukebox.

### 4. CD Playback

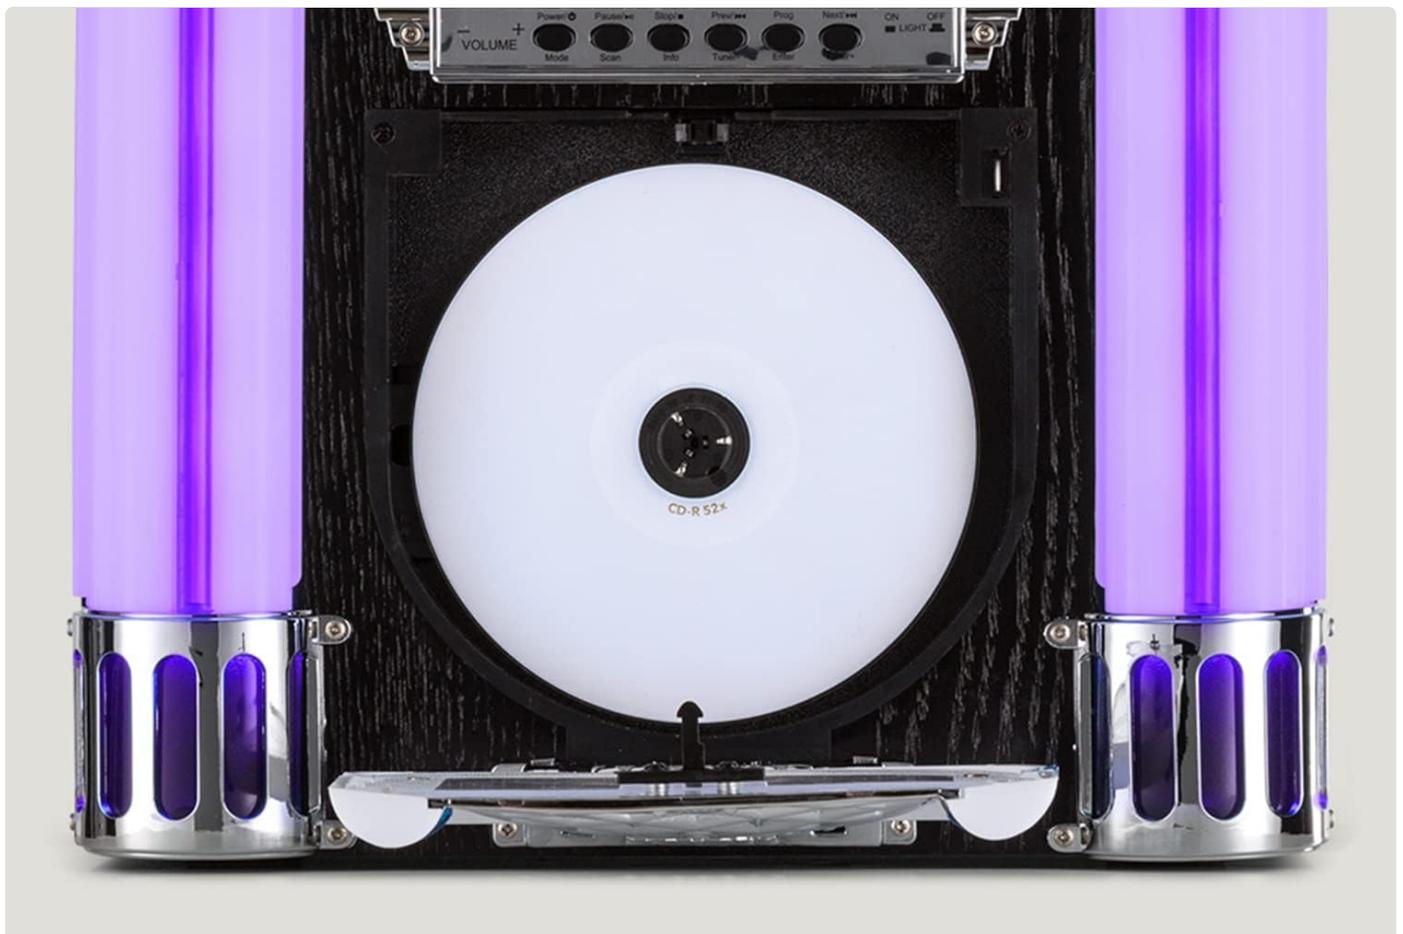


## ÇA TOURNE ROND

Lecteur CD frontal, vertical  
et compatible MP3

**Image:** A detailed view of the front-loading, vertical CD player on the Auna Arizona Jukebox Mini.

1. Select **CD** mode using the Source Selector.
2. Gently insert an audio CD or MP3 CD into the front-loading CD slot. The disc will be automatically drawn in.
3. Playback should begin automatically. Use the control buttons (Play/Pause, Skip, Stop) to manage playback.

### 5. USB/SD Card Playback

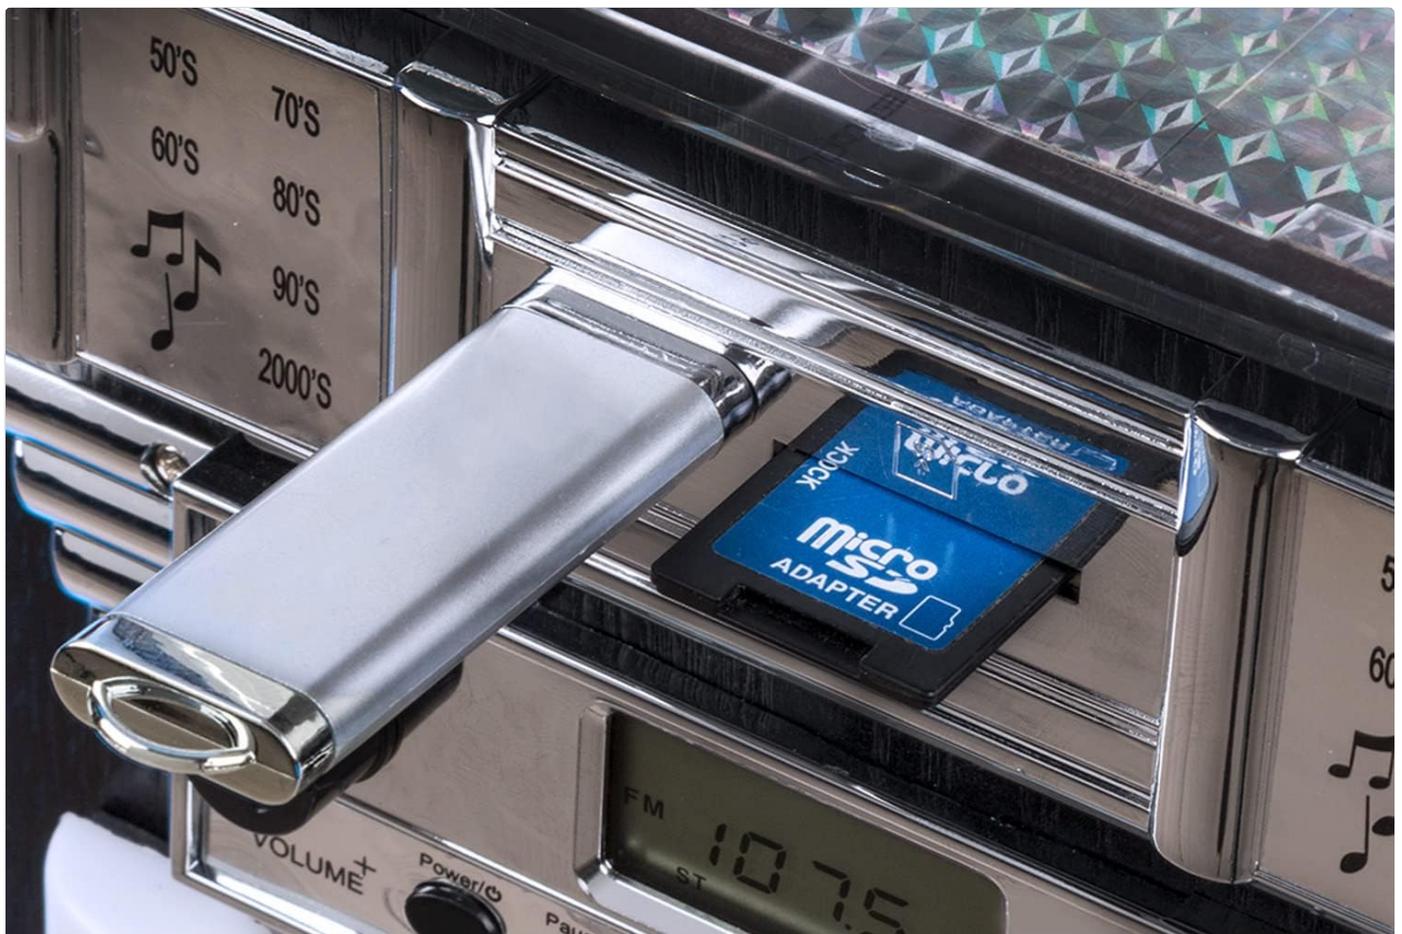

## ENTIÈREMENT CONNECTABLE

Port USB et lecteur SD pour la lecture de musique depuis une clé USB, un lecteur MP3 ou une carte mémoire SD

**Image:** A close-up showing the USB port and SD card slot, demonstrating the versatile connectivity options of the jukebox.

1. Insert a USB flash drive into the **USB Port** or an SD/MMC card into the **SD Card Slot**.
2. Select **USB** or **SD** mode using the Source Selector.
3. The jukebox will automatically detect and begin playing compatible MP3 files. Use the control buttons to navigate tracks.

### 6. FM/DAB+ Radio Operation

1. Select **FM** or **DAB+** mode using the Source Selector.
2. Extend the antenna fully for best reception.
3. Use the **Frequency Adjustment** knob or buttons to manually tune to your desired station.
4. For FM, the frequency range is 87.5 - 108 MHz. For DAB+, the frequency range is 174.928 - 239.200 MHz.

### 7. LED Lighting System

# SYSTÈME D'ÉCLAIRAGE À LED SRC

Éclairage LED authentique  
avec 7 variations de lumière



**Image:** The SRC LED lighting system of the Auna Arizona Jukebox Mini, illustrating its 7 color variations.

The jukebox features an SRC LED lighting system with 7 variations. Use the **LED Lighting Switch** to turn the lights on/off or to cycle through static colors and color-changing modes.

## MAINTENANCE

- **Cleaning:** Wipe the exterior of the jukebox with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **CD Player:** Periodically clean the CD lens with a specialized CD lens cleaner disc.
- **Storage:** If storing the unit for an extended period, unplug it from the power outlet and store it in a cool, dry place.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
No power	Power cable not connected; outlet not active.	Ensure power cable is securely plugged in. Check the wall outlet with another device.
No sound	Volume too low; incorrect source selected; device not paired (Bluetooth).	Increase volume. Select the correct input source. Re-pair Bluetooth device.
CD not playing	CD inserted incorrectly; CD is dirty or scratched; unsupported CD format.	Re-insert CD correctly. Clean or replace CD. Ensure it's an audio CD or MP3 CD.
Poor radio reception	Antenna not extended; weak signal.	Fully extend and adjust the antenna. Try repositioning the unit for better signal.
Bluetooth pairing issues	Jukebox not in pairing mode; device too far; interference.	Ensure jukebox is in Bluetooth pairing mode. Move device closer. Reduce interference from other electronics.

## SPECIFICATIONS

<b>Brand</b>	AUNA
<b>Model Number</b>	BX-4200
<b>Power Output</b>	2 x 2 Watts RMS
<b>Power Supply</b>	100-240V, 50/60Hz
<b>Connectivity</b>	Bluetooth, USB, SD/MMC Card Reader
<b>CD Compatibility</b>	CD, CD-MP3, CD-R, CD-RW
<b>Radio Frequencies (FM)</b>	87.5 - 108 MHz
<b>Radio Frequencies (DAB+)</b>	174.928 - 239.200 MkHz
<b>Speaker Type</b>	Stereo
<b>Equalizer</b>	2-band
<b>Dimensions (WxHxD)</b>	Approx. 26.5 x 39 x 16 cm
<b>Weight</b>	Approx. 2.3 kg
<b>Cable Length (Power)</b>	Approx. 180 cm
<b>LED Lighting</b>	SRC LED System with 7 variations

## WARRANTY AND SUPPORT

Auna products are designed for quality and reliability. For warranty information, please refer to the documentation included with your purchase or visit the official Auna website. For technical support or service inquiries, please contact Auna customer service.

*Note: Availability of spare parts and software updates is not specified in the product information.*

