

## Stokke 572105

# Stokke Xplory X Signature Stroller Instruction Manual

Model: 572105

## 1. INTRODUCTION

Welcome to the Stokke Xplory X Signature Stroller instruction manual. This manual provides essential information for the safe and proper assembly, operation, and maintenance of your new stroller. Please read this manual thoroughly before using the product and retain it for future reference.

The Stokke Xplory X is designed to bring your baby closer, promoting connection and interaction. It features adjustable seating, a comfortable ride, and a focus on safety and quality.

## 2. SAFETY INFORMATION

**WARNING:** Failure to follow these warnings and instructions could result in serious injury or death.

- Never leave your child unattended in the stroller.
- Always use the restraint system. Ensure your child is securely fastened.
- Do not carry extra children or bags on the stroller. The stroller is designed for one child only.
- Ensure all locking devices are engaged before use.
- Do not use accessories or spare parts other than those approved by Stokke.
- Do not overload the storage basket. Refer to the specifications for maximum weight.
- Avoid placing hot liquids or heavy objects in the cup holder.
- Be aware of the risk of open fires and other sources of strong heat, such as electric bar fires, gas fires, etc., in the near vicinity of the stroller.
- Always engage the brake when the stroller is stationary.
- Do not use the stroller on stairs or escalators.
- Regularly inspect the stroller for loose parts, damaged components, or signs of wear.

This product is suitable for children from birth up to 45 pounds (20 kg).

## 3. WHAT'S INCLUDED

The Stokke Xplory X Signature Stroller package includes the following components:



Image: Overview of included components for the Stokke Xplory X Signature Stroller.

1. Stokke Xplory X Black & Gold Chassis with Leatherette adjustable handle
2. Adjustable Footrest
3. Stroller Seat, Canopy, and 5-point harness
4. Protective Handle Bar
5. Padded Inserts
6. Shopping Bag
7. Baby Seat Insert
8. Additional components: Carrycot attachment for newborns, Infant car seat attachment for travel systems, Sibling board attachment for older children, Cup Holder, Snack Tray (may be sold separately or included depending on package).

## 4. SETUP AND ASSEMBLY

---

Follow these steps to assemble your Stokke Xplory X Signature Stroller:

1. **Unpack Components:** Carefully remove all parts from the packaging. Verify that all components listed in Section 3 are present.
2. **Attach Wheels:** Securely attach the four wheels to the chassis. Ensure they click into place.
3. **Unfold Chassis:** Release the folding mechanism and unfold the chassis until it locks into the open position. Refer to the folding mechanism image for guidance.
4. **Install Stroller Seat:** Place the stroller seat onto the chassis mounting points. Ensure it is firmly attached and facing the desired direction (parent-facing or forward-facing).
5. **Attach Canopy:** Secure the canopy to the stroller seat frame.

6. **Insert Padded Inserts and Baby Seat Insert:** Place the padded inserts and baby seat insert into the stroller seat for comfort and support.
7. **Attach Protective Handle Bar:** Secure the protective handle bar to the front of the stroller seat.
8. **Attach Shopping Bag:** Hook the shopping bag onto the designated attachment points on the chassis.
9. **Final Check:** Before first use, ensure all parts are correctly assembled and securely fastened. Test the brake system.



Image: The Stokke Xplory X chassis with wheels attached, ready for seat installation.

## 5. OPERATING INSTRUCTIONS

---

This section details how to operate your Stokke Xplory X Signature Stroller.

### 5.1 Adjusting the Handlebar

The handlebar is both height and angle adjustable for ergonomic comfort for parents of varying heights. Locate the adjustment buttons on the handlebar and press them to adjust the height and angle. Release the buttons to lock the handlebar in place.



# STOKKE XPLORY X

AWARD-WINNING DESIGN THAT BRINGS  
YOU AND YOUR BABY CLOSER

Image: Diagram highlighting the adjustable handlebar and other features of the Stokke Xplory X.

### 5.2 Adjusting the Seat and Footrest

The stroller seat offers multiple recline positions and can be adjusted in height and angle. The footrest is also adjustable to provide optimal support for your child as they grow.

- **Seat Recline:** Use the lever or buttons on the back of the seat to adjust the recline angle.
- **Seat Height/Angle:** The entire seat unit can be adjusted up or down on the chassis, and its angle can be tilted.

- **Footrest:** Press the buttons on the side of the footrest to adjust its position.

## Endless versatility to bring you and your baby closer

- Height and angle adjustable seat
- Height and angle adjustable handle
- 3 position adjustable footrest
- Foldable design



**Length:** 39.56 in (100.5 cm) / **Height:** 51.57 in (131 cm) / **Width:** 22.04 in (56 cm)

Image: The Stokke Xplory X stroller demonstrating its adjustable seat and footrest positions.

### 5.3 Using the 5-Point Harness

Always secure your child with the 5-point harness. Adjust the shoulder straps to the appropriate height for your child's shoulders. Fasten the buckle securely. Ensure the harness is snug but not too tight.



Image: A close-up view of the 5-point padded harness, emphasizing safety.

## 5.4 Engaging the Brake System

The Stokke Xplory X features a one-push brake system. To engage the brake, press down firmly on the brake pedal located near the rear wheels. To release, lift the pedal. Always ensure the brake is fully engaged when the stroller is stationary.



Image: A detailed view of the responsive brake system on the rear wheels of the stroller.

## 5.5 Folding the Stroller

The stroller chassis can be folded in one step for compact storage and transport. Consult the specific folding mechanism instructions provided with your product for detailed steps. Ensure the seat is removed or in the correct position before folding.

## Endless versatility to bring you and your baby closer

- Height and angle adjustable seat
- Height and angle adjustable handle
- 3 position adjustable footrest
- Foldable design



**Length:** 39.56 in (100.5 cm) / **Height:** 51.57 in (131 cm) / **Width:** 22.04 in (56 cm)

Image: The Stokke Xplory X stroller shown in both its upright and folded configurations, illustrating its compact design.

## 6. MAINTENANCE AND CARE

Proper maintenance ensures the longevity and safe operation of your Stokke Xplory X Signature Stroller.

- **Cleaning Fabric Parts:** The fabric parts can be removed and are machine washable according to the care label instructions. Use mild detergent and cold water. Do not bleach or tumble dry.
- **Cleaning Frame and Plastic Parts:** Wipe the frame and plastic parts with a damp cloth and mild soap. Dry thoroughly. Do not use abrasive cleaners.
- **Wheel Maintenance:** Regularly check the wheels for debris and clean them. Ensure they swivel freely.
- **Lubrication:** Periodically lubricate moving parts (e.g., folding mechanisms, wheel axles) with a silicone-based lubricant.
- **Storage:** Store the stroller in a dry, well-ventilated area, away from direct sunlight and extreme temperatures.
- **Inspection:** Regularly inspect all fasteners, rivets, and joints to ensure they are secure. Check for any signs of wear or damage to the harness, fabric, or frame. Replace worn or damaged parts immediately.

## 7. TROUBLESHOOTING

---

This section addresses common issues you might encounter with your stroller.

Problem	Possible Cause	Solution
Stroller does not fold smoothly.	Folding mechanism obstructed or stiff.	Ensure no items are blocking the mechanism. Lubricate moving parts if necessary. Refer to folding instructions.
Wheels squeak or do not swivel freely.	Dirt/debris in wheel axles or lack of lubrication.	Clean wheels and axles. Apply silicone-based lubricant.
Brake not engaging or releasing properly.	Debris in brake mechanism or adjustment needed.	Clear any obstructions. If the issue persists, contact customer support.
Harness is difficult to buckle/unbuckle.	Buckle mechanism dirty or damaged.	Clean the buckle. If damaged, contact customer support for replacement.

## 8. SPECIFICATIONS

---

Detailed specifications for the Stokke Xplory X Signature Stroller:

- **Model Number:** 572105
- **Item Weight:** 17.49 Kilograms (38.56 lbs)
- **Frame Weight:** 15 Pounds (6.8 kg)
- **Stroller Seat Weight:** 2 Kilograms (4.4 lbs)
- **Item Dimensions (L x W x H):** 39.56"L x 22.04"W x 51.57"H (100.5 cm L x 56 cm W x 131 cm H)
- **Folded Size:** 33.5" x 17" x 8" (85 cm x 43 cm x 20 cm)
- **Maximum Weight Recommendation:** 45 Pounds (20 kg)
- **Age Range Description:** Baby (from birth with appropriate attachments)
- **Seating Capacity:** 1
- **Number of Wheels:** 4
- **Harness Type:** 5 Point
- **Stroller Type:** Standard Stroller
- **Car Seat Compatible:** Yes (with infant car seat attachment)
- **Material Type:** Plastic (Frame), Fabric (Canopy), Rubber (Tires)
- **Sun Protection:** UPF 50+ (Canopy fabric)
- **Water Repellent:** Yes (PFC-free fabric)
- **Brake System:** One-push
- **Safety Standard:** Tested and trusted for safety & quality

## 9. WARRANTY INFORMATION

---

Stokke products are manufactured to the highest quality standards. For detailed warranty information, including terms, conditions, and registration, please refer to the warranty card included with your product or visit the official Stokke website. Retain your proof of purchase for any warranty claims.

## 10. CUSTOMER SUPPORT

---

If you have any questions, require assistance, or need to order spare parts, please contact Stokke customer support:

- **Website:** [www.stokke.com](http://www.stokke.com)
- **Contact Information:** Refer to the Stokke website for local contact numbers and email support.

## 11. PRODUCT VIDEO

---

Watch the official Stokke Xplory X video for a visual overview of its features and design.

Your browser does not support the video tag.

Video: Stokke Xplory X - 20th Anniversary. This video showcases the stroller's design and features in various settings.

