

[Manuals.plus](#) /

› [Pyle](#) /

› PyleUsa Vintage Bluetooth Speaker User Manual

Pyle PG660A

PyleUsa Vintage Bluetooth Speaker User Manual

Model: PG660A | Brand: Pyle

INTRODUCTION

Thank you for purchasing the PyleUsa Vintage Bluetooth Speaker. This portable wireless audio system combines retro aesthetics with modern functionality, offering powerful sound, versatile connectivity, and a long-lasting rechargeable battery. This manual provides detailed instructions for setup, operation, and maintenance to ensure optimal performance and longevity of your speaker.



Image: Front view of the PyleUsa Vintage Bluetooth Speaker, showcasing its retro design and speaker grille.

Safety Information

- Do not expose the speaker to extreme temperatures, humidity, or direct sunlight.
- Avoid dropping or subjecting the speaker to strong impacts.
- Do not disassemble or attempt to repair the speaker yourself. Refer all servicing to qualified personnel.
- Keep the speaker away from water and other liquids.
- Use only the provided power adapter for charging.
- Ensure proper ventilation when operating the speaker.

Package Contents

Please check the box for the following items:

- Speaker System
- Remote Control
- Power Adapter

PACKAGE CONTENTS

SPEAKER



REMOTE CONTROL



(2) X 'AA' BATTERIES



POWER ADAPTER

Image: The speaker system, remote control, and power adapter, as included in the package.

PRODUCT OVERVIEW: CONTROLS AND INPUTS

Familiarize yourself with the various controls and input ports on your PyleUsa Vintage Bluetooth Speaker.

ALL CONTROL LABELS

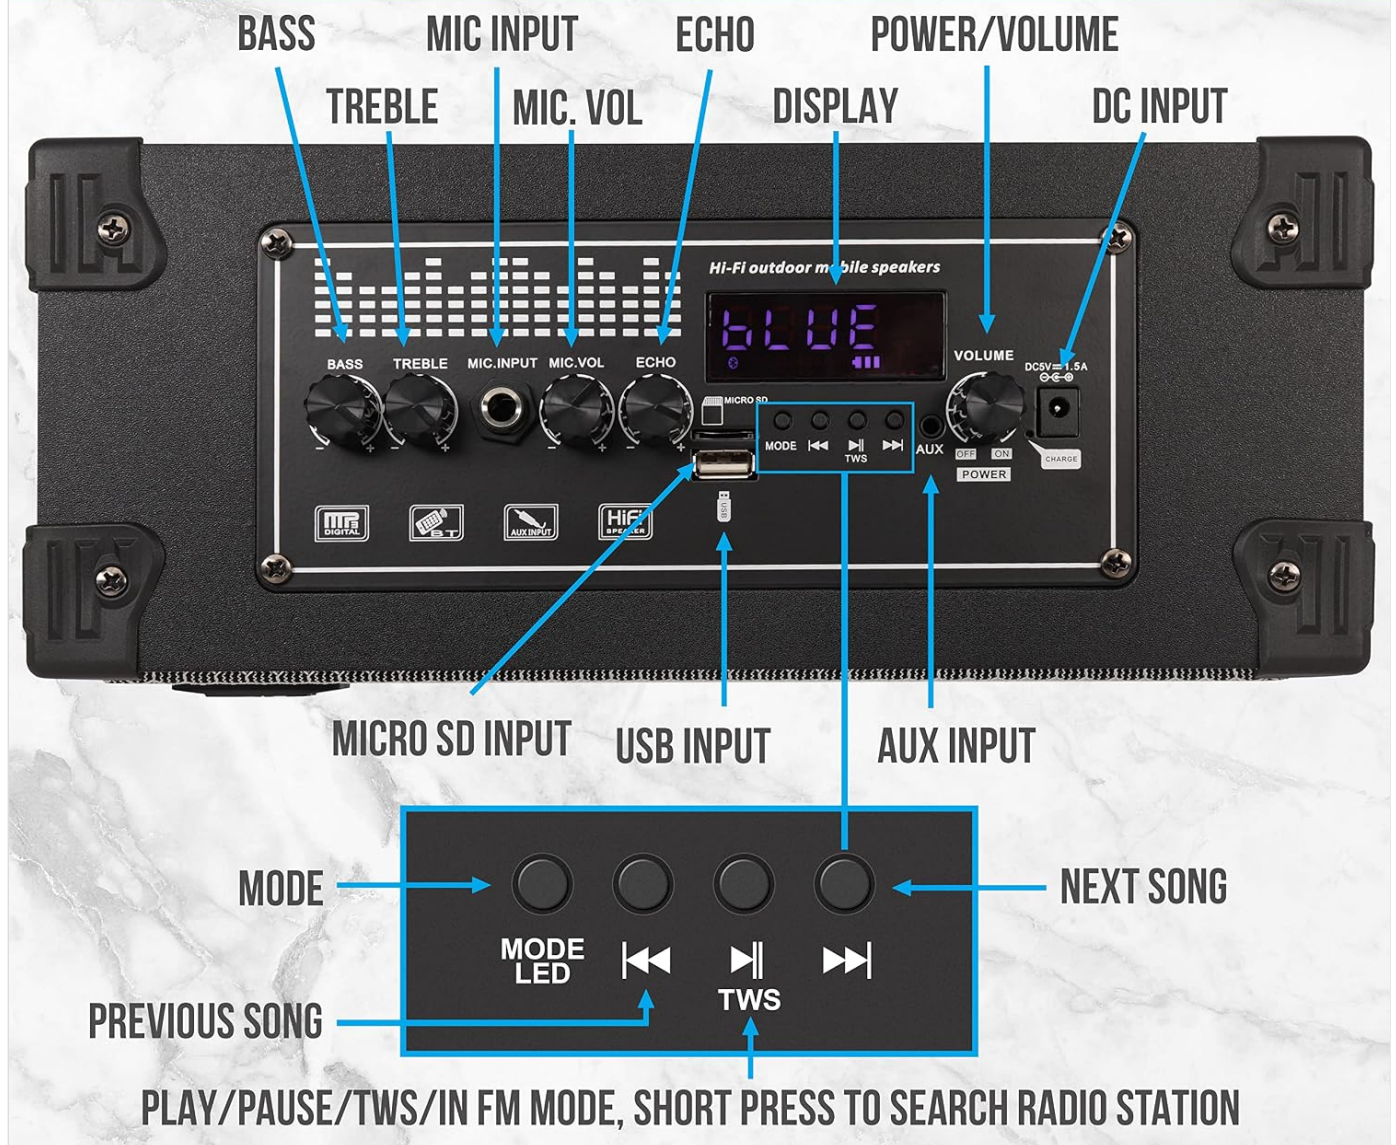


Image: Detailed view of the speaker's top panel, showing all control labels and input ports.

Top Panel Controls:

- **BASS Knob:** Adjusts the low-frequency output.
- **TREBLE Knob:** Adjusts the high-frequency output.
- **MIC INPUT (6.5mm):** Connects a microphone.
- **MIC. VOL Knob:** Adjusts the microphone volume.
- **ECHO Knob:** Adjusts the echo effect for the microphone.
- **POWER/VOLUME Knob:** Turns the speaker on/off and adjusts the master volume.
- **DC INPUT:** Power adapter connection port.
- **DISPLAY:** Digital LED display for mode and status.
- **MODE Button:** Switches between Bluetooth, FM Radio, USB, Micro SD, and AUX modes.
- **LED Button:** Controls LED lighting (if applicable).

- **PREVIOUS SONG Button:** Skips to the previous track.
- **PLAY/PAUSE/TWS Button:** Plays/pauses audio, initiates TWS pairing, or searches for FM radio stations (short press).
- **NEXT SONG Button:** Skips to the next track.
- **MICRO SD INPUT:** Slot for Micro SD card.
- **USB INPUT:** Port for USB flash drive.
- **AUX INPUT (3.5mm):** Connects external audio devices via a 3.5mm cable.

MANY INPUTS!



Image: Visual representation of the speaker's multiple input options, including Bluetooth, USB, Micro SD, AUX, and Microphone/Guitar input.

SETUP

1. Charging the Battery

Before first use, fully charge the speaker's built-in rechargeable battery. The battery life is approximately 3.5 hours, with a

charging time of about 6 hours.

1. Connect the provided Power Adapter to the **DC INPUT** port on the speaker.
2. Plug the Power Adapter into a standard wall outlet (AC110~240V).
3. The Battery Level LED Indicator Lights will show the charging status. Once fully charged, the indicator lights will reflect a full charge.



Image: The speaker connected to its power adapter, illustrating the charging process.

2. Powering On/Off

- To power on, rotate the **POWER/VOLUME** knob clockwise until the display lights up.
- To power off, rotate the **POWER/VOLUME** knob counter-clockwise until the display turns off.

OPERATING INSTRUCTIONS

1. Bluetooth Pairing

Connect your smartphone, tablet, or other Bluetooth-enabled device to the speaker for wireless audio streaming.

1. Power on the speaker. The display will show "BLUE" and the speaker will automatically enter Bluetooth pairing mode.
2. On your device, enable Bluetooth and search for available devices.
3. Select "PYLEUSA" from the list of devices.
4. Once connected, the speaker will emit a confirmation tone, and the display will indicate a successful connection.
5. You can now stream music wirelessly from your device. The wireless range is up to 32 feet.



Image: A smartphone displaying a music app, wirelessly connected to the PyleUsa speaker via Bluetooth.

2. True Wireless Stereo (TWS) Multi-Speaker Link

Pair two PyleUsa Vintage Bluetooth Speakers together for a true stereo sound experience.

1. Ensure both speakers are powered on and in Bluetooth mode, but not connected to any device.

2. On one of the speakers (this will be the primary speaker), short press the **PLAY/PAUSE/TWS** button. The speaker will enter TWS pairing mode.
3. The primary speaker will automatically search for and connect to the second speaker.
4. Once connected, both speakers will emit a confirmation tone. The primary speaker will then be ready for Bluetooth pairing with your device (as per step 1 above).
5. Audio will now play in stereo across both linked speakers.



Image: Two PyleUsa speakers positioned to illustrate the True Wireless Stereo (TWS) linking capability.

3. FM Radio Operation

Listen to your favorite FM radio stations using the built-in tuner.

1. Press the **MODE** button repeatedly until "FM" appears on the display.
2. Short press the **PLAY/PAUSE/TWS** button to automatically scan and save available FM stations.
3. Use the **PREVIOUS SONG** and **NEXT SONG** buttons to navigate between saved stations.

4. USB/Micro SD Playback

Play audio files directly from a USB flash drive or Micro SD card (supports MP3/WMA/FLAC formats, up to 64GB).

1. Insert a USB flash drive into the **USB INPUT** or a Micro SD card into the **MICRO SD INPUT**.
2. The speaker will automatically switch to USB or SD mode and begin playing audio files. If not, press the **MODE** button to select the correct input.
3. Use the **PREVIOUS SONG**, **PLAY/PAUSE/TWS**, and **NEXT SONG** buttons to control playback.

5. AUX Input

Connect external audio devices that do not have Bluetooth capability.

1. Connect one end of a 3.5mm audio cable (not included) to the **AUX INPUT** port on the speaker.
2. Connect the other end of the cable to the audio output jack of your external device (e.g., MP3 player, computer).
3. Press the **MODE** button repeatedly until "AUX" appears on the display.
4. Control playback and volume from your external device.

6. Microphone Input / Karaoke Function

Use the speaker as a karaoke machine or for public address.

1. Connect a 6.5mm microphone (not included) to the **MIC INPUT** port.
2. Adjust the microphone volume using the **MIC. VOL** knob.
3. Adjust the echo effect for the microphone using the **ECHO** knob.
4. The speaker also features a microphone priority function.

PERFECT FOR KARAOKE

PLUG IN 1/4" MIC AND ADJUST MIC AND ECHO SEPARATELY FROM MUSIC



Image: A child using a microphone connected to the speaker, demonstrating its karaoke functionality.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the speaker's exterior. Do not use abrasive cleaners or solvents.
- **Storage:** Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures when not in use for extended periods.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Recharge the speaker regularly, even if not in use.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
No power	Battery is low or dead; Power adapter not connected properly.	Charge the speaker fully. Ensure the power adapter is securely connected to both the speaker and the power outlet.
No sound	Volume is too low; Incorrect input mode selected; Device not connected properly (Bluetooth/AUX).	Increase the speaker's volume. Press the MODE button to select the correct input. Re-pair Bluetooth device or check AUX cable connection.
Bluetooth pairing fails	Speaker is already connected to another device; Device Bluetooth is off; Speaker too far from device.	Disconnect from other devices. Ensure Bluetooth is enabled on your device. Move device closer to the speaker (within 32 ft).
FM radio reception is poor	Weak signal in current location.	Try repositioning the speaker to improve signal reception.
USB/SD card not playing	Incorrect file format; Card/drive not inserted correctly; Card/drive corrupted or unsupported size.	Ensure files are MP3/WMA/FLAC. Reinsert the card/drive. Use a different card/drive (max 64GB).

SPECIFICATIONS

Max Power Output:	120 Watt Max
Sound System:	5.25-inch Subwoofer + 2-inch Tweeter
Bluetooth Version:	5.0
Bluetooth Network Name:	'PYLEUSA'
Wireless Range:	Up to 32 ft.
Digital Audio File Support:	MP3/WMA/FLAC
Maximum USB Flash Support:	64GB
Battery Life:	Up to 3.5 Hours
Charge Time:	Approx. 6 Hours
Rechargeable Battery:	3.7V, 3600mAh – 13.32 Wh
Power Supply:	AC110~240V, Auto Switchable (5V/1.5A Power Adapter)
Construction Material:	Wooden case + PVC + woven cloth
Product Dimensions (L x W x H):	12.2" x 4.9" x 9.3" (Inch)
Item Weight:	7.43 pounds
Model Number:	PG660A
UPC:	842893147505

PRODUCT DIMENSIONS



Image: Diagram illustrating the product dimensions and the 5.25-inch subwoofer and 2-inch tweeter components.

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the official Pyle website or contact their customer service. Keep your purchase receipt for warranty claims.

Official Pyle Website: www.pyleusa.com

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B09QH8D24X>

More documents and user manuals: <https://manuals.plus/>