

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [CURECURE](#) /

> [CURECURE Electric Heated Mattress Pad \(Model HMP-140160\) Instruction Manual](#)

## CURECURE HMP-140160

# CURECURE Electric Heated Mattress Pad (Model HMP-140160) Instruction Manual

Model: HMP-140160 | Brand: CURECURE

## 1. INTRODUCTION AND PRODUCT OVERVIEW

---

The CURECURE Electric Heated Mattress Pad, model HMP-140160, is designed to provide warmth and comfort. It measures 140 x 160 cm and is made from soft cotton material with blue-edged borders. This mattress pad features a dual-hand controller, allowing independent temperature adjustment for each side. It includes 4 temperature levels, a 10-hour automatic shut-off function, and integrated power failure protection for user safety.

## Warm and Good Sleep



Image 1.1: The CURECURE Electric Heated Mattress Pad on a bed, illustrating its coverage and design.



Image 1.2: A close-up view of the mattress pad's soft fleece material, highlighting its texture.

## Moisture and Dehumidification

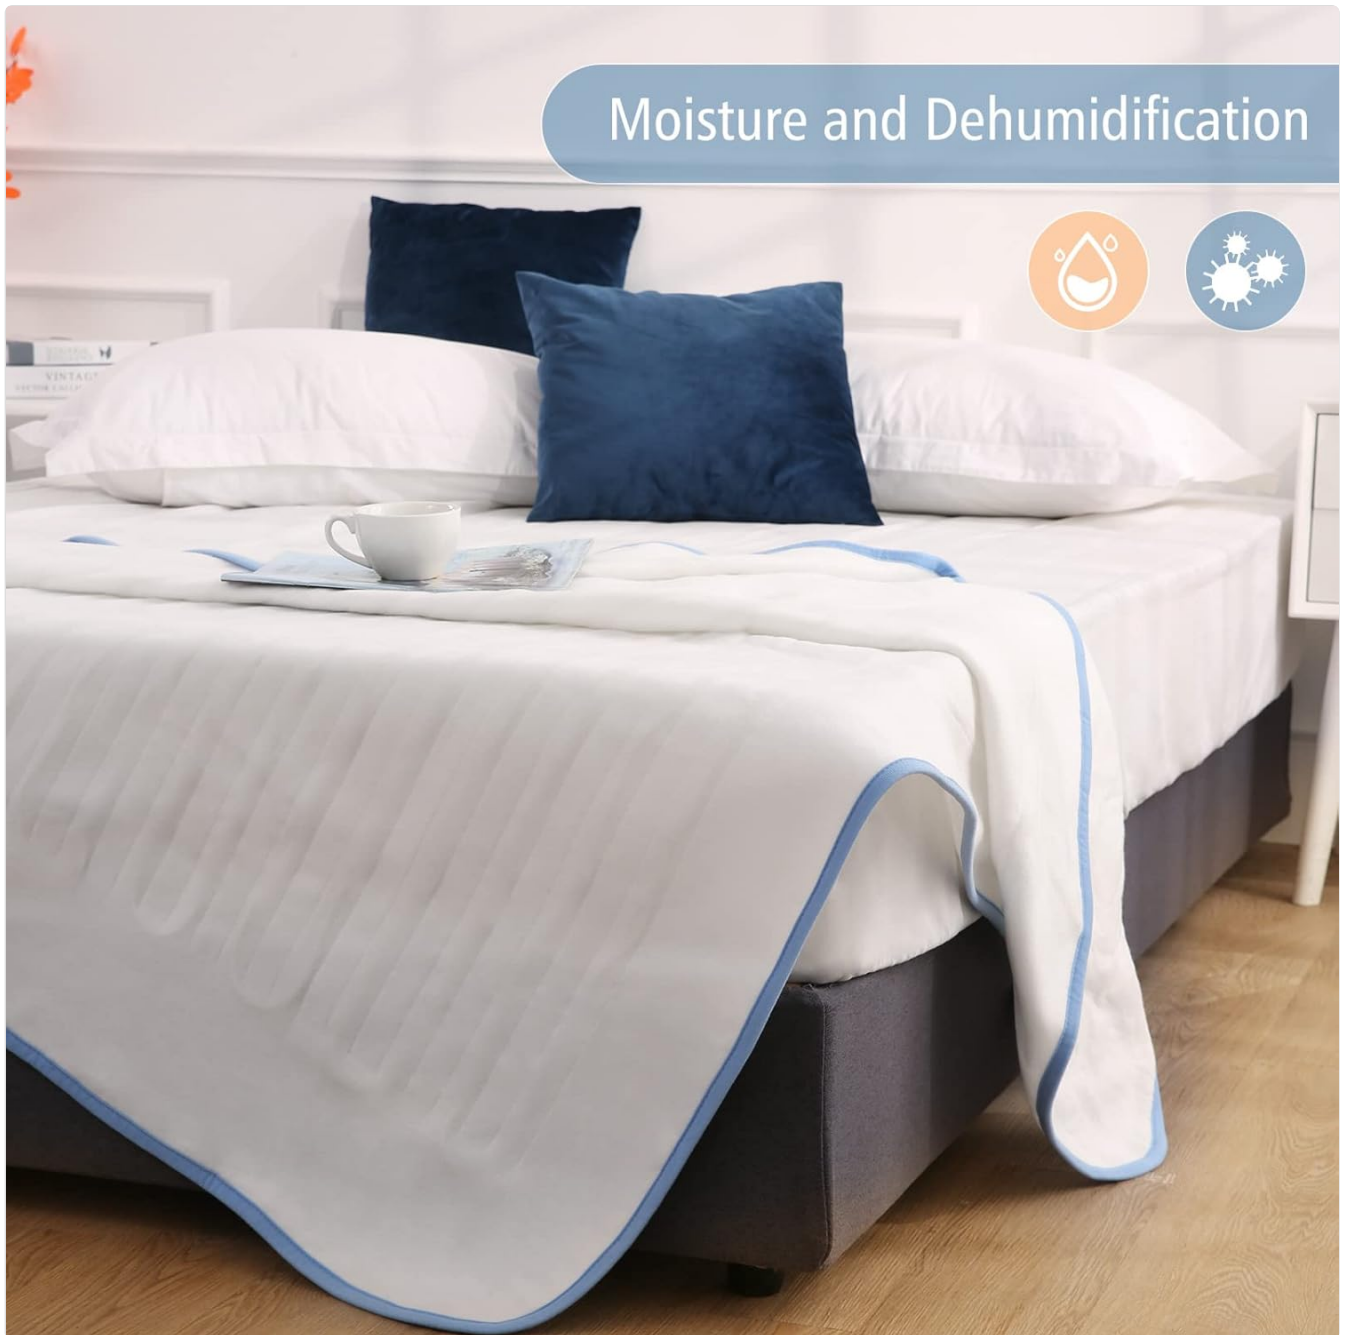


Image 1.3: The mattress pad on a bed, indicating its properties related to moisture and dehumidification.

## 2. IMPORTANT SAFETY INFORMATION

Please read and understand all safety instructions before using this product. Failure to follow these instructions may result in electric shock, fire, or injury.

- Always ensure the mattress pad is laid flat on the mattress without any folds, creases, or bunching.
- Do not use the mattress pad if it is wet or damaged.
- Keep the controllers and power cords away from water or other liquids.
- Unplug the mattress pad from the power outlet when not in use or before cleaning.
- Do not use with infants, incapacitated persons, or individuals who are insensitive to heat.
- Avoid placing heavy objects on the mattress pad while it is in operation.
- Do not use pins or other metallic objects to fasten the mattress pad.
- Regularly inspect the mattress pad and power cord for any signs of wear or damage.

## 3. PACKAGE CONTENTS

---

Verify that all items are present in the package:

- 1 x CURECURE Electric Heated Mattress Pad (140 x 160 cm)
- 2 x Dual-hand Controllers
- 2 x Fixing Ties (for securing the pad to the mattress)

## 4. SETUP AND INSTALLATION

---

Follow these steps to properly install your heated mattress pad:

1. **Prepare the Mattress:** Ensure your mattress is clean and dry.
2. **Position the Pad:** Lay the heated mattress pad flat on top of your mattress. Spread it out evenly, ensuring there are no folds, wrinkles, or bunched areas. The pad should cover the desired sleeping area.
3. **Secure with Ties:** Locate the two thin fixing ties provided. Attach these ties to the oblique corners of the mattress pad. Securely tie the pad to your mattress using these ties to prevent it from shifting or moving during use. Ensure the ties are firm but not overly tight to avoid damaging the pad.
4. **Connect Controllers:** Connect the controller cables to the corresponding ports on the mattress pad. Ensure the connections are secure.
5. **Place Bedding:** Once the pad is securely in place, you can cover it with your fitted sheet and other bedding as usual.



Image 4.1: Illustration of securing the mattress pad to the mattress using the provided ties.

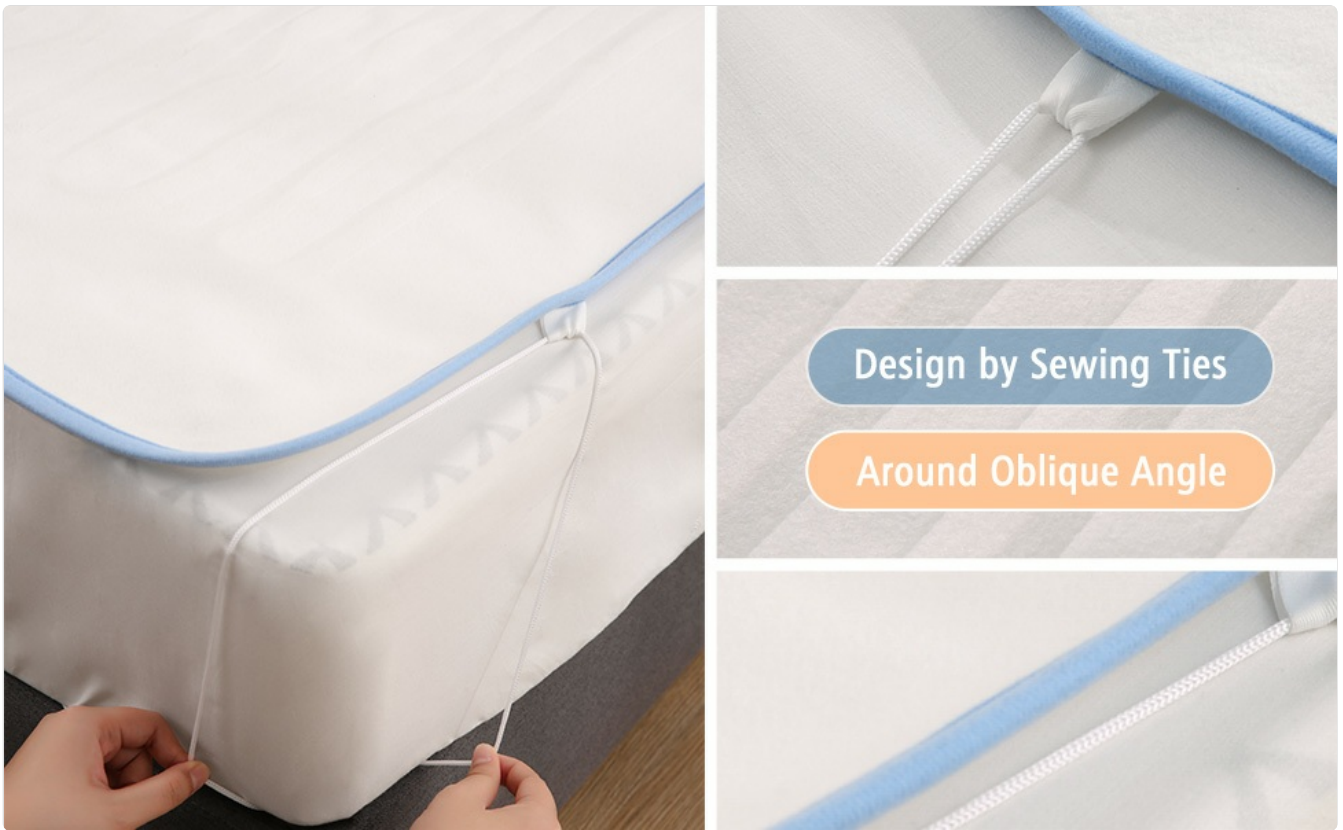


Image 4.2: The mattress pad installed on a bed, showing the dual controllers.

## 5. OPERATING INSTRUCTIONS

---

Your CURECURE Electric Heated Mattress Pad features dual controllers for personalized comfort.

1. **Power Connection:** After installation, plug the power cord(s) from the controller(s) into a standard electrical outlet.
2. **Turn On:** Press the power button on each controller to turn on the mattress pad. The indicator lights will illuminate.
3. **Select Temperature:** Use the temperature control buttons on each controller to select your desired heat level. There are 4 available temperature settings. Each side of the mattress pad can be adjusted independently.
4. **Automatic Shut-Off:** The mattress pad is equipped with a 10-hour automatic shut-off function for safety and energy saving. After 10 hours of continuous operation, the pad will automatically turn off.
5. **Turn Off:** To turn off the mattress pad manually, press the power button on the controller(s). Unplug the unit from the wall outlet when not in use.



Image 5.1: The dual-hand controllers with indicators for 4 heating levels and a 10-hour automatic shutdown feature.



Image 5.2: A visual representation of the heating elements within the mattress pad, illustrating heat distribution.

## 6. MAINTENANCE AND CARE

---

Proper care will extend the life of your heated mattress pad.

### 6.1 Cleaning Instructions

- **Disconnect Controllers:** Always ensure the controller(s) are disconnected from the mattress pad before cleaning.
- **Machine Washing:** The mattress pad is machine washable. Use a gentle cycle with cold water. Do not use bleach.
- **Hand Washing:** The mattress pad can also be hand washed. Use mild detergent and cold water.
- **Drying:** Air dry the mattress pad completely or tumble dry on a low heat setting. Ensure the pad is thoroughly dry before reattaching the controller(s) and using it again.
- **Do Not Iron:** Do not iron the heated mattress pad.

### 6.2 Storage

- Ensure the mattress pad is completely dry before storing.

- Fold the pad neatly and store it in a cool, dry place, away from direct sunlight.



Image 6.1: The mattress pad folded, indicating its suitability for both hand and machine washing.

## 7. TROUBLESHOOTING

If you encounter any issues with your CURECURE Electric Heated Mattress Pad, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Pad is not heating.	Power cord not securely plugged in. Controller not turned on or heat level not selected.	Ensure the power cord is firmly connected to both the wall outlet and the controller. Press the power button and select a heat level.
Controller indicator lights are not working.	No power supply. Faulty connection.	Check the power outlet and ensure all connections are secure. If the issue persists, contact customer support.

Problem	Possible Cause	Solution
Uneven heating or cold spots.	Pad is folded, wrinkled, or bunched. Objects obstructing heat distribution.	Ensure the mattress pad is laid perfectly flat on the mattress without any folds or obstructions.
Pad automatically turned off before 10 hours.	Overheating protection activated.	Unplug the pad, allow it to cool down for a few minutes, then check for any folds or obstructions before restarting.

## 8. SPECIFICATIONS

---

Feature	Detail
Brand	CURECURE
Model Number	HMP-140160
Dimensions	140L x 160W centimeters
Color	White
Material	Cotton
Temperature Levels	4
Controller Type	Dual-hand Controller
Auto Shut-off	10 Hours
Washable	Machine Washable
Item Weight	1.69 Kilograms

## 9. WARRANTY AND SUPPORT

---

CURECURE products are manufactured with quality and care. For warranty information, please refer to the documentation included with your purchase or visit the official CURECURE website.

If you require technical assistance, have questions about product operation, or need to report a defect, please contact CURECURE customer support. Please have your model number (HMP-140160) and proof of purchase ready when contacting support.

**Customer Support Contact:** Refer to your product packaging or the official CURECURE website for the most current contact information.