

Manuals.plus /

› Sauder /

› Sauder Cannery Bridge Entertainment Wall User Manual

Sauder 429180

Sauder Cannery Bridge Entertainment Wall User Manual

Model: 429180 | Brand: Sauder

INTRODUCTION

The Sauder Cannery Bridge Entertainment Wall is designed to create a stylish accent in your living space while providing a secure and organized solution for your television and media components. This unit features a wall-mounted TV bracket, a floating shelf, dimmable LED lights, and an integrated cable management system. It is finished in Lintel Oak, offering both aesthetic appeal and practical functionality.

SAFETY INFORMATION

WARNING: Formaldehyde – www.p65warnings.ca.gov

- Always ensure the unit is securely attached to the wall as instructed in the assembly manual. The unit rests on the floor for added support, but wall attachment is crucial for stability.
- The TV bracket is designed to hold televisions up to 70 inches and weighing 95 lbs. or less. Do not exceed this weight limit.
- Keep small parts and hardware away from children during assembly.
- Do not climb on or hang from the unit.
- Ensure all electrical connections for LED lights and media devices are properly secured and routed through the cable management system to prevent tripping hazards.

PACKAGE CONTENTS

Before beginning assembly, verify that all components are present and undamaged. Your package should include:

- All necessary materials for the entertainment wall structure.
- Required hardware for assembly.
- Detailed assembly instructions.

If any parts are missing or damaged, please contact Sauder customer support immediately.

SETUP AND ASSEMBLY

Assembly of the Sauder Cannery Bridge Entertainment Wall is required. Please follow the detailed assembly instructions provided in your package. It is recommended to have at least two people for assembly due to the size and weight of the components.



Figure 1: Assembled Sauder Cannery Bridge Entertainment Wall.

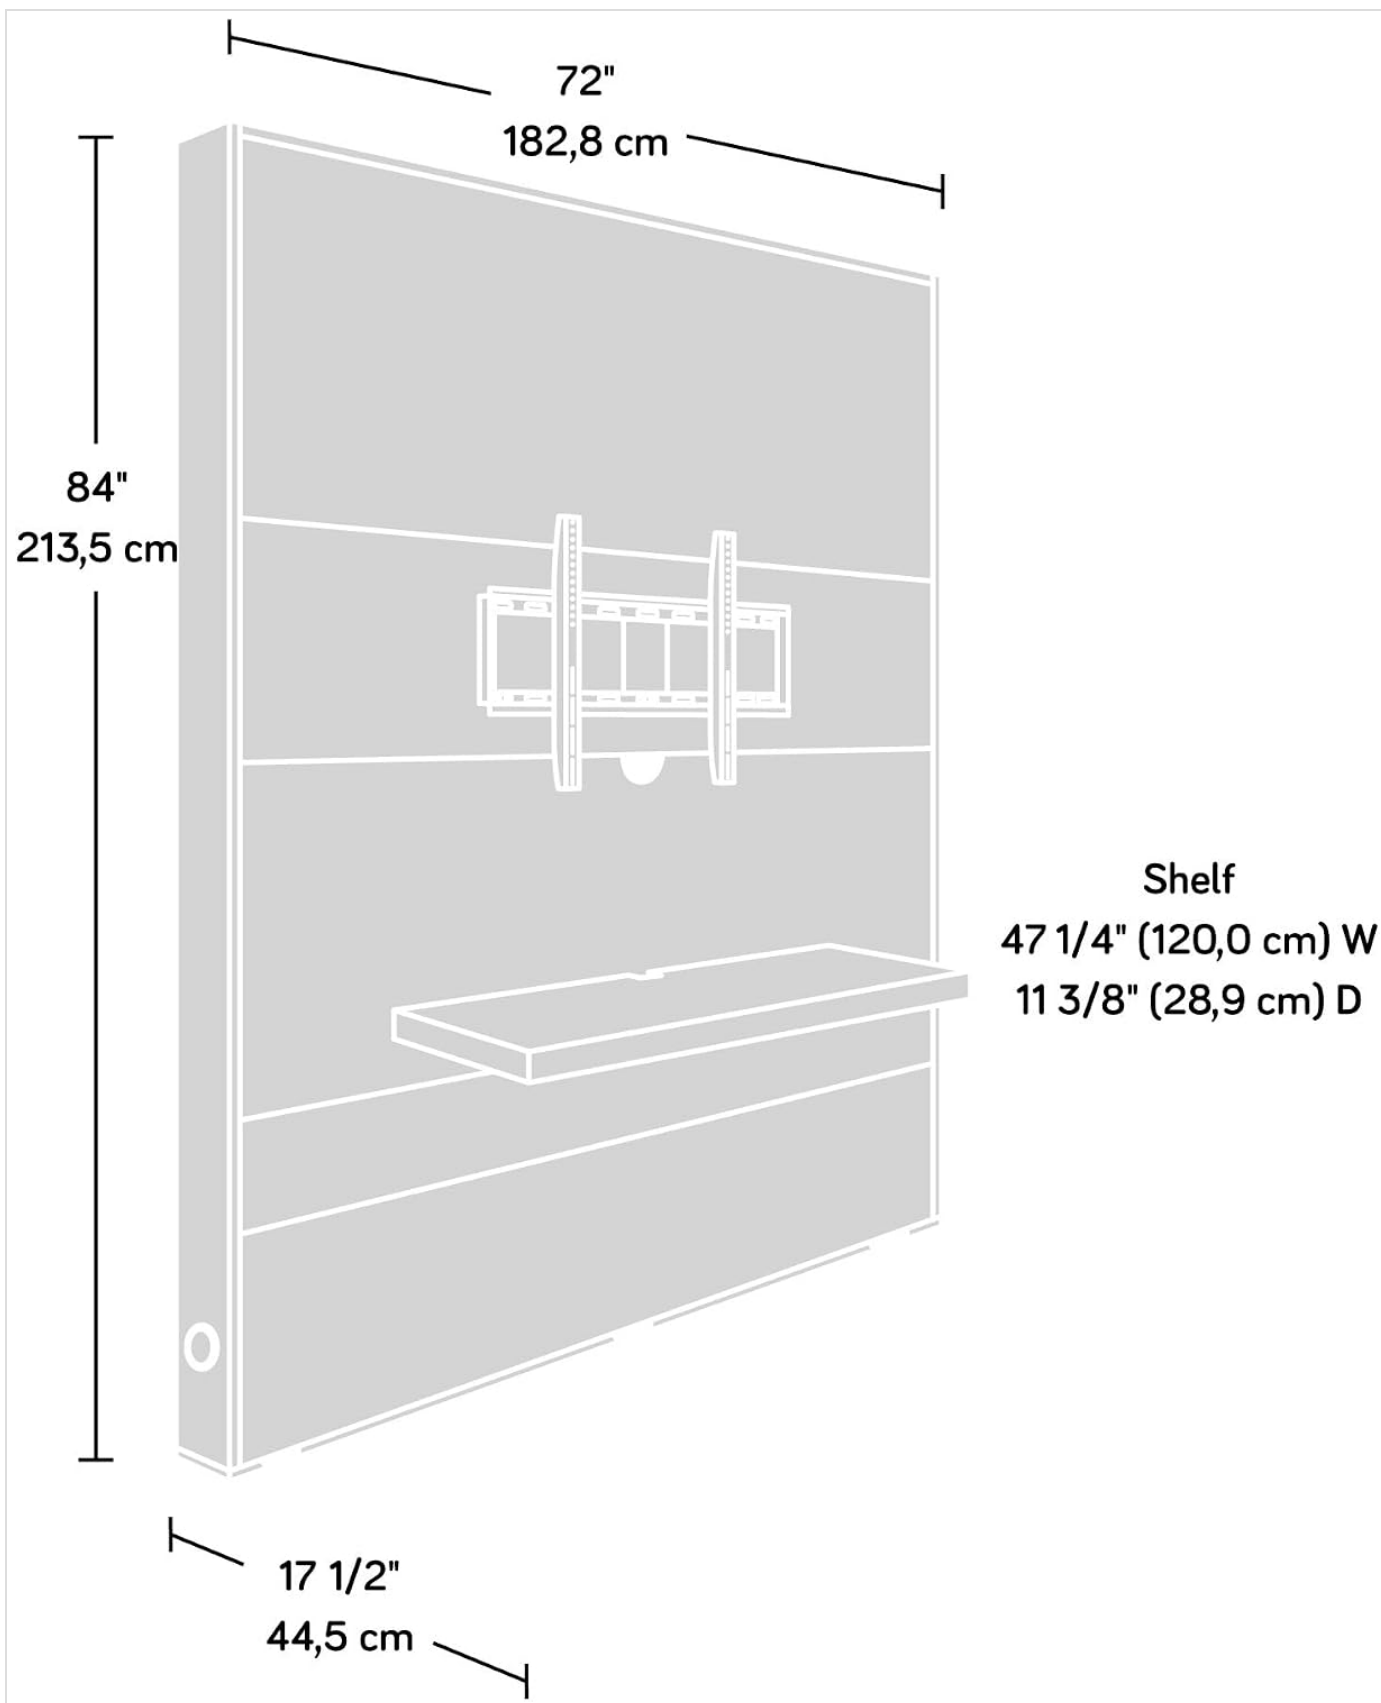


Figure 2: Product dimensions for planning your space.



Figure 3: Detail of the integrated TV mounting bracket.

Key assembly steps include:

1. Identify all parts and hardware according to the provided list.
2. Assemble the main wall structure following the step-by-step diagrams.
3. Install the TV bracket securely to the designated area on the wall unit.
4. Attach the floating shelf at the desired height.
5. Mount the entire unit to the wall using appropriate anchors and fasteners for your wall type. This is critical for stability and safety.
6. Connect the dimmable LED lights and route their wiring.

OPERATING INSTRUCTIONS

Once assembled and securely mounted, your entertainment wall is ready for use.



Figure 4: The entertainment wall in a typical living room setup.

- **TV Mounting:** Carefully attach your television to the integrated bracket. Ensure the TV's VESA pattern is compatible and its weight does not exceed 95 lbs.
- **Floating Shelf:** Use the floating shelf to place your cable box, video game console, soundbar, or decorative items.
- **LED Lights:** The dimmable LED lights feature multiple modes. Refer to the specific instructions for the LED light kit to control brightness and mode settings.
- **Cable Management:** Utilize the cable management system with its pivoting door located beneath the shelf. This allows for easy access to outlets and helps conceal cords, maintaining a tidy appearance.



Figure 5: Cable management system with pivoting door.

MAINTENANCE AND CARE

To ensure the longevity and appearance of your Sauder Cannery Bridge Entertainment Wall, follow these care guidelines:

- **Cleaning:** Wipe surfaces with a damp cloth. Avoid using harsh chemicals, abrasive cleaners, or polishes that may damage the Lintel Oak laminate finish.
- **Dusting:** Regularly dust the unit with a soft, dry cloth.
- **Spills:** Clean up spills immediately to prevent staining or damage to the finish.
- **Inspection:** Periodically check all hardware and wall attachments to ensure they remain tight and secure. Retighten if necessary.
- **Sunlight:** Avoid prolonged exposure to direct sunlight, which can cause fading or discoloration over time.



Figure 6: Close-up of the Lintel Oak finish.

TROUBLESHOOTING

If you encounter any issues with your entertainment wall, consider the following common solutions:

Problem	Possible Cause	Solution
Unit feels unstable or wobbly.	Improper wall attachment or loose hardware.	Ensure the unit is securely mounted to the wall using appropriate anchors. Check and tighten all assembly hardware.
LED lights are not working.	Power connection issue or faulty LED strip.	Verify the power adapter is plugged in and the LED strip is correctly connected. Check for any damage to the wiring.

Problem	Possible Cause	Solution
TV bracket does not seem secure.	Incorrect installation of the bracket or TV.	Review the TV bracket installation steps in the assembly manual. Ensure all bolts are tightened and the TV's weight is within limits.
Missing or damaged parts during assembly.	Shipping damage or packaging error.	Do not proceed with assembly. Contact Sauder customer support for replacement parts.

SPECIFICATIONS

Feature	Detail
Brand	Sauder
Model Number	429180
Color	Lintel Oak Finish
Product Dimensions (D x W x H)	17.44" x 71.97" x 84.06"
Recommended Uses	Entertainment Media
Special Feature	Adjustable Shelf, Dimmable LED Lights
Mounting Type	Wall Mount
Room Type	Living Room
TV Weight Limit	95 Pounds
Max TV Size	70 inches
Included Components	Materials, Hardware, Assembly instructions
Finish Type	Laminate
Number of Shelves	1 (Floating Shelf)
Material	Engineered Wood, Metal
Assembly Required	Yes
Item Weight	66 pounds
UPC	042666088213


WARRANTY INFORMATION

The Sauder Cannery Bridge Entertainment Wall comes with a**5-year limited warranty**. This warranty covers defects in materials and workmanship under normal use. Please retain your proof of purchase for warranty claims. For full details regarding warranty coverage and limitations, refer to the documentation included with your product or contact Sauder customer support.

CUSTOMER SUPPORT

For assistance with assembly, missing parts, or any other inquiries regarding your Sauder Cannery Bridge Entertainment Wall, please contact our Domestic Call Center. Our team is ready to assist you.

Phone: 800-523-3987
Website: sauder.com/service

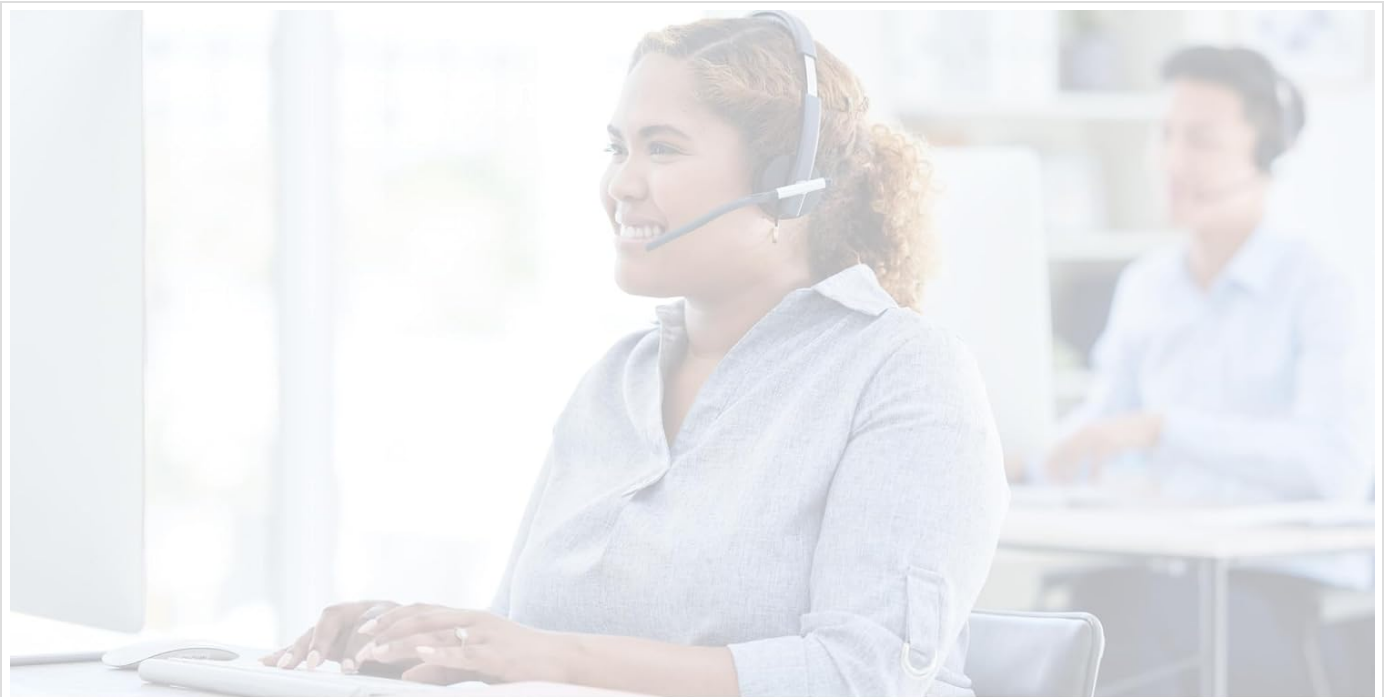

DOMESTIC CALL CENTER
READY TO ASSIST.

sauder.com/service

800-523-3987

Figure 7: Sauder Customer Support Information.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B09QHZH9BQ>

More documents and user manuals: <https://manuals.plus/>