



Manuals.plus /

› Devoko /

› Devoko DDVC23LS03 4-Fold Padded Portable Folding Outdoor Chaise Lounge Instruction Manual

## Devoko DDVC23LS03

# Devoko DDVC23LS03 4-Fold Padded Portable Folding Outdoor Chaise Lounge Instruction Manual

Model: DDVC23LS03

## 1. INTRODUCTION

This manual provides instructions for the safe and proper use, setup, and maintenance of your Devoko 4-Fold Padded Portable Folding Outdoor Chaise Lounge. Please read this manual thoroughly before using the product and retain it for future reference.

## 2. SAFETY INFORMATION

- Ensure the chaise lounge is placed on a stable, level surface before use.
- Do not exceed the maximum weight capacity of 350 pounds (158 kg).
- Keep hands and fingers clear of moving parts during folding and unfolding to prevent pinching.
- Regularly inspect the chaise lounge for any signs of wear or damage. Do not use if damaged.
- This product is designed for outdoor use. Avoid prolonged exposure to extreme weather conditions to extend product life.

## 3. PACKAGE CONTENTS

The Devoko 4-Fold Padded Portable Folding Outdoor Chaise Lounge is pre-assembled and includes:

- 1 x Devoko 4-Fold Padded Portable Folding Outdoor Chaise Lounge
- 1 x Adjustable Pillow
- 1 x Moveable 3-in-1 Side Storage Pocket

## 4. SETUP AND UNFOLDING

The chaise lounge arrives pre-assembled and requires no tools for setup. Follow these steps to unfold the lounge:

1. Place the folded chaise lounge on a flat surface.
2. Gently pull the frame apart until the lounge begins to extend.
3. Continue unfolding until the legs are fully extended and locked into place. Ensure all locking mechanisms are engaged for stability.
4. Adjust the pillow to your desired position (headrest or lumbar support).
5. Attach the side storage pocket to the frame if not already attached.



Figure 4.1: The chaise lounge in its unfolded state and folded for transport/storage.



Sturdy Locking System

## 4-FOLD ADJUSTABLE LOUNGE CHAIR



Sit up



Lie down



Recline

Figure 4.2: Illustration of the chaise lounge's adjustable positions and sturdy locking system.

### 5. OPERATING INSTRUCTIONS

#### 5.1 Adjusting Recline Positions

The chaise lounge features multiple reclining positions for varied comfort. To adjust the backrest:

1. Slightly lift the backrest to disengage the locking mechanism.
2. Move the backrest to your desired angle.
3. Ensure the backrest is securely locked into one of the available positions before applying full weight.

#### 5.2 Using the Side Storage Pocket

The moveable 3-in-1 side storage pocket can hold small items such as magazines, cell phones, or water bottles. Attach it to the side frame of the lounge for convenient access.



# RECLINE FOR RELAXING

Suitable for beach, poolside, yard, patio...

Figure 5.1: The chaise lounge in a reclined position, suitable for relaxing.

## 6. FOLDING AND STORAGE

The 4-fold design allows for compact storage and easy transport. To fold the chaise lounge:

1. Ensure the backrest is in its lowest, flat position.
2. Carefully lift the middle sections of the lounge, allowing it to fold inward.
3. Continue folding until the lounge is in its compact, 4-fold state.
4. Secure any straps or latches if present to keep it folded.

Store the folded lounge in a dry, protected area when not in use for extended periods to prolong its lifespan.



Figure 6.1: The chaise lounge in its folded state, demonstrating ease of transport.

## 7. MAINTENANCE AND CARE

- **Cleaning:** Wipe clean with a damp cloth and mild soap. Avoid harsh chemicals or abrasive cleaners.
- **Drying:** Allow the fabric to air dry completely before folding and storing to prevent mildew.
- **Inspection:** Periodically check all bolts, screws, and frame connections to ensure they are tight and secure.
- **Storage:** Store in a cool, dry place away from direct sunlight and extreme temperatures when not in use for extended periods.



Figure 7.1: Details of the chaise lounge construction and features, highlighting materials and components.

## 8. SPECIFICATIONS

Feature	Detail
Model Number	DDVC23LS03
Brand	Devoko
Unfolded Dimensions (L x W x H)	77.8" x 26.8" x 13.5" (197.6 cm x 68.1 cm x 34.3 cm)
Folded Dimensions (L x W x H)	Approx. 31" x 26.8" x 5" (78.7 cm x 68.1 cm x 12.7 cm)
Weight Capacity	350 lbs (158 kg)
Materials	Steel frame, Textilene fabric, Oxford fabric, Foam padding
Special Features	4-Fold design, Adjustable reclining positions, Adjustable pillow, Side storage pocket



Figure 8.1: Key dimensions and weight capacity of the chaise lounge.

## 9. TROUBLESHOOTING

This section addresses common issues you might encounter with your chaise lounge.

- **Issue:** Chaise lounge feels unstable.  
**Solution:** Ensure all legs are fully extended and the locking mechanisms for the frame and backrest are securely engaged. Verify the lounge is on a flat, stable surface.
- **Issue:** Difficulty folding/unfolding.  
**Solution:** Ensure no obstructions are present in the folding joints. Apply gentle, even pressure. The mechanism should operate smoothly. If resistance is met, re-check for obstructions.
- **Issue:** Fabric appears dirty or stained.  
**Solution:** Refer to the "Maintenance and Care" section for cleaning instructions. Use a damp cloth with mild soap and air dry.

## 10. WARRANTY AND SUPPORT

For warranty information or product support, please refer to the documentation provided at the time of purchase or contact Devoko customer service directly. Keep your purchase receipt as proof of purchase. For further assistance, please visit the official Devoko website or contact their customer support channels.

