

[Manuals.plus](#) /

› [ZEBRONICS](#) /

› ZEBRONICS Zeb-Juke BAR 9500WS PRO Dolby 5.1 Soundbar User Manual

ZEBRONICS ZEB-JUKE BAR

ZEB-JUKE BAR 9500WS PRO Dolby 5.1 Soundbar User Manual

Model: ZEB-JUKE BAR | Brand: ZEBRONICS

1. INTRODUCTION AND OVERVIEW

Thank you for purchasing the ZEBRONICS Zeb-Juke BAR 9500WS PRO Dolby 5.1 Soundbar. This manual provides essential information for setting up, operating, and maintaining your sound system. Please read this manual thoroughly before use to ensure proper functionality and to maximize your audio experience.



Image: The complete ZEBRONICS Zeb-Juke BAR 9500WS PRO Dolby 5.1 Soundbar system, including the soundbar, subwoofer, and two wireless satellite speakers, along with the remote control.

The Zeb-Juke BAR 9500WS PRO is designed to deliver an immersive 5.1 channel audio experience with Dolby Audio support, featuring a powerful soundbar, a dedicated subwoofer, and two wireless rear satellite speakers. Its versatile connectivity options ensure compatibility with various devices.

2. PACKAGE CONTENTS

Please check the package contents carefully. If any items are missing or damaged, contact your retailer immediately.

- 1 x Sound Bar Unit
- 1 x Subwoofer Unit
- 2 x Wireless Satellite Speakers
- 1 x Remote Control
- 1 x Input Cable (AUX)

- 1 x HDMI Cable
- 1 x External Power Adapter for Rear Satellites
- 1 x QR User Guide (for digital access)
- Wall Mount Brackets and Fasteners

3. PRODUCT FEATURES

- **5.1 Channel Surround Sound:** Experience immersive audio with a soundbar, subwoofer, and two wireless satellite speakers.
- **Dolby Audio Support:** Enjoy enhanced sound quality with Dolby Audio decoding for compatible content.
- **High Output Power:** Total 525 Watts (Soundbar: 225W, Subwoofer: 150W, Satellites: 2 x 75W).
- **16.5cm Subwoofer:** Delivers deep and powerful bass.
- **Versatile Connectivity:** HDMI ARC, Optical, AUX, Bluetooth v5.0, and USB port (supports up to 32GB MP3).
- **LED Display:** Provides clear information on mode, volume, bass, and treble levels.
- **Wall Mountable:** Soundbar can be conveniently mounted on a wall.
- **Full-Function Remote Control:** Easy control over all settings and modes.

4. SETUP


4.1 Physical Placement

Optimal placement of your sound system components is crucial for the best audio experience.

- **Soundbar:** Place the soundbar centrally below your television. Ensure it is on a stable, flat surface or securely wall-mounted.
- **Subwoofer:** Position the subwoofer on the floor, preferably in a corner or near a wall, to enhance bass response. Avoid placing it directly against a wall to prevent muffled sound.
- **Wireless Satellite Speakers:** Place the two wireless satellite speakers behind your listening position, one on the left and one on the right, facing towards the center of the room. Ensure they are within range of the soundbar for wireless connection.



Image: An illustration demonstrating the recommended 5.1 channel speaker placement for optimal surround sound, with the soundbar in front, subwoofer to the side, and wireless satellites at the rear.

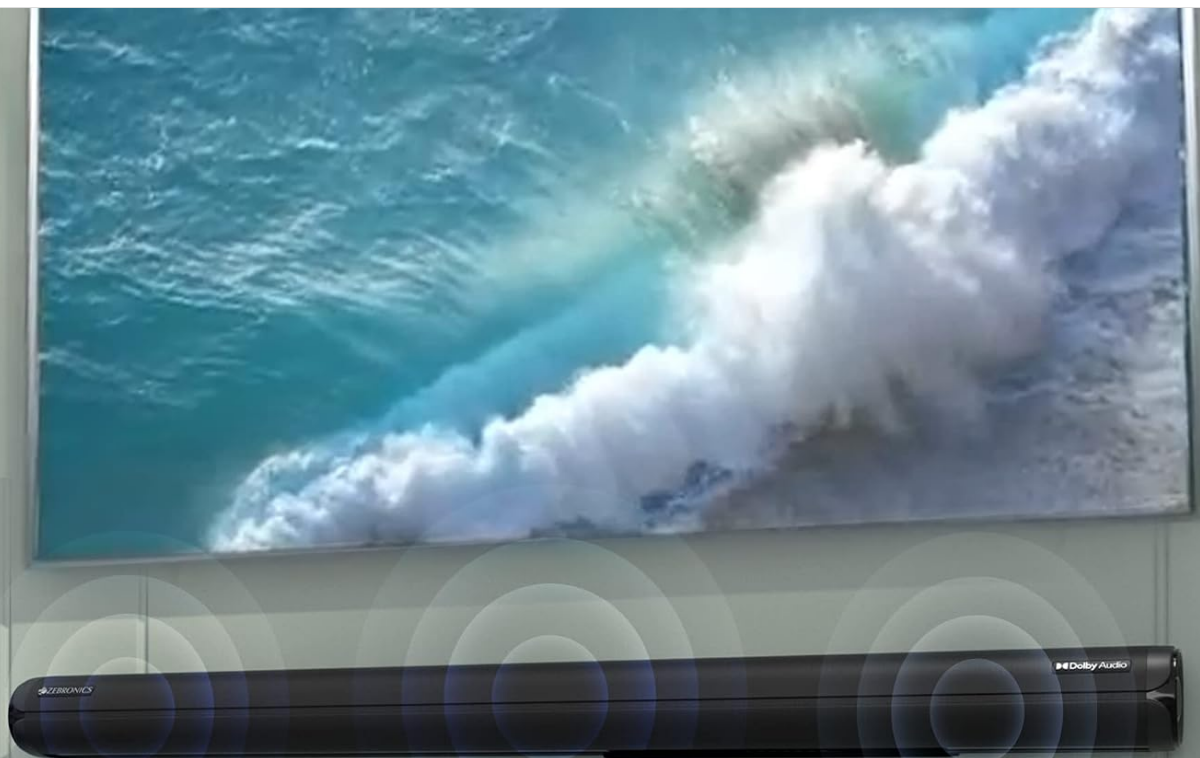

3 Driver Soundbar Wall Mountable

Image: The soundbar shown mounted on a wall, indicating its wall-mountable design and suitability for integration with a wall-mounted television.

4.2 Connections

Connect the soundbar to your audio source using one of the following methods:

- **HDMI ARC (Recommended for Smart TVs):** Connect one end of the provided HDMI cable to the HDMI ARC port on the soundbar and the other end to the HDMI ARC port on your TV. This allows audio from the TV to be sent to the soundbar and enables control of the soundbar volume using your TV remote.
- **Optical:** Connect an optical cable (not included) from the Optical OUT port on your TV or audio source to the Optical IN port on the soundbar.
- **AUX:** Use the provided 3.5mm AUX cable to connect the soundbar to the headphone jack or AUX output of your device (e.g., smartphone, laptop, TV without ARC/Optical).
- **USB:** Insert a USB pendrive (max. 32GB, MP3 format) into the USB port on the soundbar for direct audio playback.
- **Bluetooth:** For wireless audio streaming from compatible devices, refer to the Bluetooth Pairing section below.



Dual Wireless Rear Satellites



 
Remote Control

HDMI (ARC)



Optical

BT v5.0



USB



AUX

Image: A detailed view of the soundbar's rear panel, highlighting the available connectivity ports including HDMI ARC, Optical, AUX, and USB, for connecting to various audio sources.

Ensure all components (soundbar, subwoofer, satellites) are connected to a power source. The wireless satellites require their external power adapter.

5. OPERATING INSTRUCTIONS

5.1 Power On/Off

Press the **Power** button on the soundbar or the remote control to turn the unit on or off.

5.2 Input Selection

Press the **Input/Mode** button on the remote control or the soundbar to cycle through available input modes: HDMI ARC, Optical, AUX, USB, and Bluetooth.



Image: A close-up of the soundbar's integrated LED display, which shows the current input mode (e.g., "Hd" for HDMI) and other operational information.

5.3 Volume Control

Use the **VOL+** and **VOL-** buttons on the remote control or the soundbar to adjust the master volume.

5.4 Bass and Treble Adjustment

Use the **BASS+ / BASS-** and **TRE+ / TRE-** buttons on the remote control to fine-tune the bass and treble levels according to your preference.

5.5 Bluetooth Pairing

1. Switch the soundbar to Bluetooth mode using the **Input/Mode** button. The LED display will show "BT".
2. On your mobile device, enable Bluetooth and search for available devices.
3. Select "ZEB-JUKE BAR" from the list.
4. Once paired, the soundbar will indicate a successful connection, and you can stream audio from your device.

5.6 USB Playback

Insert a USB pendrive (formatted with MP3 audio files, max 32GB) into the USB port. The soundbar will automatically switch to USB mode and begin playing music. Use the remote control for playback functions (Play/Pause, Next/Previous Track).

5.7 Remote Control Functions

The included remote control provides comprehensive control over your soundbar system.



Image: The full-function remote control for the soundbar, showing buttons for power, input selection, volume, bass/treble, and media playback.

Button	Function
Power	Turns the soundbar On/Off.
Input / Mode	Switches between input modes (HDMI ARC, Optical, AUX, BT, USB).
PAIR	Initiates Bluetooth pairing.
DISPLAY	Controls LED display brightness/status.
RESET	Resets settings to default.
VOL+ / VOL-	Adjusts master volume up/down.
TRE+ / TRE-	Adjusts treble level up/down.
SW+ / SW-	Adjusts subwoofer volume up/down.
Play/Pause	Plays or pauses audio playback (USB/BT mode).
Previous/Next	Skips to previous/next track (USB/BT mode).
MUSIC / MOVIE / NEWS / SPORT	Selects preset equalizer modes.
CEN+ / CEN-	Adjusts center channel volume.
SURR+ / SURR-	Adjusts surround satellite volume.

6. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the surfaces of the soundbar, subwoofer, and satellites. Do not use liquid cleaners or abrasive materials.
- **Ventilation:** Ensure proper ventilation around all components. Do not block any ventilation openings.
- **Power Off:** Always turn off and unplug the system from the power outlet before cleaning or if it will not be used for an extended period.
- **Avoid Moisture:** Keep the system away from water, moisture, and direct sunlight.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Power cable not connected; Power outlet not active.	Ensure all power cables are securely plugged in. Check the power outlet with another device.
No sound	Incorrect input mode selected; Volume too low; Cables not connected properly.	Select the correct input mode. Increase volume. Check all audio cables for secure connection.
Distorted sound	Volume too high; Source audio quality is poor.	Reduce volume. Try a different audio source.
Bluetooth pairing issues	Soundbar not in pairing mode; Device too far; Interference.	Ensure soundbar is in BT mode and ready to pair. Move device closer. Avoid other wireless devices.
Wireless satellites not working	Satellites not powered; Not paired with soundbar.	Ensure satellites are plugged into power. They should automatically pair; if not, refer to the QR user guide for specific pairing instructions.
Remote control not working	Batteries low/dead; Obstruction between remote and soundbar.	Replace batteries. Ensure clear line of sight to the soundbar's sensor.

8. SPECIFICATIONS

Feature	Detail
Model Name	ZEB-JUKE BAR
Speaker Type	Soundbar with Wireless Satellites
Output Power (Total)	525 Watts (Soundbar: 225W, Subwoofer: 150W, Satellites: 2 x 75W)
Subwoofer Diameter	16.5 cm (6.5 inches)
Connectivity Options	HDMI ARC, Optical, AUX, Bluetooth v5.0, USB
Wireless Communication	Bluetooth
Surround Sound Configuration	5.1 Channel
Product Dimensions (Soundbar)	96.5W x 24.5D x 50H Centimeters
Item Weight	10.86 Kilograms
Power Source	AC
Color	Black

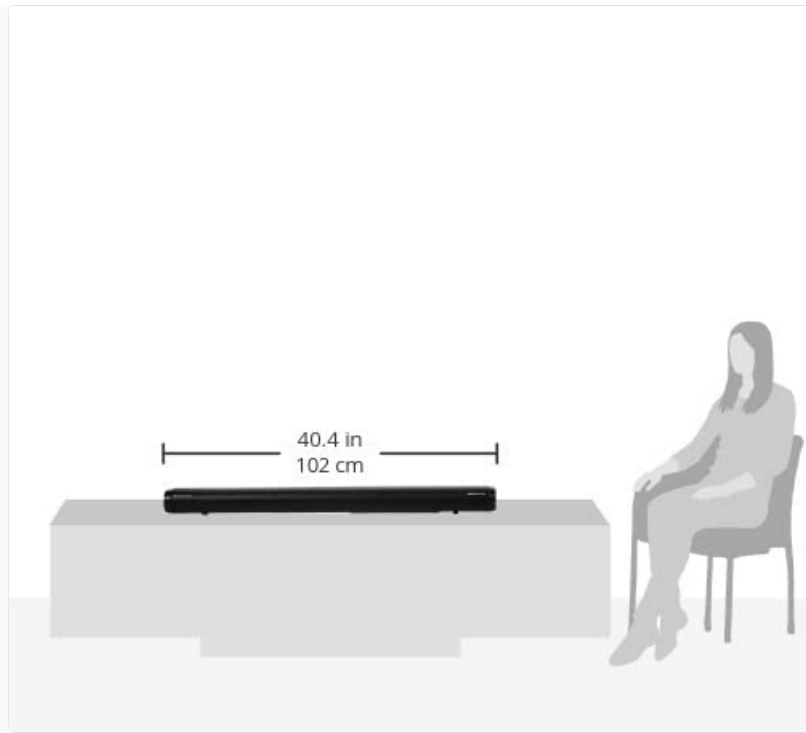 


Image: A visual representation of the soundbar's length, indicating it is approximately 102 cm (40.4 inches) long, for size reference.



16.51 cm Subwoofer



Image: The subwoofer unit, highlighting its 16.51 cm (6.5 inch) driver size, which contributes to its deep bass performance.

9. WARRANTY AND SUPPORT

Your ZEBRONICS Zeb-Juke BAR 9500WS PRO Dolby 5.1 Soundbar comes with a **1-year warranty** from the date of purchase. This warranty covers manufacturing defects and faulty workmanship under normal use.

The warranty does not cover:

- Damage caused by improper installation, accident, misuse, abuse, negligence, or unauthorized modification.
- Damage caused by power surges or lightning.
- Normal wear and tear.

For warranty claims or technical support, please contact ZEBRONICS customer service. Keep your purchase receipt as proof of purchase.

Manufacturer: Zebronic India Private Limited

Country of Origin: China

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question