

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [CLEANmaxx](#) /
- › [CLEANmaxx Cordless Cyclonic Vacuum Cleaner Model 01728 User Manual](#)

CLEANmaxx 01728

CLEANmaxx

CLEANmaxx Cordless Cyclonic Vacuum Cleaner Model 01728

User Manual

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your CLEANmaxx Cordless Cyclonic Vacuum Cleaner Model 01728. Please read these instructions carefully before using the appliance and retain them for future reference.



Image 1.1: The CLEANmaxx Cordless Cyclonic Vacuum Cleaner Model 01728 in its assembled stick configuration.

2. SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, or injury, always follow basic safety precautions when using an electrical appliance.

- Ensure the power adapter is compatible with your local power supply.
- Do not use the vacuum cleaner on wet surfaces or to pick up liquids.
- Do not pick up flammable or combustible materials, hot ashes, or sharp objects.
- Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts.
- Do not operate the vacuum cleaner if it has been dropped, damaged, left outdoors, or dropped into water.
- Always turn off the appliance before attaching or detaching accessories, or performing maintenance.
- This appliance is not intended for use by persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

3. PACKAGE CONTENTS

Carefully unpack all components and check against the list below. If any items are missing or damaged, contact customer support.



Image 3.1: All included components of the vacuum cleaner.

- Main Unit (Motor and Dustbin Assembly)
- Aluminum Extension Tube (approximately 80 cm)
- "Power Rotation" Floor Nozzle with Electric Rotating Bristles
- Crevice Tool
- Upholstery Nozzle with Brush
- Wall Mount Bracket

- Charging Adapter

4. ASSEMBLY AND SETUP

4.1 Assembling the Vacuum Cleaner

1. **For Stick Vacuum Mode:** Connect the aluminum extension tube to the main unit until it clicks into place. Then, attach the "Power Rotation" floor nozzle to the other end of the extension tube, ensuring it is securely fastened.
2. **For Handheld Vacuum Mode:** Attach the desired accessory (crevice tool or upholstery nozzle) directly to the main unit.



Image 4.1: The vacuum cleaner configured for handheld use, ideal for stairs or upholstery.



Image 4.2: The main unit with the crevice tool attached for detailed cleaning.

4.2 Charging the Battery

Before first use, fully charge the vacuum cleaner's battery. Connect the charging adapter to the charging port on the main unit and plug it into a power outlet. The charging indicator light will show the charging status. A full charge typically takes several hours.

4.3 Wall Mount Installation

The included wall mount allows for convenient storage and accessibility. Choose a suitable location near a power outlet. Secure the wall mount to the wall using appropriate screws and anchors (not included). Ensure the mount is firmly attached before hanging the vacuum cleaner.

5. OPERATING INSTRUCTIONS

5.1 Powering On/Off

Press the power button located on the handle of the main unit to turn the vacuum cleaner on. Press it again to turn it off.

5.2 Suction Power Adjustment

The vacuum cleaner features 2 levels of suction power. Press the power adjustment button (usually near the power button) to switch between the standard and maximum suction modes. Use standard mode for general cleaning and maximum mode for stubborn dirt or carpets.

5.3 Using Attachments

- **"Power Rotation" Floor Nozzle:** Ideal for various floor types, including hard floors and carpets. The electric rotating bristles effectively dislodge dirt and debris.
- **Crevice Tool:** Use for narrow gaps, corners, and hard-to-reach areas.
- **Upholstery Nozzle with Brush:** Suitable for cleaning furniture, curtains, and car interiors.



Image 5.1: The "Power Rotation" floor nozzle efficiently captures dirt with its rotating bristles and optimized airflow.

5.4 Battery Life

The vacuum cleaner provides up to 40 minutes of operating time on a single charge, depending on the selected power level and attachment used.

6. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

6.1 Emptying the Dustbin

When the dustbin is full or suction power decreases, empty it. Typically, a release button allows the dustbin to detach from the main unit. Dispose of collected debris and reattach the dustbin securely.

6.2 Cleaning the 3-Compartment Filter

The vacuum cleaner features a 3-compartment filter system designed to capture 99.95% of microscopic particles. Regularly clean the filter components to maintain suction efficiency. Remove the filter assembly from the dustbin, separate the components, and tap out loose dirt. If washable, rinse with cold water and ensure they are completely dry before reassembling and placing back into the vacuum cleaner.

6.3 Cleaning the Floor Nozzle

Periodically check the "Power Rotation" floor nozzle for tangled hair or debris around the rotating bristles. Use scissors to cut away any tangled hair and remove obstructions to ensure smooth operation.

7. TROUBLESHOOTING

Refer to the following table for common issues and their solutions.

Problem	Possible Cause	Solution
Low suction power	Full dustbin, clogged filter, blocked nozzle/tube	Empty dustbin, clean filter, check for blockages in nozzle and extension tube.
Vacuum cleaner does not turn on	Battery not charged, power button not pressed correctly	Charge the battery, ensure the power button is fully pressed.
Battery not charging	Charger not connected, faulty adapter/outlet	Ensure charger is properly connected to vacuum and outlet. Try a different outlet.
Nozzle bristles not rotating	Obstruction in brush roll, nozzle not properly attached	Remove any tangled hair or debris from the brush roll. Reattach the nozzle securely.

8. SPECIFICATIONS

- **Model Number:** 01728
- **Brand:** CLEANmaxx
- **Weight:** Approximately 2 Kilograms
- **Dimensions (packaged):** 84 x 27 x 14 cm
- **Power Source:** Battery (Lithium-ion, rechargeable via electric cable)
- **Battery Life:** Up to 40 minutes (depending on power level)
- **Suction Levels:** 2
- **Filter Type:** 3-Compartment Cartridge Filter
- **Special Feature:** Bagless
- **Extension Tube:** Aluminum, extendable up to 80 cm

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided at the time of purchase or contact your retailer. Keep your proof of purchase for any warranty claims.

