

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [LELO](#) /
- › [LELO SILA Cruise Sonic Clitoral Massager User Manual](#)

LELO LE-8571

# LELO SILA Cruise Sonic Clitoral Massager User Manual

Model: LE-8571

## 1. INTRODUCTION

Thank you for choosing the LELO SILA Cruise. This manual provides essential information for the safe and effective use, care, and maintenance of your device. Please read it thoroughly before first use and retain it for future reference.



Image: The LELO SILA Cruise device in Aqua color, showcasing its ergonomic design.

## 2. WHAT'S IN THE BOX

Your LELO SILA Cruise package includes the following items:

- LELO SILA Cruise Sonic Clitoral Massager
- USB Charging Cable
- Satin Storage Pouch
- Warranty Registration Card
- Detailed User Manual (this document)
- LELO Personal Moisturizer Sachet (5 ml / 0.17 fl. oz.)

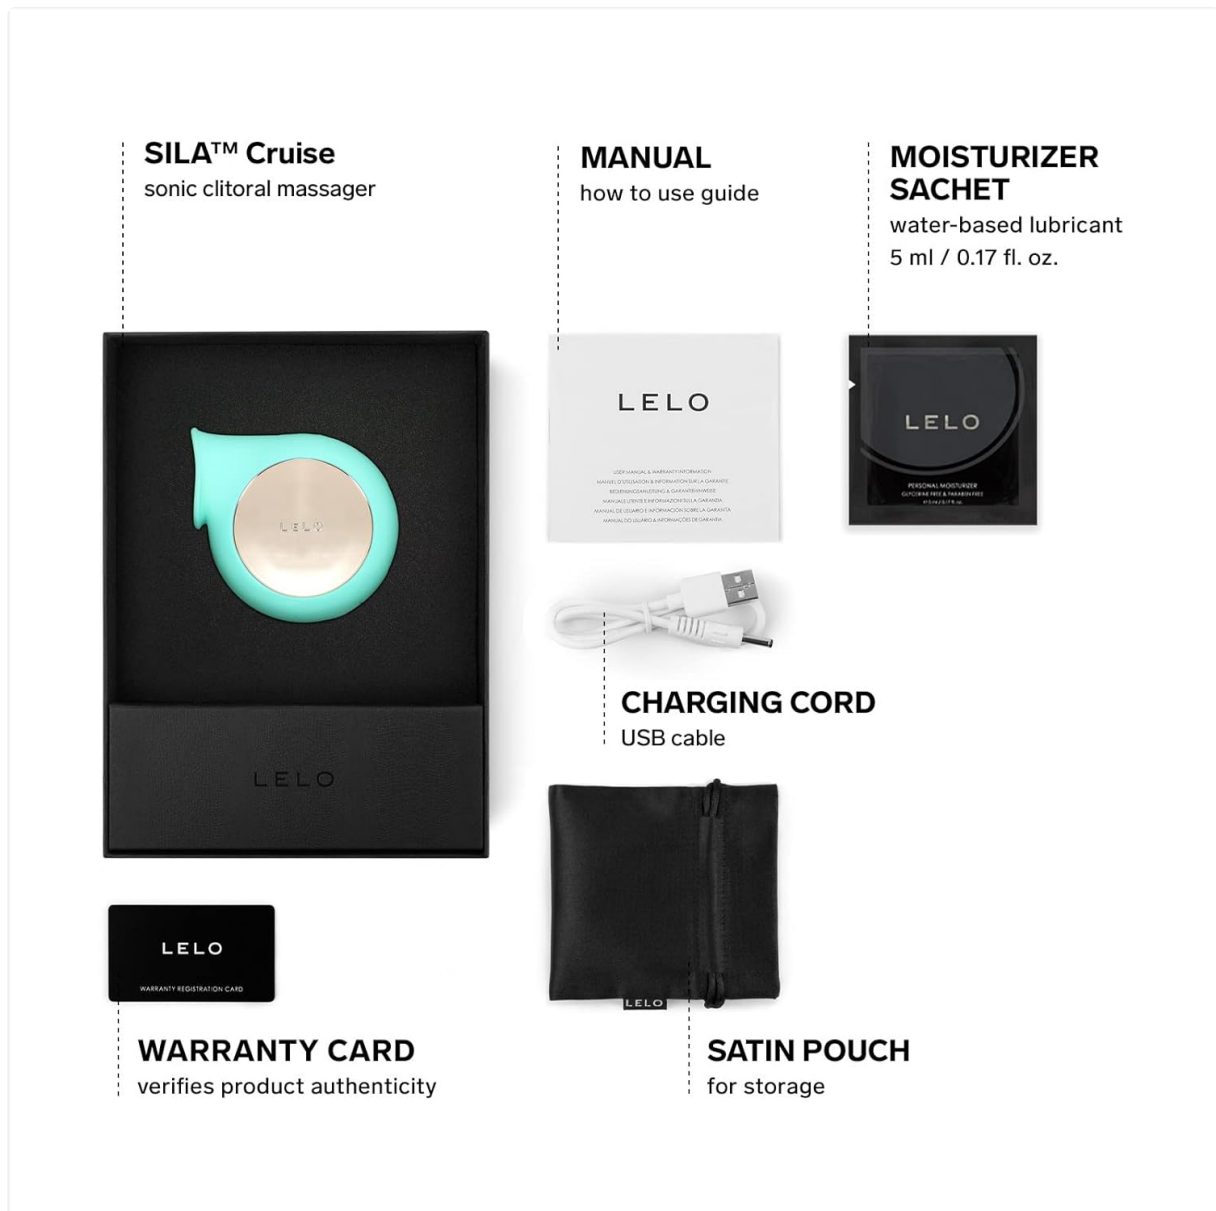


Image: All items included in the LELO SILA Cruise packaging: the device, manual, moisturizer sachet, USB charging cable, warranty card, and satin pouch.

## 3. KEY FEATURES

- **Gentle Sonic Waves:** Utilizes SENSONIC™ Technology to deliver gentle external stimulation without direct contact.
- **Large Mouth Design:** The wide opening engages the entire erogenous area, distributing vibrations evenly for a gradual build-up of sensation.

- **Cruise Control™:** Automatically adjusts intensity when pressed against the body, ensuring consistent pleasure.
- **8 Settings:** Offers a range of 8 vibration patterns, from subtle murmurs to satisfying pulses.
- **Extra-Soft Silicone:** Made from ultra-smooth, body-safe silicone for comfort and peace of mind.
- **100% Waterproof:** Fully submersible, making it suitable for use in the bath or shower and easy to clean.
- **Long-Lasting Charge:** Provides extended usage time on a single charge.

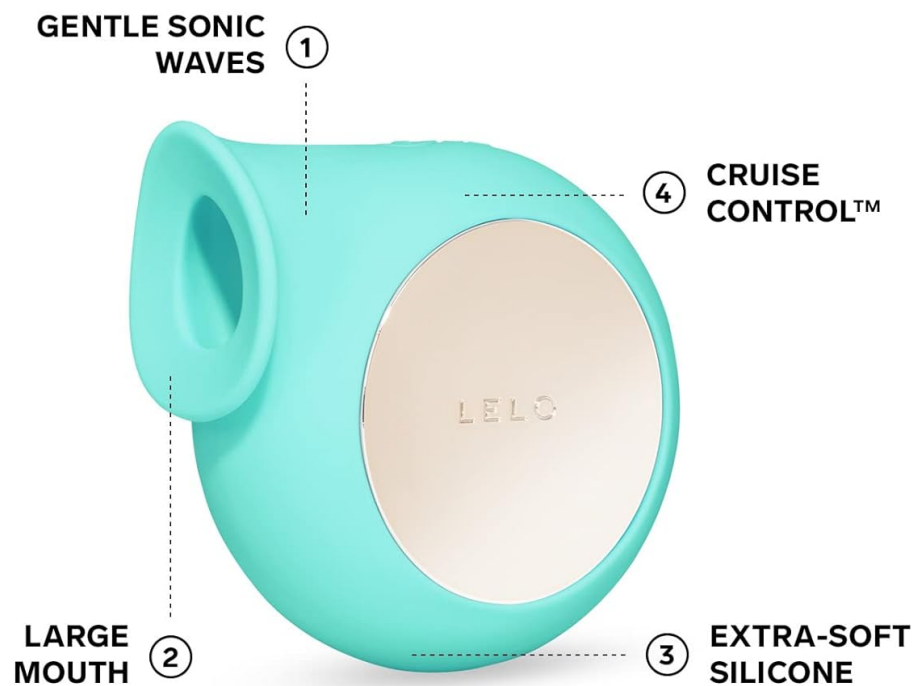


Image: A visual breakdown of the LELO SILA Cruise's main features, including its sonic waves, large mouth, soft silicone, and Cruise Control technology.

## 4. SETUP AND FIRST USE

### 4.1 Charging the Device

1. Before first use, ensure your LELO SILA Cruise is fully charged.
2. Locate the charging port on the device.
3. Connect the provided USB charging cable to the device and a USB power source (e.g., computer, wall adapter).
4. The LED lights on the device will blink to indicate the battery level during charging.

5. Charge the device for approximately 2 hours for a full charge.
6. Once fully charged, disconnect the cable. Ensure the charging port is dry before and after charging, especially if used in wet environments.




Image: A detailed view of the LELO SILA Cruise's charging port, located on the device's body.

## 5. OPERATING INSTRUCTIONS

---

### 5.1 Basic Operation

1. To turn the device **ON**, press the '+' button. The LED lights will blink to indicate the battery level.
2. To switch between the **8 pleasure settings**, press the '()' button (center button).
3. To **increase or decrease the intensity** within a setting, use the '+' or '-' buttons respectively.
4. To turn the device **OFF**, press and hold the '()' button.

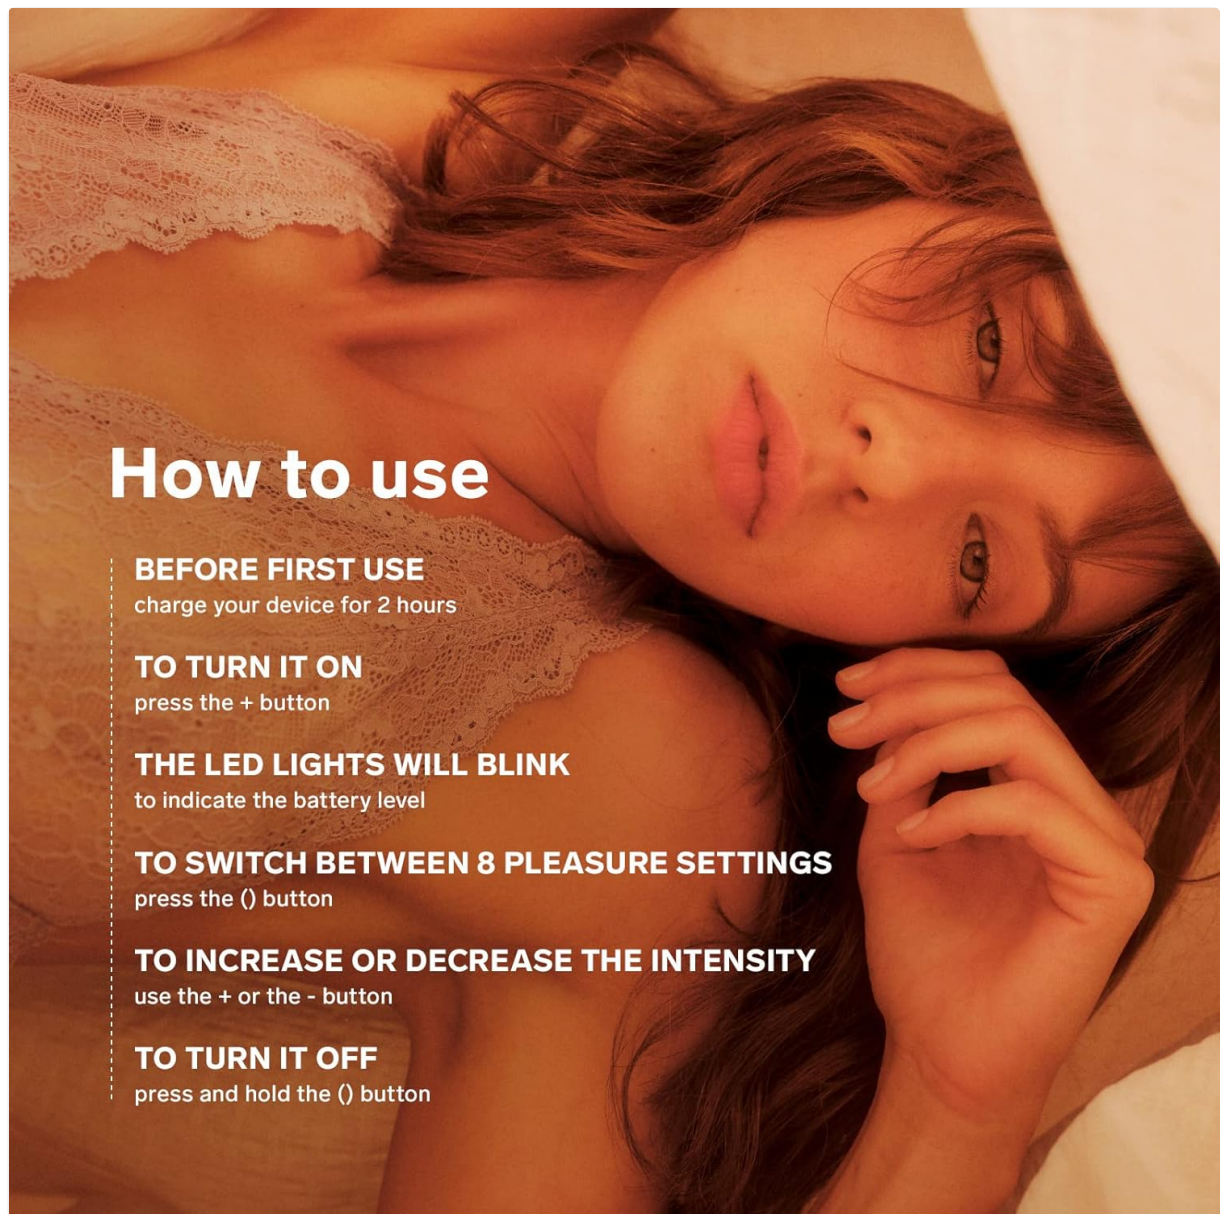

## How to use

### **BEFORE FIRST USE**

charge your device for 2 hours

### **TO TURN IT ON**

press the + button

### **THE LED LIGHTS WILL BLINK**

to indicate the battery level

### **TO SWITCH BETWEEN 8 PLEASURE SETTINGS**

press the () button

### **TO INCREASE OR DECREASE THE INTENSITY**

use the + or the - button

### **TO TURN IT OFF**

press and hold the () button

Image: A visual guide detailing the operational steps for the LELO SILA Cruise, from initial charge to power off.

## 5.2 Usage Tips

- Apply a small amount of water-based lubricant to the device's mouth and the desired area for enhanced comfort and sensation.
- Position the large mouth of the device over the clitoral area.
- Experiment with different settings and intensities to find what is most pleasurable for you.
- The Cruise Control™ feature will automatically maintain consistent intensity even with increased pressure.

## 6. CARE AND MAINTENANCE

### 6.1 Cleaning

Always clean your LELO SILA Cruise thoroughly before and after each use.

1. Wash the device with warm water and a LELO Toy Cleaner, or a mild soap.
2. Rinse thoroughly with clean water.
3. Pat dry with a lint-free cloth or towel.
4. Allow the device to air dry completely before storing.

**Important:** Avoid using cleaners containing alcohol, petroleum, or acetone, as these can damage the silicone.

## 6.2 Storage

Store your LELO SILA Cruise in the provided satin pouch in a dust-free environment, away from extreme temperatures and direct sunlight. Avoid storing it with other toys made of different materials to prevent potential damage or reactions.

## 7. TROUBLESHOOTING

Problem	Solution
Device does not turn on.	Ensure the device is fully charged. Connect to the charger and check if LED lights blink. If not, try a different USB port or cable.
Device does not hold a charge.	Ensure the charging cable is securely connected. If the issue persists, contact LELO customer support.
Vibrations feel weak or inconsistent.	The battery might be low; recharge the device. Ensure the device is clean and free of debris.
Buttons are unresponsive.	Ensure the device is not locked (if applicable, though not a stated feature for this model). Try fully charging the device. If unresponsive, contact support.

## 8. SPECIFICATIONS

Feature	Detail
Model Number	LE-8571
Material	Body-safe Silicone
Dimensions (L x W x H)	3.15 x 2.95 x 1.38 inches
Weight	3.7 ounces
Battery	1 Lithium Ion (included)
Settings	8 vibration patterns
Waterproof	Yes, 100% submersible
Manufacturer	LELO

## 9. WARRANTY AND SUPPORT

### 9.1 Warranty Information

Your LELO SILA Cruise comes with a **1-year warranty** covering manufacturing defects. Additionally, LELO offers a **10-year quality guarantee**, providing a discount on future purchases if a defect is found after the initial warranty period. Please refer to the included Warranty Registration Card for full details and to register

your product.

## **9.2 Customer Support**

For further assistance, troubleshooting, or product inquiries, please visit the official LELO support website: [LELO.com/support](https://LELO.com/support).