

[Manuals.plus](#) /

> [LELO](#) /

> LELO SILA Cruise Suction Vibrator User Manual

LELO SILA Cruise

LELO SILA Cruise Suction Vibrator User Manual

Model: SILA Cruise (8588)

INTRODUCTION

The LELO SILA Cruise is designed to provide external stimulation using gentle sonic waves. It features a wide mouth for engaging the clitoral area and incorporates Cruise Control technology to maintain consistent pulsation intensity during use. The device is constructed from extra-soft, body-safe silicone for comfort and safety.



Image: The LELO SILA Cruise device in Lilac color, showcasing its ergonomic design and wide mouth for stimulation.

SETUP AND FIRST USE


Before using your LELO SILA Cruise for the first time, ensure it is fully charged. This process typically takes 2 hours.

1. Unpack the device and all accessories from the packaging.
2. Locate the charging port on the device.
3. Connect the provided USB charging cable to the device and a suitable USB power source.
4. Allow the device to charge for approximately 2 hours until the LED indicator shows a full charge.

SILA™ Cruise
sonic clitoral massager

MANUAL
how to use guide

MOISTURIZER SACHET
water-based lubricant
5 ml / 0.17 fl. oz.

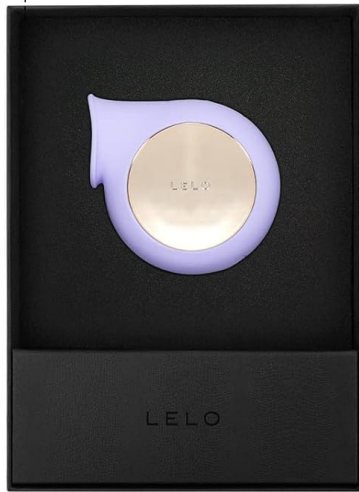

CHARGING CORD
USB cable



WARRANTY CARD
verifies product authenticity

SATIN POUCH
for storage

Image: The LELO SILA Cruise packaging contents, including the device, manual, moisturizer sachet, charging cord, warranty card, and satin pouch.

OPERATING INSTRUCTIONS

The LELO SILA Cruise features intuitive controls for a personalized experience.

- **To Turn On:** Press the **+** button. The LED lights will blink to indicate the battery level.
- **To Switch Between 8 Pleasure Settings:** Press the **()** button (the central button).
- **To Increase or Decrease Intensity:** Use the **+** or **-** buttons.
- **To Turn Off:** Press and hold the **()** button (the central button).

Key Features:

- **Gentle Sonic Waves:** Provides external stimulation without direct contact.
- **Large Mouth:** Designed to engage the entire clitoral area for a broad sensation.
- **Cruise Control:** Automatically increases intensity when pressed firmly against the body, ensuring consistent power.
- **Extra-Soft Silicone:** Made from ultra-smooth, body-safe silicone.
- **8 Settings:** Offers a range of sensations from gentle murmurs to satisfying pulses.
- **100% Waterproof:** Suitable for use in the bath or shower.



Features



SONSONIC™ TECHNOLOGY

without making direct contact, sonic waves offer fast yet gentle clitoral stimulation



CRUISE CONTROL™

automatically increases intensity when pressed hard against the body



8 SETTINGS

from a teasing murmur to a satisfying pulse



100% WATERPROOF

perfect for the bath and shower



CERTIFIED BODY-SAFE

the highest standard of safety and construction



GLOBAL BESTSELLER

loved by millions

Image: A visual guide illustrating the power, mode, and intensity buttons on the LELO SILA Cruise and their functions.



Image: An annotated diagram of the LELO SILA Cruise, pointing out its gentle sonic waves, large mouth, extra-soft silicone, and Cruise Control technology.

CARE AND MAINTENANCE

Proper care ensures the longevity and hygiene of your LELO SILA Cruise.

- **Cleaning:** The device is 100% waterproof. Clean thoroughly after each use with warm water and a toy cleaner or mild soap. Rinse well.
- **Drying:** Pat dry with a lint-free cloth.
- **Storage:** Store in the provided satin pouch in a cool, dry place, away from direct sunlight and extreme temperatures. Avoid storing with other toys made of different materials to prevent damage.
- **Lubrication:** Use only water-based lubricants with your LELO SILA Cruise. Silicone-based lubricants can damage the silicone material.

TROUBLESHOOTING

If you encounter any issues with your LELO SILA Cruise, refer to the following common solutions:

- **Device Not Turning On:**
 - Ensure the device is fully charged. Connect it to the charger for at least 2 hours.

- Verify that the power button (+) is pressed firmly and held for a moment.
- **Difficulty Changing Settings/Intensity:**
 - Ensure the device is turned on.
 - Press the central (O) button to cycle through modes.
 - Use the + and - buttons for intensity adjustments. Ensure a clear, direct press on the buttons.
- **Reduced Performance:**
 - Recharge the device fully. Performance may decrease with low battery.
 - Ensure the device is clean and free from debris that might obstruct the sonic waves.

If problems persist, please contact LELO customer support.

PRODUCT SPECIFICATIONS

Brand	LELO
Model Number	8588
Dimensions (L x W x H)	3.15 x 2.95 x 1.38 inches
Weight	3.88 ounces
Material	Body-safe Silicone
Color	Lilac
Battery	1 Lithium Ion (included)
Battery Life (Standby)	Up to 90 days
Vibration Settings	8
Waterproof	Yes, 100%

WARRANTY INFORMATION

LELO products are manufactured to the highest standards and come with comprehensive warranty coverage.

- **1-Year Warranty:** Your LELO SILA Cruise is covered by a 1-year warranty from the date of purchase, protecting against manufacturing defects.
- **10-Year Quality Guarantee:** Following the expiration of the 1-year warranty, a 10-year quality guarantee covers your product for an additional ten years, ensuring long-term product quality.

Please retain your proof of purchase for warranty claims. For detailed terms and conditions, refer to the warranty card included with your product or visit the official LELO website.

CUSTOMER SUPPORT

For further assistance, product inquiries, or warranty claims, please contact LELO customer support.

Visit the official LELO website for contact information and frequently asked questions:

www.lelo.com