

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Matchbox](#) /

› [Matchbox Action Drivers Volcano Escape Playset HHW21 Instruction Manual](#)

Matchbox HHW21

Matchbox Action Drivers Volcano Escape Playset (Model HHW21)

Official Instruction Manual

1. SAFETY INFORMATION

WARNING: Not suitable for children under 36 months.

Always supervise children during play. Keep small parts away from young children to prevent choking hazards. Ensure all components are securely assembled before use.

2. PACKAGE CONTENTS

Verify that all items are present before assembly:

- Matchbox Action Drivers Volcano Escape Playset components
- 1 Matchbox vehicle
- 3 LR44 batteries (included)
- Instruction sheet (this manual)



Figure 2.1: Product packaging showing included items and features.

3. SETUP AND ASSEMBLY

Adult assembly is required. Follow these steps to assemble your playset:

1. Carefully unpack all components from the box.
2. Connect the base pieces to form the playset foundation. Ensure all tabs click securely into place.
3. Attach the volcano structure to the designated area on the base.
4. Install the elevator tower and ramp sections.
5. Place the zipline mechanism and palm trees as indicated in the diagrams.
6. Insert the 3 LR44 batteries into the designated battery compartment, typically located at the base of the volcano, ensuring correct polarity.
7. Place the lava rock "balls" into the volcano's crater.



Figure 3.1: Fully assembled Matchbox Action Drivers Volcano Escape Playset.

4. OPERATING INSTRUCTIONS

4.1. Elevator Operation

Place a Matchbox vehicle into the elevator platform. Manually raise the elevator to transport the vehicle to the upper level of the playset. Once at the top, the vehicle can proceed onto the ramps.



Figure 4.1: Demonstrating the vehicle elevator in use.

4.2. Volcano Eruption and Zipline Escape

To activate the volcano's lights and sounds, press the designated lever or button near the volcano's base. This action will also trigger the lava rock "explosion" from the crater. As vehicles drive down from the volcano, they can activate the researcher's zipline escape mechanism, sending the figure sliding to safety.



Figure 4.2: The volcano erupting and the zipline in motion.

4.3. Navigating Route Breakers

The playset features various route breakers and path options. For example, a movable gorilla figure can block one path, while a white barrier can be adjusted to direct vehicles down different routes, adding dynamic play scenarios.

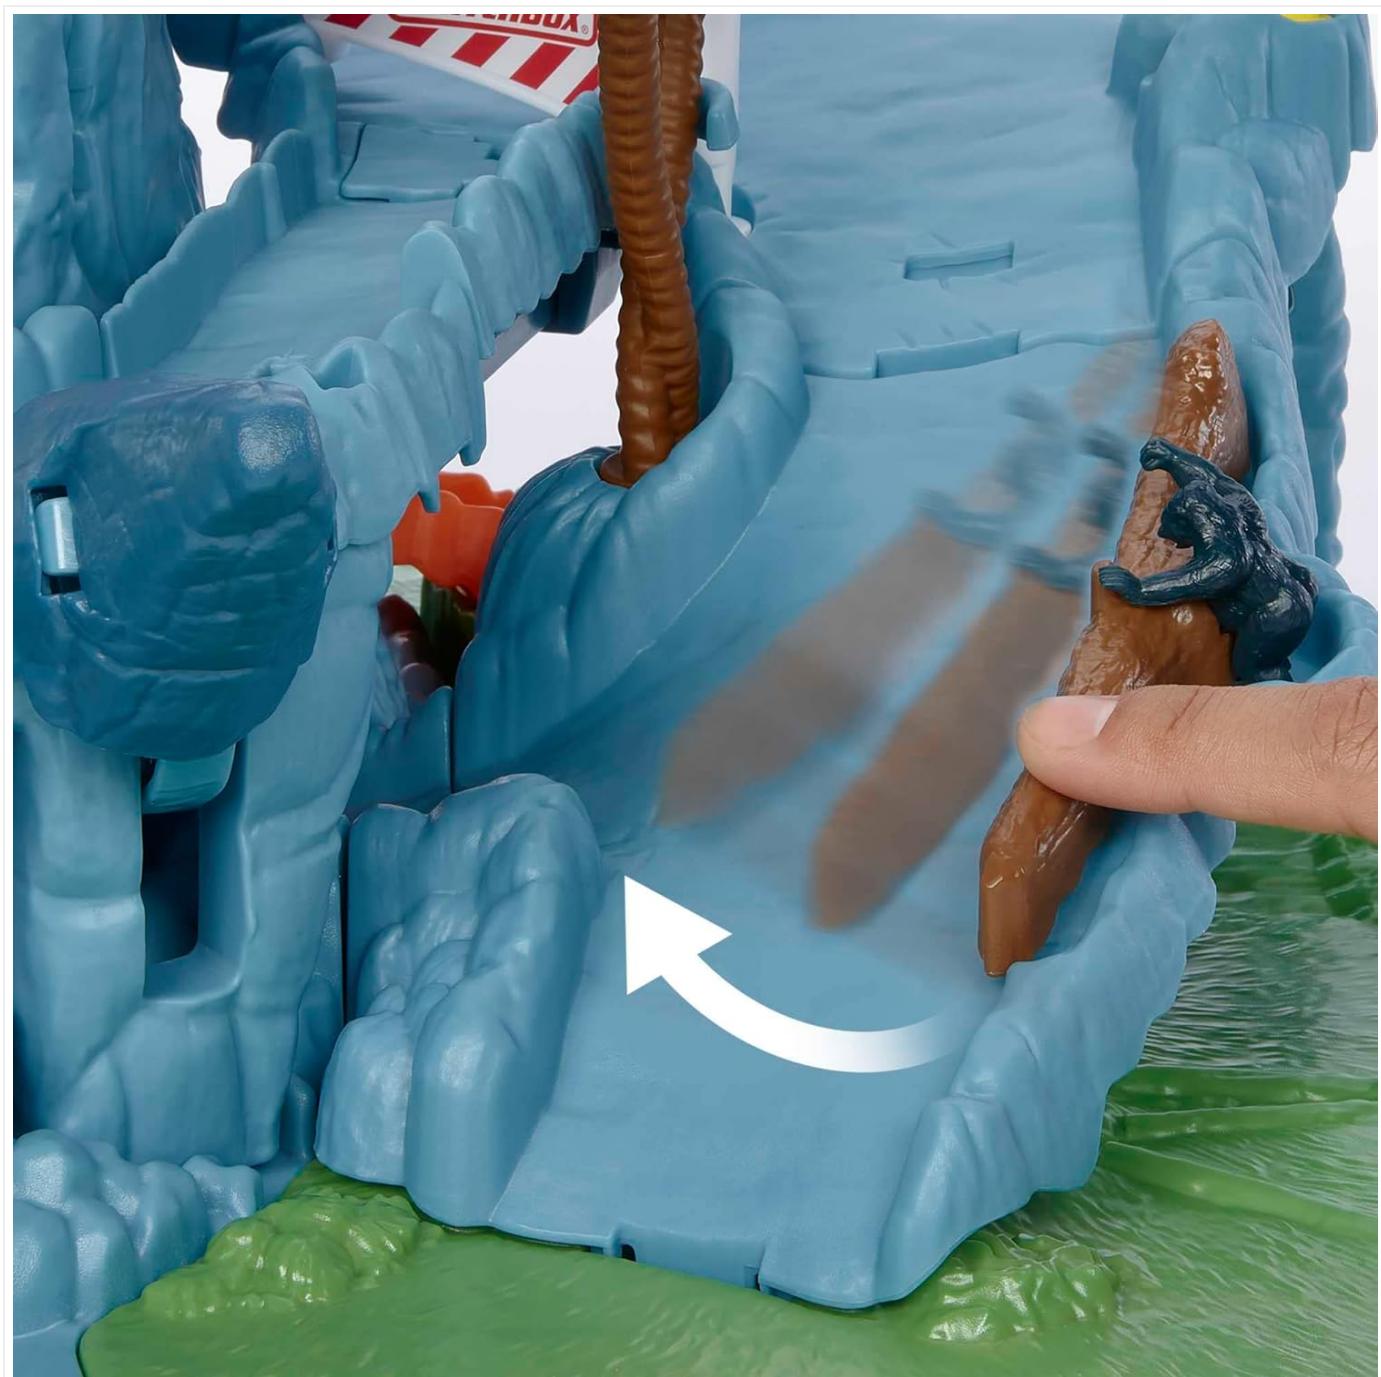


Figure 4.3: Adjustable route elements for varied play.

4.4. Connecting to Other Playsets

The Matchbox Action Drivers Volcano Escape Playset is designed to connect with other Matchbox Action Drivers sets and Hot Wheels tracks, allowing for expanded play environments and custom track configurations. Look for the designated connection points on the base of the playset.

4.5. Product Demonstration Video



Video 4.1: A demonstration of the Matchbox Action Drivers Volcano Escape Playset's interactive features, including the elevator, volcano eruption, and various track elements.

5. MAINTENANCE

- **Cleaning:** Wipe the playset with a damp cloth. Do not immerse in water.
- **Battery Replacement:** When sounds and lights diminish, replace the 3 LR44 batteries. Use a small screwdriver to

open the battery compartment, replace old batteries with new ones, ensuring correct polarity, and securely close the compartment.

- Storage:** Store the playset in a cool, dry place away from direct sunlight when not in use.

6. TROUBLESHOOTING

Problem	Solution
Volcano lights/sounds not working.	Check battery installation. Ensure batteries are new and correctly oriented. Replace if necessary.
Vehicles not moving smoothly on ramps.	Ensure all track pieces are securely connected. Check for any obstructions on the track.
Zipline not functioning.	Verify the zipline mechanism is properly attached and not tangled. Ensure the vehicle triggers it correctly.

7. SPECIFICATIONS

Brand: Matchbox

Model Number: HHW21

Product Dimensions: 13.75 x 13.75 x 7.3 inches

Item Weight: 4.62 pounds

Manufacturer Recommended Age: 36 months - 6 years

Batteries: 3 LR44 batteries required (included)

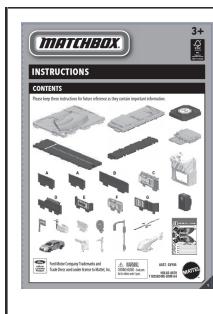
Manufacturer: Mattel

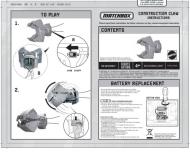
8. WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the contact details provided on the product packaging or visit the official Matchbox website.

© 2025 Matchbox. All rights reserved.

Related Documents - HHW21

	<p>Matchbox Action Drivers Police Station Playset: Assembly, Play, and Maintenance Guide</p> <p>Official instructions and guide for the Matchbox Action Drivers Police Station playset (Model HDL62). Learn how to assemble, play, replace batteries, and connect with other Matchbox and Hot Wheels sets for expanded city play.</p>
--	---

	<p>Matchbox Action Drivers Construction Crane Truck Instructions</p> <p>Detailed instructions for assembling and playing with the Matchbox Action Drivers Construction Crane Truck, including assembly steps, play features, and safety warnings.</p>
	<p>Matchbox Action Drivers City Play Set Assembly and Play Instructions</p> <p>Comprehensive guide for assembling and playing with the Matchbox Action Drivers City play set. Includes step-by-step assembly instructions, play features, and connectivity information.</p>
	<p>Matchbox Airport Adventure Playset HCN34 - Assembly, Features, and Play Guide</p> <p>Comprehensive guide for the Matchbox Airport Adventure Playset (HCN34), covering assembly instructions, interactive features like plane and car activation, battery replacement, connectivity with other sets, and safety/recycling information. Includes detailed descriptions of visual elements.</p>
	<p>Matchbox Super Clean Car Wash Playset: Assembly and Play Instructions</p> <p>Detailed instructions for assembling, playing with, and recycling the Matchbox Super Clean Car Wash playset. Includes battery replacement and connection tips.</p>
	<p>Matchbox Construction Claw Toy: Instructions & Battery Replacement Guide (N9761-0920)</p> <p>Official instructions for the Matchbox Construction Claw toy (Model N9761-0920). Includes how to play, battery replacement steps, safety warnings, and recycling information.</p>