

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [vidaXL](#) /

› [vidaXL Industrial Steel TV Stand \(Model 336231\) Instruction Manual](#)

vidaXL 336231

vidaXL Industrial Steel TV Stand

Model: 336231 | Brand: vidaXL

1. INTRODUCTION AND OVERVIEW

Thank you for choosing the vidaXL Industrial Steel TV Stand. This manual provides essential information for the safe assembly, operation, and maintenance of your new TV stand. Please read these instructions carefully before beginning assembly and retain them for future reference.

This TV stand is designed to provide a sturdy and stylish solution for your media equipment. It features a durable steel construction, ample storage, and practical cable management.

Key Features:

- Sturdy Steel Construction:** Built from high-quality alloy steel for durability.
- Ample Storage:** Two doors with an internal shelf provide organized space for media accessories.
- Adjustable Levellers:** Feet equipped with levellers to ensure stability on uneven surfaces.
- Cable Management:** Integrated holes on the back panel help keep cables tidy.
- Safety Wall Attachment:** Includes a device to secure the stand to the wall, preventing overturning.



Image 1.1: The vidaXL Industrial Steel TV Stand in Anthracite color, showcasing its design and functionality in a living space.

2. SAFETY INFORMATION

WARNING: Failure to follow these safety instructions may result in injury or damage to the product.

- Always secure the TV stand to the wall using the provided wall attachment device to prevent overturning. This is crucial for safety, especially in households with children or pets.
- Do not exceed the maximum weight capacity of 220.5 lbs (100 kg) for the entire unit and 110 lbs (50 kg) for the internal shelf.
- Ensure all screws and fasteners are tightened securely during assembly. Periodically check and retighten as necessary.
- Place the TV stand on a flat, stable, and level surface.
- Keep small parts and packaging materials away from children during assembly to prevent choking hazards.

3. PACKAGE CONTENTS

Before assembly, please verify that all components listed below are present and undamaged. If any parts are missing or damaged, do not proceed with assembly and contact customer support.

- TV Stand main body components (panels, doors, shelves)
- Legs with adjustable levellers
- Assembly hardware (screws, bolts, hinges, handles)
- Wall attachment device
- Instruction Manual

Note: The exact quantity of each hardware item can be found on the separate parts list included in your packaging.

4. SETUP AND ASSEMBLY

Assembly is required for this product. It is recommended to have two people for assembly. Please follow these steps carefully.

Tools Required (Not Included):

- Phillips head screwdriver
- Hammer (optional, for dowels)
- Drill (for wall attachment)
- Level

Assembly Steps:

1. **Unpack and Identify Parts:** Carefully unpack all components and lay them out on a soft, clean surface to prevent scratches. Identify each part using the provided parts list.
2. **Assemble the Main Frame:** Attach the side panels to the top and bottom panels using the designated screws and connectors. Ensure all connections are secure.
3. **Install the Internal Shelf:** Insert the internal shelf into the pre-drilled holes. Secure it in place if fasteners are provided.
4. **Attach the Back Panel:** Secure the back panel to the main frame. Ensure the cable management holes are correctly oriented towards the rear.

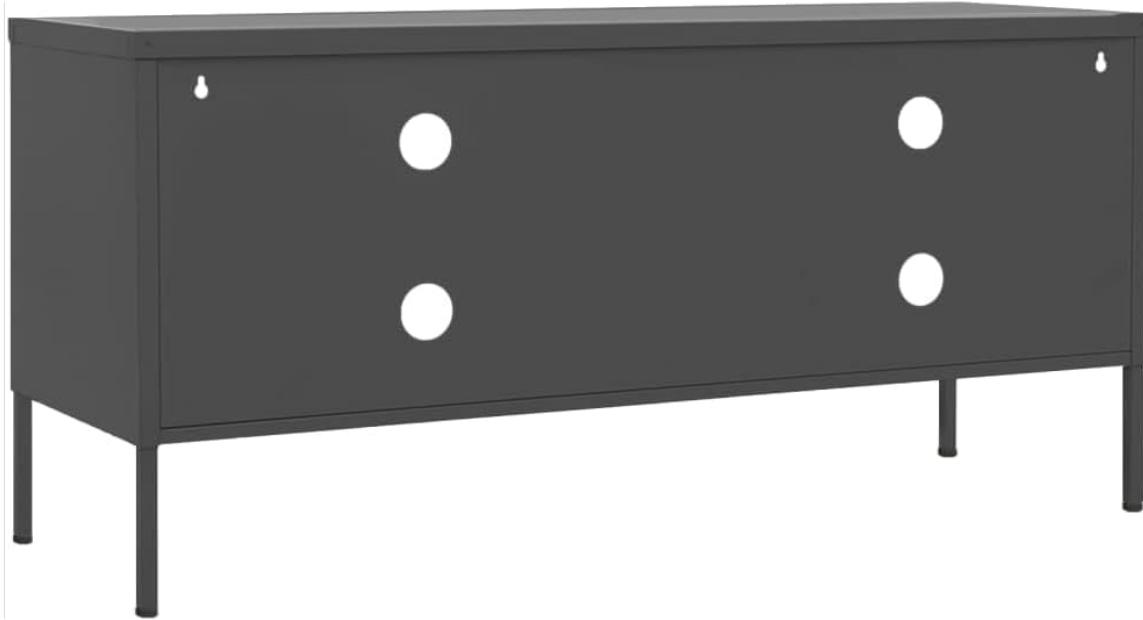


Image 4.1: Rear view of the TV stand, highlighting the four circular cable management holes for organizing wires.

5. **Attach the Legs:** Securely fasten the four legs to the bottom panel of the TV stand.



Image 4.2: Side profile of the TV stand, illustrating the sturdy legs and the adjustable levellers at their base.

6. **Install the Doors and Handles:** Attach the hinges to the doors and then to the main frame. Adjust the hinges to ensure the doors align properly. Install the handles on the doors.



Image 4.3: Interior view of the TV stand with both doors open, revealing the central shelf for storage.

7. **Adjust Levellers:** Once the stand is in its desired location, adjust the levellers on the bottom of each leg to ensure the stand is stable and level.
8. **Secure to Wall:** Using the provided wall attachment device, secure the TV stand to a solid wall. Follow the instructions included with the wall attachment kit for proper installation. This step is critical for safety.

5. OPERATING INSTRUCTIONS

The vidaXL Industrial Steel TV Stand is designed for straightforward use.

- **Placement:** Position your television and other media devices on the top surface of the stand. Ensure the weight does not exceed the stated capacity.
- **Storage:** Utilize the internal shelf and two compartments behind the doors to store DVDs, remote controls, gaming consoles, or other accessories.
- **Cable Management:** Route all power cords and signal cables through the cable management holes on the back panel to maintain a neat and organized appearance.
- **Adjusting Stability:** If the stand feels wobbly, re-adjust the levellers on the bottom of the legs until it is stable on your floor surface.

6. MAINTENANCE

Proper care will ensure the longevity and appearance of your TV stand.

- **Cleaning:** Wipe the surfaces with a soft, damp cloth. Avoid using harsh chemicals, abrasive cleaners, or polishes that may damage the finish.
- **Dusting:** Regularly dust the stand with a dry, soft cloth.
- **Hardware Check:** Periodically check all screws and fasteners to ensure they remain tight. Re-tighten if necessary.
- **Avoid Moisture:** Do not place hot or wet items directly on the surface. Use coasters or protective pads.
- **Sunlight Exposure:** Avoid prolonged exposure to direct sunlight to prevent fading of the finish.

7. TROUBLESHOOTING

If you encounter any issues with your TV stand, refer to the following common problems and solutions:

- **Stand is Wobbly:**

Solution: Ensure the stand is on a flat surface. Adjust the individual levellers on the bottom of each leg until the stand is stable and does not rock.

- **Doors Do Not Align Properly:**

Solution: Check the hinge adjustments. Most hinges allow for minor adjustments (up/down, left/right, in/out) using a screwdriver. Loosen the hinge screws slightly, adjust the door position, and then retighten. Ensure the stand is level before adjusting doors.

- **Missing Parts or Damaged Components:**

Solution: Do not proceed with assembly. Contact vidaXL customer support immediately with your purchase details and a description of the issue.

- **Difficulty During Assembly:**

Solution: Review the assembly steps carefully. Ensure you are using the correct hardware for each step. If instructions are unclear, refer to the diagrams or seek assistance from another person.

8. SPECIFICATIONS



Image 8.1: Dimensional diagram of the TV stand, indicating a width of 105 cm, height of 50 cm, and depth of 35 cm.

Attribute	Detail
Brand	vidaXL
Model Number	336231
Color	Anthracite
Material	Alloy Steel
Product Dimensions (D x W x H)	13.8" x 41.3" x 19.7" (35 cm x 105 cm x 50 cm)
Item Weight	34.8 lbs (15.8 kg)

Maximum Total Load Capacity	220.5 lbs (100 kg)
Maximum Shelf Load Capacity	110 lbs (50 kg)
Number of Doors	2
Number of Shelves	1 (internal)
Assembly Required	Yes
Special Features	Adjustable Levellers, Cable Management Holes, Wall Attachment Device

9. WARRANTY AND SUPPORT

For warranty information, please refer to the documentation included with your purchase or visit the official vidaXL website. Warranty terms and conditions may vary by region and retailer.

If you require technical assistance, have questions about assembly, or need to report missing/damaged parts, please contact vidaXL customer support through their official website or the retailer from whom you purchased the product. Please have your model number (336231) and purchase date ready when contacting support.