

[Manuals.plus](#) /

› [Redi-Remote](#) /

› Redi-Remote Replacement Remote Control Instruction Manual for Cambridge Soundworks Model 88CD

Redi-Remote RT88CDREMOTE

Redi-Remote Replacement Remote Control Instruction Manual

For Cambridge Soundworks Model 88CD Radio/CD Player

INTRODUCTION

This manual provides comprehensive instructions for the Redi-Remote replacement remote control, designed to be fully compatible with your Cambridge Soundworks Model 88CD Radio/CD Player. This remote is a custom replacement and is not an original equipment manufacturer (OEM) remote. It is engineered to perform all functions of the specific unit it is designed to control without requiring additional programming.

Please read this manual carefully before using your new remote control to ensure proper operation and to maximize its functionality.

PRODUCT OVERVIEW



Image: Front view of the Redi-Remote replacement remote control. The top section shows primary controls like Power, Volume, Mute, Channel, Input, Display, Recall, and a numeric keypad. The lower section, initially covered by a sliding panel, reveals additional function buttons for CD/Radio operations.

The Redi-Remote for the Model 88CD features a two-part design. The upper section contains commonly used controls,

while the lower section, accessible by sliding down a cover, provides model-specific functions for your CD/Radio player.

SETUP

Battery Installation

Your Redi-Remote requires **4 AAA batteries** for operation. Batteries are not included.

1. Locate the battery compartment on the back of the remote control.
2. Slide open the battery compartment cover.
3. Insert 4 AAA batteries, ensuring the correct polarity (+ and -) as indicated inside the compartment.
4. Close the battery compartment cover securely.

No programming is required for this remote control. It is ready to use once batteries are installed.

OPERATING INSTRUCTIONS

Basic Functions (Upper Section)

- **PWR (Power):** Turns the CD/Radio player on or off.
- **INPUT:** Selects the audio input source (e.g., CD, Radio, AUX).
- **VOL+ / VOL-:** Increases or decreases the volume level.
- **MUTE:** Silences the audio output. Press again to restore sound.
- **CH+ / CH-:** Navigates through radio presets or tracks on a CD.
- **DISP (Display):** Changes or shows information on the unit's display.
- **MENU:** Accesses the unit's menu system.
- **RECALL:** Recalls previous settings or information.
- **Numeric Keypad (0-9):** Used for direct input of radio frequencies, track numbers, or menu selections.
- **ENT (Enter):** Confirms selections made with the numeric keypad or within menus.
- **SLEEP:** Activates the sleep timer function.

Advanced Functions (Lower Section - Slide Down)

To access additional functions, slide down the cover located on the lower half of the remote control. This reveals a set of model-specific buttons:

- **MUTE:** (Duplicate button) Silences the audio output.
- **VOL+ / VOL-:** (Duplicate buttons) Adjusts volume.
- **FM / AM:** Selects FM or AM radio bands.
- **CD / AUX:** Selects CD player or Auxiliary input.
- **STEREO:** Toggles between stereo and mono audio modes.
- **TUNING + / -:** Manually tunes radio frequencies up or down.
- **1-6 (Numbered Presets):** Directly selects stored radio presets or CD tracks.
- **ALARM:** Accesses or sets the alarm function.
- **SLEEP:** (Duplicate button) Activates the sleep timer.
- **SNOOZE:** Activates the snooze function for the alarm.

- **POWER:** (Duplicate button) Turns the unit on or off.

MAINTENANCE

Cleaning

To clean your remote control, use a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Do not use harsh chemicals or abrasive materials, as they may damage the remote's surface or buttons.

Battery Replacement

Replace batteries when the remote's response becomes sluggish or stops working. Always replace all 4 AAA batteries at the same time with new ones. Do not mix old and new batteries, or different types of batteries.

Dispose of used batteries according to local regulations.

TROUBLESHOOTING

- **Remote not responding:**
 - Check if the batteries are inserted correctly with the proper polarity.
 - Replace old batteries with new ones.
 - Ensure there are no obstructions between the remote and the CD/Radio player's infrared sensor.
 - Make sure you are within the effective range of the remote control.
- **Specific buttons not working:**
 - Clean the remote's surface, especially around the non-working buttons, to remove any dirt or debris.
 - Ensure the sliding cover is fully open if you are trying to use a function from the lower section.

If issues persist after following these steps, please refer to the Support section.

SPECIFICATIONS

- **Product Dimensions:** 7 x 2.5 x 1 inches (approximately)
- **Item Weight:** 5 ounces (approximately, without batteries)
- **Batteries Required:** 4 AAA batteries
- **Connectivity Technology:** Infrared (IR)
- **Max Number of Supported Devices:** 1 (specifically for the Cambridge Soundworks Model 88CD)
- **Special Feature:** No Programming Needed

WARRANTY AND SUPPORT

This Redi-Remote replacement remote control is designed for reliable performance. If you have any concerns with the remote after purchase, or require assistance, please contact Redi-Remote directly through the seller platform where you purchased the product. They will be able to provide support and address any issues you may encounter.

Please note that Redi-Remotes cannot be programmed to control any auxiliary devices; they are designed to perform every function for the specific unit they are intended to control.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question