

Manuals.plus /

› Hisense /

› Hisense WSFF1501 15 Kg Semi-Automatic Washing Machine User Manual

Hisense WSFF1501

Hisense WSFF1501 15 Kg Semi-Automatic Washing Machine User Manual

1. INTRODUCTION

This manual provides essential instructions for the safe and efficient operation, installation, and maintenance of your Hisense WSFF1501 15 Kg Semi-Automatic Washing Machine. Please read this manual thoroughly before using the appliance and retain it for future reference.

2. SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury to persons.

- Ensure the washing machine is properly grounded.
- Do not operate the machine if the power cord or plug is damaged.
- Keep children and pets away from the appliance during operation.
- Do not wash items that are soiled with flammable substances.
- Unplug the machine before cleaning or performing any maintenance.
- Do not immerse the electrical parts in water.
- This machine is designed for washing clothes only. Do not use it for other purposes.

3. PRODUCT OVERVIEW

Familiarize yourself with the components of your Hisense WSFF1501 washing machine.





Figure 3.1: Front view of the Hisense WSFF1501 washing machine, showing its compact design and top-loading access.



Figure 3.2: Close-up of the control panel with two rotary knobs for Wash Timer and Wash Selector.

The control panel features two main rotary knobs:

- **Wash Timer:** Sets the duration of the wash cycle (e.g., 0-15 minutes).
- **Wash Selector:** Selects the operation mode: Wash, Rinse, or Drain.

4. SETUP AND INSTALLATION

Unpacking

Carefully remove all packaging materials. Inspect the machine for any damage incurred during transit. Keep packaging materials away from children.

Placement

Place the washing machine on a firm, level surface. Ensure there is adequate space around the machine for

ventilation and operation. Avoid direct sunlight or excessively humid environments.

Mayor capacidad

Hazlo todo de una sola vez

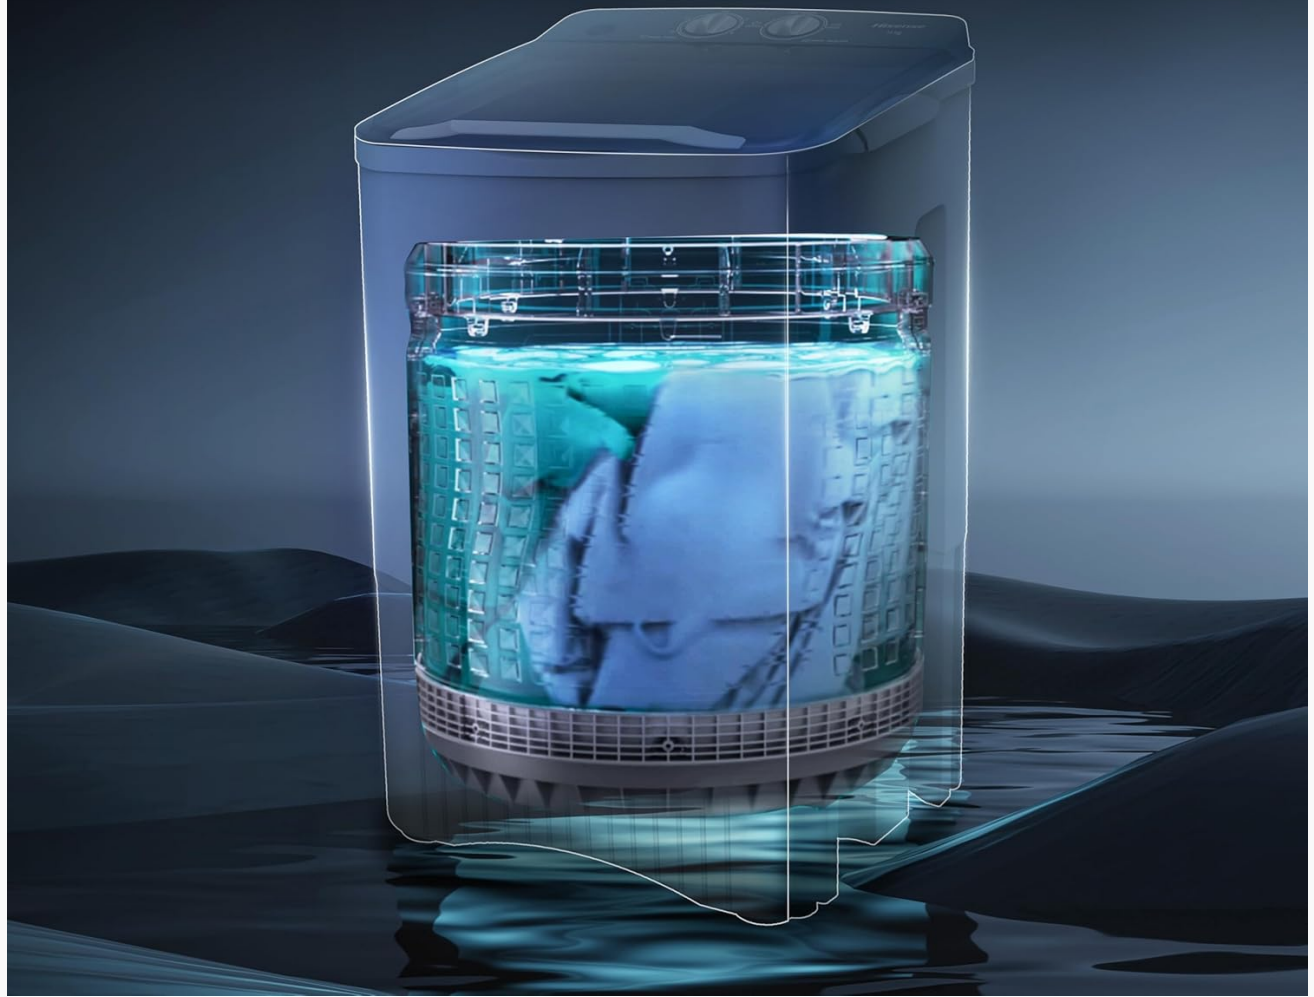


Figure 4.1: Dimensions of the Hisense WSFF1501 washing machine: approximately 54.8 cm (width) x 51.8 cm (depth) x 90.5 cm (height).

Water Connection

1. Connect the water inlet hose to a cold water tap.
2. Connect the other end of the hose to the water inlet on the washing machine.
3. Ensure all connections are tight to prevent leaks.

Drain Hose

Position the drain hose to allow water to flow freely into a sink or drain pipe. Ensure the hose is not kinked or blocked.

5. OPERATING INSTRUCTIONS

Before Washing

- Sort clothes by fabric type, color, and degree of soiling.
- Empty pockets and close zippers.
- For delicate items, use a mesh laundry bag.

Washing Procedure

1. **Load Laundry:** Open the lid and place clothes loosely into the wash tub. Do not overload the machine. The maximum capacity is 15 Kg.



Figure 5.1: View of the washing machine's internal drum, designed for large capacity loads.

2. **Add Water:** Fill the wash tub with water to the appropriate level for your load.
3. **Add Detergent:** Add the recommended amount of detergent directly into the wash tub.
4. **Select Wash Cycle:** Turn the **Wash Selector** knob to 'Wash'.
5. **Set Wash Timer:** Turn the **Wash Timer** knob to the desired washing duration (e.g., 5-15 minutes). The machine will start washing.
6. **Rinse Cycle:** After the wash cycle is complete, turn the **Wash Selector** knob to 'Drain' to remove the soapy water. Then, refill the tub with clean water, turn the **Wash Selector** to 'Rinse', and set the **Wash Timer** for the

desired rinse duration. Repeat if necessary.

7. **Drain Water:** Once rinsing is complete, turn the **Wash Selector** knob to 'Drain' to empty all water from the tub.

Note: This Hisense WSFF1501 model is a semi-automatic washing machine designed for washing and rinsing. It features a drain function to remove water from the tub. It does not include a spin-dry function to extract water from clothes for drying. Clothes will remain wet after the wash and rinse cycles and will require manual wringing or air drying.

6. MAINTENANCE

Cleaning the Exterior

Wipe the exterior of the machine with a soft, damp cloth. Do not use abrasive cleaners or solvents.

Cleaning the Wash Tub

Periodically clean the wash tub to prevent detergent residue buildup. Run an empty wash cycle with hot water and a cup of white vinegar or a washing machine cleaner.

Lint Filter (if applicable)

Check and clean the lint filter (if present) after every few washes to ensure efficient operation.

7. TROUBLESHOOTING

If you encounter any issues, refer to the following table before contacting customer support.

Problem	Possible Cause	Solution
Machine does not start	Power cord unplugged; Power outage; Lid not closed properly.	Check power connection; Check circuit breaker; Ensure lid is fully closed.
No water filling	Water tap closed; Water inlet hose kinked or blocked.	Open water tap; Straighten or clear hose.
Water not draining	Drain hose kinked or blocked; Drain selector not set to 'Drain'.	Straighten or clear drain hose; Set Wash Selector to 'Drain'.
Excessive vibration/noise	Machine not level; Uneven load of laundry.	Adjust leveling feet; Redistribute laundry evenly.

8. SPECIFICATIONS

Feature	Detail
Brand	Hisense
Model Number	WSFF1501
Type	Semi-Automatic Washing Machine
Capacity	15 Kg / 85 Liters
Access Location	Top Load
Control Panel	2-knob (Wash Timer, Wash Selector)
Wash Cycle Options	Wash, Rinse, Drain
Color	White/Gray
Material	Plastic
Product Dimensions (W x D x H)	54.99 x 51.99 x 91.01 cm
Product Weight	13.5 kg

9. WARRANTY INFORMATION

Hisense products are manufactured to high-quality standards and are warranted against defects in materials and workmanship. For specific warranty terms and conditions, please refer to the warranty card included with your product or visit the official Hisense website for your region. Keep your purchase receipt as proof of purchase for warranty claims.

10. CUSTOMER SUPPORT

Should you require assistance or have questions regarding your Hisense WSFF1501 washing machine, please contact our customer support team:

- **Phone Support:** 800 0088 880 or +55 41 53 1200
- **Online Support:** Visit hisense.com.mx and look for the Technical Support Chat option (usually located in the bottom left corner).

Service Hours:

- Monday - Friday: 9:00 AM - 9:00 PM
- Saturday: 9:00 AM - 3:00 PM