

[Manuals.plus](#) /

› [ECONTROLLY](#) /

› ECONTROLLY Remote Control User Manual for Element Smart TV Models ELSW3917BF, E4SFT5517, E4SFT5017, E4STA5017

ECONTROLLY RC-ELEMENT-YUVPN-ECO

ECONTROLLY Remote Control User Manual

MODEL: RC-ELEMENT-YUVPN-ECO

Compatible with Element Smart TV Models: ELSW3917BF, E4SFT5517, E4SFT5017, E4STA5017

1. INTRODUCTION

This manual provides instructions for the ECONTROLLY Remote Control, designed for use with specific Element Smart TV models. This remote control offers direct functionality without requiring any programming or setup beyond battery installation.





Image 1.1: Front view of the ECONTROLLY Remote Control. This image displays the full layout of the remote, including the power button, number pad, navigation controls, volume and channel buttons, and dedicated app buttons for YouTube, Vudu, Netflix, and Pandora.

2. SETUP

2.1 Battery Installation

To begin using your remote control, you must install two AAA batteries. Follow these steps:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or outwards to open it.
3. Insert two new AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.

4. Replace the battery compartment cover by sliding it back into position until it clicks securely.

The remote control is now ready for use. No additional programming is required.



Image 2.1: Angled view of the ECONTROLLY Remote Control. This image provides a perspective of the remote's design, which is relevant for locating the battery compartment on the reverse side.

3. OPERATING INSTRUCTIONS

3.1 Button Functions

The remote control provides direct access to various functions of your Element Smart TV. Below is a table outlining the primary functions of common buttons:

Button	Function
Power (Red)	Turns the TV on or off.
Mute	Mutes or unmutes the TV audio.
0-9 (Number Pad)	Direct channel selection or inputting numbers.
VOL +/-	Adjusts the volume level.
CH ^/v	Changes the TV channel up or down.
Navigation (Up, Down, Left, Right, OK)	Navigates through menus and confirms selections.
MENU	Accesses the TV's main menu.
SOURCE	Selects input sources (e.g., HDMI 1, AV).
RETURN	Goes back to the previous screen or menu.
EXIT	Exits the current menu or application.
YouTube, Vudu, Netflix, Pandora	Dedicated buttons for quick access to these streaming applications.
INFO	Displays program information.
FREEZE	Pauses the current video frame.
ADD/ERASE	Functionality may vary by TV model, often related to channel management.
FAV	Accesses favorite channels list.
V-CHIP	Accesses V-Chip parental control settings.
CC	Toggles Closed Captions on or off.
MTS	Selects Multi-channel Television Sound options (e.g., Stereo, SAP).
P.MODE	Cycles through picture modes (e.g., Standard, Dynamic, Movie).
S.MODE	Cycles through sound modes (e.g., Standard, Music, Speech).
CH.LIST	Displays the channel list.

4. MAINTENANCE

4.1 Cleaning

To maintain the remote control's functionality and appearance:

- Wipe the remote control with a soft, dry cloth.
- For stubborn dirt, lightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid excessive moisture.
- Do not use harsh chemicals, solvents, or abrasive cleaning pads, as these can damage the remote's surface or internal components.

4.2 Battery Replacement

Replace batteries when the remote control's response becomes sluggish or stops working. Always replace both AAA batteries simultaneously with new ones to ensure optimal performance.

5. TROUBLESHOOTING

If you experience issues with your remote control, refer to the following common problems and solutions:

- **Remote not responding:**
 - Check if the batteries are inserted correctly with the correct polarity (+/-).
 - Replace the batteries with new AAA batteries.
 - Ensure there are no obstructions between the remote control and the TV's infrared sensor.
 - Confirm the remote is pointed directly at the TV.
- **Intermittent functionality:**
 - This often indicates low battery power. Replace the batteries.
 - Ensure the remote's infrared emitter is clean and free from debris.
- **Specific buttons not working:**
 - If only certain buttons fail, try replacing the batteries first.
 - Ensure the TV is in the correct mode (e.g., TV mode for channel buttons, Smart TV mode for app buttons).

6. SPECIFICATIONS

Key technical specifications for the ECONTROLLY Remote Control:

Feature	Detail
Model Number	RC-ELEMENT-YUVPN-ECO
Product Dimensions	7 x 2 x 0.65 inches
Item Weight	1 ounce
Power Source	2 x AAA batteries (not included)
Connectivity Technology	Infrared (IR)
Compatible Devices	Element Smart Televisions
Special Feature	Ergonomic design

7. WARRANTY AND SUPPORT

For information regarding warranty coverage or technical support, please refer to the documentation provided with your purchase or contact the retailer. As this is a replacement remote, specific warranty details may be tied to the original purchase terms.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question