



Manuals.plus /

› vidaXL /

› vidaXL Outdoor Dining Table Instruction Manual

## vidaXL 316564

# vidaXL Outdoor Dining Table Instruction Manual

Model: 316564

## 1. INTRODUCTION

---

This manual provides essential information for the assembly, operation, and maintenance of your vidaXL Outdoor Dining Table. Please read these instructions carefully before use to ensure safe and proper handling of the product.

The vidaXL Outdoor Dining Table is designed to add a touch of rustic charm to your garden, terrace, or patio. Crafted from solid acacia wood with an oil finish, it is weather-resistant and highly durable. Its extendable design offers flexibility for various outdoor dining needs.



Figure 1.1: The vidaXL Outdoor Dining Table set up in an outdoor environment, showcasing its use with chairs and an umbrella.

## 2. SAFETY INFORMATION

---

**Warning:** Ensure the table is assembled and extended correctly to guarantee stability. Do not use the table when it is wet, as the wood surface may become slippery, posing a fall hazard.

- Always follow assembly instructions precisely.
- Do not overload the table.
- Keep children and pets away during assembly.
- Regularly check all bolts and screws for tightness.
- Avoid placing hot items directly on the wood surface without protection.

## 3. SETUP AND ASSEMBLY

---

The vidaXL Outdoor Dining Table requires assembly. While assembly can be complex, following these general steps will guide you through the process. Refer to the included assembly diagram for detailed instructions.

### 3.1. Unpacking and Preparation

- Carefully unpack all components and check against the parts list provided in the packaging.
- Lay out all parts on a clean, soft surface (e.g., a blanket or cardboard) to prevent scratches.
- Ensure all necessary tools (usually an Allen key, often included) are available.

### 3.2. Assembly Steps

1. Attach the table legs to the main frame using the provided hardware. Ensure all connections are secure but do not fully tighten yet.
2. Assemble the crossbars or support beams between the legs for added stability.
3. Carefully place the tabletop sections onto the assembled frame.
4. Secure the tabletop to the frame. For the extendable mechanism, follow the specific instructions to ensure smooth operation.
5. Once all parts are loosely assembled, place the table upright on a level surface.
6. Gradually tighten all screws and bolts, ensuring the table remains stable and level. Avoid over-tightening to prevent wood splitting.



Figure 3.1: Side view of the table, illustrating its structural components before or during assembly.

## 4. OPERATING THE EXTENDABLE FEATURE

---

The vidaXL Outdoor Dining Table features an extendable design, allowing you to adjust its length to accommodate more guests or provide additional surface area.

### 4.1. Extending the Table

1. Locate the locking mechanisms or latches on the underside of the table that secure the main tabletop sections. Unlock them.
2. Gently pull the two main tabletop sections apart. The extension leaf, typically stored underneath or folded within the table, will become accessible.
3. Lift and unfold the extension leaf into position between the two main sections. Ensure it sits flush and securely.
4. Push the main tabletop sections back together until they meet the extension leaf, creating a continuous surface.
5. Re-engage the locking mechanisms to secure the table in its extended position.



Figure 4.1: The dining table in its fully extended configuration, highlighting the additional central leaf.

### 4.2. Retracting the Table

1. Unlock the locking mechanisms on the underside of the table.
2. Pull the main tabletop sections apart slightly to create space.
3. Fold down or remove the extension leaf and store it in its designated compartment (if applicable).
4. Push the main tabletop sections back together until they are flush.
5. Re-engage the locking mechanisms to secure the table in its compact position.



Figure 4.2: Illustrative diagram demonstrating the movement of the extension mechanism for the table.



Figure 4.3: The dining table in its compact, unextended configuration.

## 5. MAINTENANCE AND CARE

---

Proper maintenance will prolong the life and preserve the appearance of your vidaXL Outdoor Dining Table.

### 5.1. Cleaning

- Clean regularly using a mild soap solution and a damp cloth.
- Avoid abrasive cleaners or harsh chemicals that can damage the wood's oil finish.
- Wipe dry immediately after cleaning to prevent water spots or moisture absorption.

- Promptly clean and dry any excess water or snow that remains on flat surfaces after rain or snowfall to prevent moisture damage.

## 5.2. Storage and Protection

- To extend the life of your outdoor furniture, we recommend cleaning it regularly and not leaving it outdoors unprotected when not in use.
- If possible, store the furniture in a cool, dry indoor environment during off-season or prolonged periods of non-use.
- If the product is stored outdoors, protect it with a waterproof cover.
- Allow adequate air circulation to prevent moisture damage under covers.

## 5.3. Wood Treatment

- The table has an oil finish. Periodically reapply a suitable wood oil to maintain its protective layer and appearance, especially if the wood starts to look dry or faded.

# 6. TROUBLESHOOTING

---

This section addresses common issues you might encounter with your dining table.

## 6.1. Assembly Difficulties

- **Problem:** Parts do not align or screws do not fit.
- **Solution:** Ensure you are using the correct hardware for each step as per the assembly diagram. Loosen all previously tightened screws, align the parts, and then re-tighten gradually. If a pre-drilled hole seems misaligned, gently try to guide the screw. Avoid using power tools that can strip screws or split wood; hand-tighten only.

## 6.2. Table Instability/Wobbling

- **Problem:** The table wobbles after assembly.
- **Solution:** Ensure all bolts and screws are fully tightened. Check that the table is on a level surface. If the surface is uneven, use shims under the legs to stabilize.

## 6.3. Extension Mechanism Sticking

- **Problem:** The table is difficult to extend or retract.
- **Solution:** Ensure the locking mechanisms are fully disengaged. Check for any debris or obstructions in the sliding tracks. Clean the tracks if necessary. Applying a small amount of silicone spray (not oil-based) to the tracks can help smooth movement.

# 7. SPECIFICATIONS

---

Detailed specifications for your vidaXL Outdoor Dining Table.



Figure 7.1: Key dimensions of the vidaXL Outdoor Dining Table, including length (extended and unextended), width, and height.

Feature	Detail
Brand	vidaXL
Model	316564
Material	Solid acacia wood with oil finish
Dimensions (L x W x H)	(150-200) x 100 x 75 cm (approx. 59.1-78.7 x 39.4 x 29.5 inches)
Weight	6.5 kg (approx. 14.3 lbs)
Special Features	Extendable design
Color	Rectangular (referring to shape/finish)

## 8. WARRANTY AND SUPPORT

For warranty information, product support, or to inquire about replacement parts, please contact vidaXL customer service through their official website or the retailer from whom you purchased the product. Keep your proof of purchase for warranty claims.

You can visit the official vidaXL store for more information: [vidaXL Store on Amazon](#)