

Segway ZING A6

Segway Ninebot eKickScooter ZING A6 Electric Kick Scooter User Manual

Model: ZING A6

INTRODUCTION

The Segway Ninebot eKickScooter ZING A6 is designed to enhance a child's sense of balance and control. This 2-wheel riding toy features a power-assisted motor that activates by kicking to start and accelerate, providing a smooth and enjoyable riding experience.

KEY FEATURES

- **Performance:** The ZING A6 can reach speeds up to 7.5 mph and travel up to 3.1 miles on a single charge. It supports a maximum load of 88 lbs and is suitable for children with a height between 3'5" and 4'7" (105–140 cm).
- **Safety & Control:** An intelligent foot-board sensor automatically powers on the scooter when a child steps on it and kicks to move forward. Power is automatically cut off when the rider steps off, and the scooter powers off after 30 seconds of inactivity, ensuring user safety.
- **Adjustable Speed:** Features three distinct speed gears to accommodate different skill levels. Riders can switch gears by lightly treading the rear fender.
 - First gear: 4.9 mph
 - Second gear: 6.2 mph
 - Third gear: 7.5 mph
- **Portability:** Weighing only 10.1 lbs, the A6 is lightweight and easy for children to carry. Its foldable design allows for convenient storage and transport, fitting easily into a car.
- **Durable Wheels:** Equipped with a PU front tire and a rubber rear tire, providing excellent shock absorption and wear resistance for various terrains.

SETUP

The Segway Ninebot eKickScooter ZING A6 comes with the scooter, charger, and an accessory box. Minimal assembly is required to get started.

1. **Unpacking:** Carefully remove all components from the packaging.

2. **Handlebar Attachment:** Attach the handlebar to the main body of the scooter. Ensure it clicks securely into place.
3. **Initial Charge:** Before first use, fully charge the scooter. The charging port is located on the side of the scooter. Lift the protective cover and plug in the charger.
4. **Folding/Unfolding:** The scooter is designed for easy folding. Locate the folding mechanism near the base of the handlebar. Follow the instructions to fold or unfold the scooter for transport or storage.



Figure 1: The Segway Ninebot eKickScooter ZING A6, showcasing its compact design.

OPERATING INSTRUCTIONS

The ZING A6 is designed for intuitive operation, allowing the rider to control the speed through their actions.

1. **Power On:** Simply step onto the foot-board. The intelligent sensor will detect the rider and automatically power on the scooter, illuminating the lights on the footboard and wheels.
2. **Starting Movement:** To begin riding, kick off the ground with one foot. The power-assisted motor will activate once the scooter reaches approximately 1.2 km/h (0.75 mph).
3. **Controlling Speed:** The scooter's speed is controlled by the rider's kicking action. The faster the rider kicks, the faster the scooter will go, up to its maximum speed for the selected gear. It will maintain the speed set by the rider's kicking.
4. **Changing Speed Gears:** To switch between the three speed gears, lightly tread on the rear fender. Each tread will cycle through the available speeds (4.9 mph, 6.2 mph, 7.5 mph).
5. **Stopping:** To stop the scooter, simply step on the rear fender. This acts as the brake, bringing the scooter to a controlled stop.
6. **Power Off:** The scooter will automatically power off after 30 seconds of inactivity or when the rider steps off the foot-board.



Figure 2: A child demonstrating the use of the Segway Ninebot eKickScooter ZING A6.

Safety Reminder: Always wear appropriate safety gear, including a helmet, knee pads, and elbow pads, when operating the eKickScooter. Ensure the riding area is safe and free from obstacles. Adult supervision is recommended for young riders.

MAINTENANCE

Proper maintenance ensures the longevity and safe operation of your Segway Ninebot eKickScooter ZING A6.

- **Charging:** Regularly charge the scooter's battery. Use only the official charger provided. Avoid overcharging or completely draining the battery to prolong its lifespan.

- **Tire Care:** The scooter features durable PU front and rubber rear tires. Periodically inspect them for wear and tear. While designed for wear resistance, replace them if significant damage or flattening occurs.
- **Cleaning:** Clean the scooter with a damp cloth. Avoid using harsh chemicals or excessive water, especially near electronic components.
- **Storage:** When not in use for extended periods, store the scooter in a cool, dry place. Ensure it is fully charged before storage and recharge it every few months to maintain battery health.

TROUBLESHOOTING

If you encounter issues with your Segway Ninebot eKickScooter ZING A6, refer to the following common troubleshooting steps:

- **Scooter Not Turning On:**
 - Ensure the battery is charged.
 - Verify that you are stepping firmly on the foot-board to activate the sensor.
- **Scooter Not Moving/Accelerating:**
 - Confirm the scooter is powered on.
 - Ensure you are kicking off the ground to initiate movement and activate the motor. The motor only engages after reaching a minimum speed.
 - Check for any obstructions around the wheels.
- **Charging Issues:**
 - Verify the charger is properly connected to both the scooter and a working power outlet.
 - Check the charging port for any debris or damage.
 - If the scooter stops charging after a few months, as some users have reported, this may indicate a battery or charger issue. Please refer to the warranty section for support.
- **Lights Not Working:**
 - Ensure the scooter is powered on by stepping on the foot-board.
 - If lights remain off, contact customer support.

For persistent issues or problems not listed here, please contact Segway customer support.

SPECIFICATIONS

Feature	Detail
Brand	Segway
Model Name	ZING A6
Color	Gray
Age Range (Description)	Youth
Weight Limit	88 Pounds
Item Weight	8.8 Pounds
Number of Wheels	2

Wheel Material	Polyurethane, Nitrile
Frame Material	Alloy Steel
Handlebar Type	Fixed
Wheel Size	4 Inches
Wheel Type	Solid
Brake Style	Rear Braking
Maximum Distance Range	3.1 Miles
Included Components	Scooter, Charger, Accessory Box
Item Dimensions (LxWxH)	25.6 x 12.6 x 33.5 inches




WARRANTY AND SUPPORT




The Segway Ninebot eKickScooter ZING A6 comes with a **1-year limited warranty** for the scooter and a **180-day warranty** for specific parts. For detailed warranty information, please refer to the documentation included with your product.

If you experience any problems or have questions regarding your eKickScooter, please contact Segway customer support for assistance. You can often find support contact information on the official Segway website or within your product packaging.



Related Documents - ZING A6

	Segway Ninebot MAX G3 User Manual: Your Guide to Safe Riding and Operation Explore the Segway Ninebot MAX G3 electric scooter with its comprehensive user manual. Learn about setup, operation, safety features, maintenance, and specifications for an optimal riding experience.
	Segway KickScooter ES4 Owner's Manual Comprehensive owner's manual for the Segway KickScooter ES4, detailing safety guidelines, technical specifications, charging procedures, riding techniques, and mobile app integration for an optimal user experience.
	Segway Ninebot MAX G3 User Manual User manual for the Segway Ninebot MAX G3 eKickScooter, providing instructions on assembly, operation, features, safety, and maintenance.

	<p>Segway Ninebot MAX G3 User Manual</p> <p>This user manual provides comprehensive instructions for the Segway Ninebot MAX G3 eKickScooter, covering assembly, operation, safety guidelines, features, and specifications. It details how to set up, ride, charge, and maintain the eKickScooter, along with information on app connectivity and troubleshooting.</p>
	<p>Segway GT Series SuperScooter User Manual</p> <p>Comprehensive user manual for the Segway GT1 and GT2 electric scooters, covering diagrams, functions, dashboard indicators, speed modes, specifications, troubleshooting, and certifications.</p>
	<p>Segway Ninebot F3 Series User Manual</p> <p>User manual for the Segway Ninebot F3 Series eKickScooter, providing instructions and information for safe operation and features.</p>