



[Manuals.plus](#) /

› [Yard Force](#) /

› Yard Force LW CPC1 Cordless Patio Cleaner User Manual

Yard Force LW CPC1

Yard Force LW CPC1 Cordless Patio Cleaner User Manual

Model: LW CPC1

1. INTRODUCTION

Thank you for choosing the Yard Force LW CPC1 Cordless Patio Cleaner. This manual provides essential information for the safe and efficient operation, assembly, maintenance, and troubleshooting of your new tool. Please read these instructions carefully before use and retain them for future reference.

2. SAFETY INSTRUCTIONS

Always observe basic safety precautions to reduce the risk of fire, electric shock, and personal injury. Familiarize yourself with the controls and proper use of the appliance.

- Read all instructions before operating the appliance.
- Wear appropriate personal protective equipment, including eye protection and sturdy footwear.
- Keep children and bystanders away from the operating area.
- Do not operate the appliance in wet conditions or rain.
- Ensure the battery is fully charged before use and removed during assembly or maintenance.
- Use only original Yard Force replacement parts and accessories.
- Do not force the appliance; use it for its intended purpose only.
- Store the appliance in a dry, secure place, out of reach of children.

3. PRODUCT COMPONENTS

The Yard Force LW CPC1 Cordless Patio Cleaner consists of several key components designed for effective cleaning.



Figure 3.1: Overall view of the Yard Force LW CPC1 Cordless Patio Cleaner. This image shows the complete assembly of the patio cleaner, including the main handle, auxiliary handle, telescopic shaft, motor housing, and brush head.

- **Main Handle:** Ergonomic grip with power controls.
- **Auxiliary Handle:** Provides additional grip and control for maneuverability.
- **Telescopic Shaft:** Adjustable length for user comfort.
- **Motor Housing:** Contains the motor and battery compartment.
- **Brush Head:** Houses the interchangeable cleaning brushes.
- **Interchangeable Cleaning Brushes:** Designed for various surfaces.
- **Battery Pack (20V 4Ah Lithium-Ion):** Provides power to the unit.
- **Charger:** For recharging the battery pack.
- **Water Hose Connector:** Allows connection to a garden hose for wet cleaning.



Figure 3.2: Detailed view of the main handle, auxiliary handle, and battery compartment. This image highlights the control panel on the main handle and the slot for the 20V Lithium-Ion battery.



Figure 3.3: Close-up of the interchangeable brush head. This image shows the bristles of the cleaning brush in contact with a wooden deck surface, illustrating its design for effective cleaning.

4. ASSEMBLY AND SETUP

Follow these steps to assemble your patio cleaner before first use.

1. **Attach the Auxiliary Handle:** Slide the auxiliary handle onto the telescopic shaft and secure it at a comfortable position using the locking mechanism.
2. **Connect the Shaft Sections:** Ensure the telescopic shaft sections are securely connected and locked into place. Adjust the length to your preference.
3. **Install the Brush Head:** Align the brush head with the motor housing and push until it clicks securely into place. Ensure it is firmly attached.
4. **Insert the Battery:** Ensure the battery is fully charged. Slide the 20V 4Ah Lithium-Ion battery pack into the battery compartment on the motor housing until it locks.
5. **Optional: Connect Water Hose:** For wet cleaning, attach a standard garden hose to the water hose connector located on the unit. Ensure a tight connection to prevent leaks.

5. OPERATING INSTRUCTIONS

Proper operation ensures effective cleaning and prolongs the life of your patio cleaner.

5.1 Charging the Battery

The 20V 4Ah Lithium-Ion battery takes approximately 100 minutes to fully charge. Use only the supplied charger. Connect the charger to a power outlet and then to the battery. The indicator light on the charger will show the charging status.

5.2 Starting and Stopping

- To start: Press and hold the safety lock button, then squeeze the trigger switch.
- To stop: Release the trigger switch.
- Speed settings: The unit features 2 speed settings. Use the speed selector button on the handle to switch between speeds.

5.3 Cleaning Procedure

Before starting, clear the area of large debris. For optimal results, use the water connection for deep cleaning.



Figure 5.1: Operating the patio cleaner with a water hose connected. This image demonstrates a user actively cleaning a wooden deck, with water being supplied through the hose connection for enhanced cleaning performance.

1. Ensure the battery is inserted and fully charged.

2. If using water, turn on the water supply to the garden hose.
3. Hold the main handle and auxiliary handle firmly.
4. Start the cleaner as described in Section 5.2.
5. Guide the brush head over the surface to be cleaned. The brushes rotate forward and backward to enter crevices.
6. Apply gentle, even pressure. Do not press down excessively.
7. Move the cleaner in a controlled manner, overlapping passes for thorough cleaning.
8. After cleaning, release the trigger to stop the unit.



Figure 5.2: User operating the patio cleaner on a deck. This wider shot shows the user's posture and the overall cleaning process, highlighting the freedom of movement provided by the cordless design.

6. MAINTENANCE

Regular maintenance ensures the longevity and performance of your patio cleaner.

6.1 Cleaning the Unit

- Always remove the battery pack before cleaning.

- Wipe the exterior of the unit with a damp cloth. Do not use harsh chemicals or abrasive cleaners.
- Clean the brush head thoroughly after each use to remove debris, dirt, and weeds.

6.2 Brush Replacement

The cleaning brushes are interchangeable and should be replaced when worn. Refer to the product components section for brush head removal and installation.

6.3 Storage

- Remove the battery pack before storing.
- Store the patio cleaner in a dry, well-ventilated area, away from direct sunlight and extreme temperatures.
- Ensure the unit is clean and dry before storage.



Figure 6.1: Patio cleaner stored upright. This image shows the unit standing vertically on a deck, demonstrating a convenient storage position.

7. TROUBLESHOOTING

Refer to this section for common issues and their solutions.

Problem	Possible Cause	Solution
Unit does not start	Battery not charged or improperly inserted.	Charge the battery fully. Ensure battery is securely inserted.
Reduced cleaning performance	Worn brushes or excessive debris in brush head.	Clean brush head. Replace worn brushes.
Water leakage from hose connection	Loose hose connection or damaged O-ring.	Ensure hose is tightly connected. Check and replace O-ring if damaged.
Unit stops during operation	Battery depleted or motor overload.	Recharge battery. Reduce pressure on the unit to prevent overload.

8. TECHNICAL SPECIFICATIONS

Feature	Specification
Model Number	LW CPC1-UK
Battery Type	20V Lithium-Ion
Battery Capacity	4 Ah
Charging Time	Approx. 100 minutes
Run Time	Approx. 20 minutes (with 4Ah battery)
Cleaning Width	20 cm
Speed Settings	2 speeds
Item Weight	5 Kilograms
Dimensions (L x W x H)	70 x 24 x 22 Centimeters

9. WARRANTY AND SUPPORT

Yard Force offers a 2+1 year manufacturer's warranty for this product. This warranty covers defects in materials and workmanship under normal use. Please retain your proof of purchase for warranty claims. For technical support, spare parts, or warranty inquiries, please contact Yard Force customer service through their official website or the contact information provided with your purchase documentation.