

[manuals.plus](#) /› [CAMRY](#) /› [Camry CR 4498 Milk Frother Instruction Manual](#)**CAMRY CR 4498**

Camry CR 4498 Milk Frother Instruction Manual

1. INTRODUCTION

Thank you for choosing the Camry CR 4498 Milk Frother. This appliance is designed to effortlessly froth and heat milk, making it ideal for preparing a variety of beverages such as cappuccinos, lattes, hot chocolates, and cold foam drinks. Please read this manual carefully before use to ensure safe and optimal operation.



Image 1.1: The Camry CR 4498 Milk Frother shown alongside a cup of frothed milk, illustrating its primary function.

2. SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and personal injury.

- Read all instructions before operating the appliance.
- Do not immerse the base unit, power cord, or plug in water or other liquids.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Do not use outdoors.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Do not use the appliance for anything other than its intended use.

- Always ensure the lid is properly placed on the jug during operation.
- The surface of the heating plate may remain hot after use. Avoid touching hot surfaces.

3. PRODUCT COMPONENTS

Familiarize yourself with the parts of your Camry CR 4498 Milk Frother:

1. Lid
2. Stainless Steel Jug with Handle
3. Frothing Whisk (for frothing milk)
4. Heating Whisk (for heating milk without frothing)
5. Power Base with Control Panel



Image 3.1: An exploded view showing the individual components of the Camry CR 4498 Milk Frother, including the lid, stainless steel jug, frothing whisk, and power base.



Image 3.2: A view inside the stainless steel jug, demonstrating how the frothing whisk is correctly placed at the bottom.

4. SETUP

Before first use, and after each use, clean the jug and whisks as described in the 'Maintenance and Cleaning' section.

1. Place the power base on a dry, flat, and stable surface.
2. Ensure the correct whisk is inserted into the bottom of the jug for your desired function (frothing or heating).
3. Plug the power cord into a suitable electrical outlet.

5. OPERATING INSTRUCTIONS

The Camry CR 4498 offers various functions for milk preparation.



Image 5.1: The control panel of the Camry CR 4498 Milk Frother, displaying illuminated buttons for Cappuccino, Latte, Hot Chocolate, and Cold foam, along with a 'SELECT START' button.

General Operation:

- 1. Prepare the Jug:** Ensure the appropriate whisk is in place. For frothing, use the frothing whisk. For heating without frothing, use the heating whisk.

2. **Add Milk:** Pour cold milk into the stainless steel jug. Observe the MIN and MAX fill lines inside the jug.
 - For frothing (Cappuccino, Latte, Cold Foam): Do not exceed the lower MAX line (approx. 250 ml).
 - For heating (Hot Chocolate): Do not exceed the upper MAX line (approx. 350 ml).
3. **Secure Lid:** Place the lid firmly on the jug.
4. **Place on Base:** Position the jug onto the power base.
5. **Select Function:** Press the 'SELECT START' button repeatedly to cycle through the available functions: Cappuccino, Latte, Hot Chocolate, Cold Foam. The selected function will illuminate.
6. **Start:** Once the desired function is illuminated, press the 'SELECT START' button once more to begin the process. The frother will automatically stop when the cycle is complete.
7. **Serve:** Carefully remove the jug from the base and pour the frothed or heated milk.



Image 5.2: A close-up view inside the stainless steel jug, clearly showing the 'MIN' and 'MAX' fill level indicators for accurate milk measurement.

Specific Functions:

- **Cappuccino:** Heats and froths milk to a dense foam. Use the frothing whisk.
- **Latte:** Heats milk with light frothing. Use the frothing whisk.
- **Hot Chocolate:** Heats milk without frothing. Use the heating whisk.
- **Cold Foam:** Froths cold milk without heating. Use the frothing whisk.

6. MAINTENANCE AND CLEANING

Proper cleaning ensures the longevity and hygiene of your milk frother. Always unplug the appliance before cleaning.

- Jug and Whisks:** The stainless steel jug and whisks are not dishwasher safe. Wash them by hand using warm, soapy water and a non-abrasive sponge. Rinse thoroughly and dry immediately.
- Lid:** The lid can be washed by hand with warm, soapy water.
- Power Base:** Wipe the exterior of the power base with a soft, damp cloth. Never immerse the power base in water or any other liquid.
- Do not use abrasive cleaners, scouring pads, or harsh chemicals on any part of the frother.
- Ensure all parts are completely dry before reassembling or storing the appliance.

7. TROUBLESHOOTING

If you encounter issues with your milk frother, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Frother does not start.	Not plugged in; jug not correctly placed on base; power outage.	Check power connection; ensure jug is seated properly; check household power.
Milk is not frothing or heating properly.	Incorrect whisk used; milk level too high/low; type of milk used.	Ensure frothing whisk is used for frothing, heating whisk for heating. Check milk levels against MIN/MAX lines. Use fresh, cold milk (dairy or suitable plant-based alternatives).
Burnt smell or residue.	Milk residue on heating plate; jug not cleaned properly.	Clean the jug and heating plate thoroughly after each use. Do not let milk dry on surfaces.
Appliance stops unexpectedly.	Overheating protection activated.	Unplug the frother and let it cool down for several minutes before attempting to use it again.

If the problem persists after trying these solutions, please contact customer support.

8. SPECIFICATIONS

Feature	Specification
Brand	CAMRY
Model Number	CR 4498
Color	Black
Product Dimensions (L x W x H)	31 x 31 x 17.5 cm
Heating Capacity	350 Milliliters

Feature	Specification
Frothing Capacity	250 Milliliters
Power	1000 Watts
Material	Stainless Steel
Special Feature	Automatic On/Off
Item Weight	1.53 Kilograms
Care Instructions	Hand wash only

9. WARRANTY AND SUPPORT

Information regarding product warranty and specific customer support contacts is not provided within this manual. Please refer to the product packaging or your point of purchase for warranty details and customer service contact information.