



Manuals.plus /

› LEQISMART /

› LEQISMART Scooter Lock Instruction Manual

LEQISMART B09QQMN352

LEQISMART Scooter Lock Instruction Manual

Model: B09QQMN352

PRODUCT OVERVIEW

The LEQISMART Scooter Lock is designed to provide security for your electric scooters, bikes, and other short commuting vehicles. It features a durable braided steel cable with a protective PVC coating and a 4-digit resettable combination mechanism for keyless convenience.



SCOOTER LOCK

Image: The LEQISMART Scooter Lock, a black coiled cable lock, securing the front wheel of an electric scooter to prevent theft.

Key Features:

- **Anti-Cut & PVC Coating:** Constructed from high-strength braided steel wire for enhanced security and anti-theft protection. The PVC coating ensures durability and prevents scratches to your vehicle.
- **Keyless Convenience:** Features a 4-digit resettable combination, eliminating the need to carry physical keys.
- **Easy Combination Reset:** The combination can be quickly reset following simple instructions.
- **Multi-Purpose Use:** Ideal for various short commuting vehicles, including LEQISMART A8 electric scooters, other adult electric scooters, kids' scooters, pro scooters, and electric bikes.
- **Simple Attachment:** Designed for easy attachment to scooter handlebars or bike bars when not in use.

SETUP: SETTING YOUR COMBINATION

Follow these steps to set your personal 4-digit combination for the LEQISMART Scooter Lock. The initial factory default combination is 0000.

1. **Step 1: Open the Lock with Default Combination.** Dial the combination wheels to the initial password "0000" to open the lock.



Image: A close-up of the lock's combination dials, showing them set to "0000" to unlock the device.

2. **Step 2: Rotate the Reset Knob.** Locate the reset knob on the side of the lock unit. Rotate this knob 90 degrees clockwise. *Note: The reset knob cannot be rotated if the current password is incorrect.*
3. **Step 3: Set Your New Combination.** With the reset knob rotated, dial the combination wheels to your preferred 4-digit combination. Ensure the digits align with the markers on both ends of the lock.
4. **Step 4: Lock the New Password.** Remember your new password. Rotate the reset knob 90 degrees counter-clockwise back to its original position to lock in the new combination.
5. **Step 5: Scramble and Test.** Scramble all the numbers on the combination wheels. Then, toggle back to your newly set password to ensure it opens the lock. This also helps prevent digits from accidentally jittering to an incorrect position.
6. **Step 6: Complete Resetting.** Insert the lock latch into the lock unit to complete the password resetting process. If you wish to set a new password again, repeat steps 1 through 6.

Video Tutorial: Setting and Retrieving Combination

Your browser does not support the video tag.

Video: A step-by-step guide demonstrating how to set a new 4-digit combination and how to retrieve a forgotten combination for the LEQISMART Scooter Lock.

OPERATING THE LOCK

To lock your scooter or bike:

1. Set the combination to your personal 4-digit code.
2. Insert the lock latch into the lock unit until it clicks securely.
3. Scramble the numbers on the combination wheels to secure the lock.

To unlock your scooter or bike:

1. Dial the combination wheels to your personal 4-digit code.
2. Pull the lock latch out of the lock unit.



Image: The LEQISMART Scooter Lock coiled around the handlebar of an electric scooter, demonstrating how it can be easily attached when not in use.



Image: The LEQISMART Scooter Lock being placed into a storage bag attached to an electric scooter, illustrating its portability.

MAINTENANCE

To ensure the longevity and smooth operation of your LEQISMART Scooter Lock, consider the following maintenance tips:

- **Cleaning:** Wipe the lock regularly with a damp cloth to remove dirt and grime. Avoid harsh chemicals that may damage the PVC coating or internal mechanisms.
- **Lubrication:** Periodically apply a small amount of lubricant (e.g., silicone spray) to the combination wheels and the locking mechanism to ensure smooth operation.
- **Storage:** Store the lock in a dry place when not in use to prevent rust or corrosion, especially if exposed to moisture.
- **Inspect for Damage:** Regularly check the steel cable and PVC coating for any signs of wear, cuts, or damage. Replace the lock if significant damage is observed to maintain security.



PVC Coating helps prevent scratching

ABS Material, Stronger & More durable

Image: A detailed view of the lock's PVC coating, which helps prevent scratching, and the ABS material used for the combination mechanism, highlighting its robust construction.

TROUBLESHOOTING: RETRIEVING YOUR PASSWORD

If you forget your combination, you can attempt to retrieve it. This method works only when the lock latch is separated from the lock unit.

1. **Step 1: Push the Lock Latch.** Push the lock latch into the lock unit as if you were trying to lock it, but do not fully engage it.
2. **Step 2: Toggle Digits.** Toggle the digits one by one, trying numbers from 0 to 9 in turn. As you find the correct number for each digit, the lock latch will step further into the unit. Continue this process for all four digits until the latch is fully inserted, revealing the correct combination.

Video Tutorial: Setting and Retrieving Combination

Your browser does not support the video tag.

Video: A step-by-step guide demonstrating how to set a new 4-digit combination and how to retrieve a forgotten combination for the LEQISMART Scooter Lock.

SPECIFICATIONS

Brand	LEQISMART
Special Feature	Resettable, Anti-theft
Lock Type	Combination Lock
Dimensions (L x W x H)	47.24 x 0.47 x 0.47 inches
Material	Alloy Steel, Polyvinyl Chloride
Recommended Uses	Short commuting vehicles, including electric scooters, bikes, and scooters for kids
Item Weight	0.24 Kilograms
Color	Black

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the official LEQISMART website or contact their customer service directly. Keep your purchase receipt as proof of purchase for any warranty claims.

Official LEQISMART Store: Visit the LEQISMART Store on Amazon