

## PHILIPS AWP2935WHT

# Philips Micro X-Clean Water Filter Carafe AWP2935WHT Instruction Manual

Model: AWP2935WHT

## 1. PRODUCT OVERVIEW

---

The Philips Micro X-Clean Water Filter Carafe AWP2935WHT is designed to provide clean, great-tasting water by reducing chlorine, limescale, heavy metals, and emerging contaminants such as microplastics and PFOA. This 2.6-liter carafe features an electronic timer to indicate filter replacement and an easy-fill lid for convenience.

### Key Features

- **Micro X-Clean Filter:** Reduces chlorine, limescale, heavy metals, microplastics, and PFOA for pure-tasting water.
- **Electronic Timer:** Provides a clear indication for optimal filter replacement.
- **Easy-Fill Lid:** Designed for convenient, one-handed refilling.
- **Dust-Proof Spout:** Prevents dust from entering the water dispenser, maintaining water purity.
- **Limescale Prevention:** Helps prolong the lifespan of household appliances by reducing limescale buildup.
- **Capacity:** 2.6 liters total capacity.



*Image 1.1: The Philips Micro X-Clean Water Filter Carafe, shown with a refreshing glass of filtered water and lemon.*

## 2. SETUP INSTRUCTIONS

---

### 2.1 Unpacking

1. Carefully remove all components from the packaging.
2. Ensure all parts are present: carafe, filter cartridge, and lid with electronic timer.

### 2.2 Initial Cleaning

- Wash the carafe, lid (excluding the electronic timer), and funnel with mild detergent and warm water.
- Rinse thoroughly with clean water. Do not wash the electronic timer in a dishwasher or submerge it in water.

### 2.3 Filter Installation

1. Remove the new filter cartridge from its protective packaging.
2. Submerge the filter cartridge in water for 15 minutes to remove air bubbles and activate the filter material.
3. Insert the pre-soaked filter cartridge firmly into the funnel opening until it clicks into place.

### 2.4 Filter Priming and First Use

1. Fill the carafe with tap water. Allow the water to filter through.
2. Discard the first two filtered batches of water. This primes the filter and removes any loose carbon particles.
3. The carafe is now ready for use.

## 4 Phasen Mikro X-Clean Filter

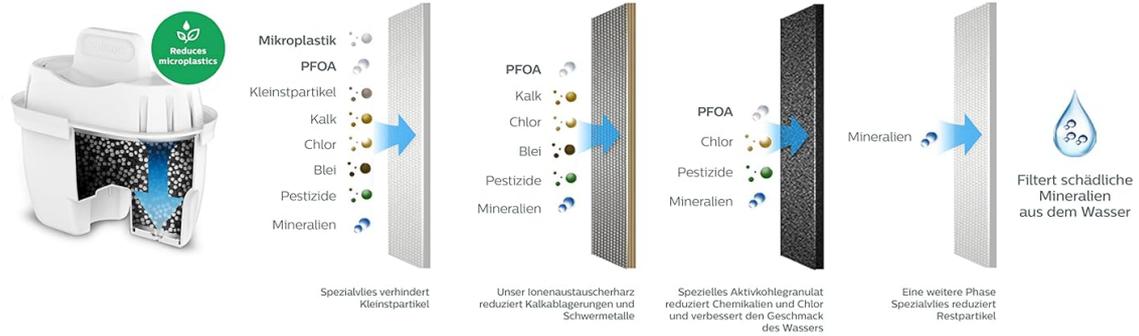


Image 2.1: A diagram detailing the four phases of the Micro X-Clean filter, showing how it reduces microplastics, limescale, chlorine, heavy metals, and PFOA.

## 3. OPERATING INSTRUCTIONS

### 3.1 Filling the Carafe

- Lift the easy-fill lid to access the funnel.
- Pour tap water directly into the funnel. The water will filter into the main carafe reservoir.
- Do not overfill the funnel beyond the maximum fill line.

### 3.2 Pouring Water

- Tilt the carafe to pour water. The dust-proof spout will automatically open to dispense water.
- Ensure the lid is securely in place before pouring.



*Image 3.1: A family enjoying filtered water from the Philips carafe during a meal.*

### 3.3 Electronic Filter Timer

- The electronic timer on the lid monitors the filter's lifespan.
- It will indicate when the filter needs to be replaced, typically after 1 month of use or approximately 100 liters of filtered water.
- To reset the timer after filter replacement, press and hold the reset button until the indicator resets.

### 3.4 Recommended Water Temperature

- The carafe is designed for filtering tap water with a temperature between 5°C and 38°C (41°F and 100°F).
- Do not use with hot water or water outside this temperature range.

## 4. MAINTENANCE

---

### 4.1 Cleaning the Carafe

- Regularly wash the carafe, funnel, and lid (excluding the electronic timer) with warm, soapy water.
- Rinse thoroughly and allow to air dry.
- The carafe and funnel are dishwasher safe, but the lid with the electronic timer is not.

### 4.2 Filter Replacement

- Replace the filter cartridge when indicated by the electronic timer, typically every 1 month.
- Compatible replacement filter cartridges include models **AWP210, AWP211, and AWP212**
- Follow the filter installation steps (Section 2.3) for replacing a used filter with a new one.

### 4.3 Benefits of Regular Maintenance

- Ensures consistent water quality and taste.
- Prevents the buildup of limescale, extending the life of the carafe and other household appliances that use filtered water.
- Maintains optimal filtration performance.



Image 4.1: The Philips water filter carafe conveniently stored in a refrigerator, ready for use.

## 5. TROUBLESHOOTING

---

### 5.1 Slow Filtration Rate

- **Cause:** Air bubbles trapped in the filter or a clogged filter.
- **Solution:** Remove the filter and re-soak it in water to release air bubbles. If the filter is old, replace it with a new one.

### 5.2 Unpleasant Water Taste

- **Cause:** Filter not properly primed or expired filter.
- **Solution:** Ensure the filter was properly primed by discarding the first two batches of filtered water. If the filter is past its recommended lifespan, replace it.

### 5.3 Electronic Timer Not Working

- **Cause:** Battery issue or timer malfunction.
- **Solution:** Ensure the timer is correctly seated in the lid. If the issue persists, contact customer support. Note that the timer is battery-powered, but the battery is typically non-replaceable by the user.

## 6. SPECIFICATIONS

---

Feature	Detail
Model Number	AWP2935WHT

Feature	Detail
Color	White
Material	Plastic
Capacity	2.6 Liters
Dimensions (L x W x H)	25 x 10 x 25 cm
Weight	850 grams
Water Flow Rate	0.3 L/min
Filter Lifespan	1 month (approx. 100 liters)
Replacement Filter Cartridges	AWP210, AWP211, AWP212
Water Source	Tap water
Inlet Water Temperature	5-38 °C (41-100 °F)
Power Source	Battery powered (for timer)
Installation Method	Countertop
Country of Origin (Carafe)	Responsibly made in China

## 7. WARRANTY AND SUPPORT

---

### 7.1 Warranty Information

This Philips product comes with a warranty for spare parts for **2 years** from the date of purchase. Please retain your proof of purchase for warranty claims. The warranty covers manufacturing defects under normal use conditions.

### 7.2 Customer Support

For further assistance, product information, or to purchase replacement filters, please visit the official Philips website or contact Philips customer service in your region.

You can also visit the [Philips Brand Store on Amazon](#) for more products and support.