

[Manuals.plus](#) /

› [Amazon Basics](#) /

› Amazon Basics Living Fan DC Motor Silent Remote Control 9-Blade Fan User Manual

## Amazon Basics FTS30-21MRD-W

# Amazon Basics Living Fan DC Motor Silent Remote Control 9-Blade Fan User Manual

Model: FTS30-21MRD-W

## INTRODUCTION

---

Thank you for purchasing the Amazon Basics Living Fan. This DC motor fan is designed to provide quiet and efficient airflow with convenient features such as remote control, multiple speed settings, oscillation, and a timer function. Please read this manual thoroughly before use to ensure proper operation and maintenance.

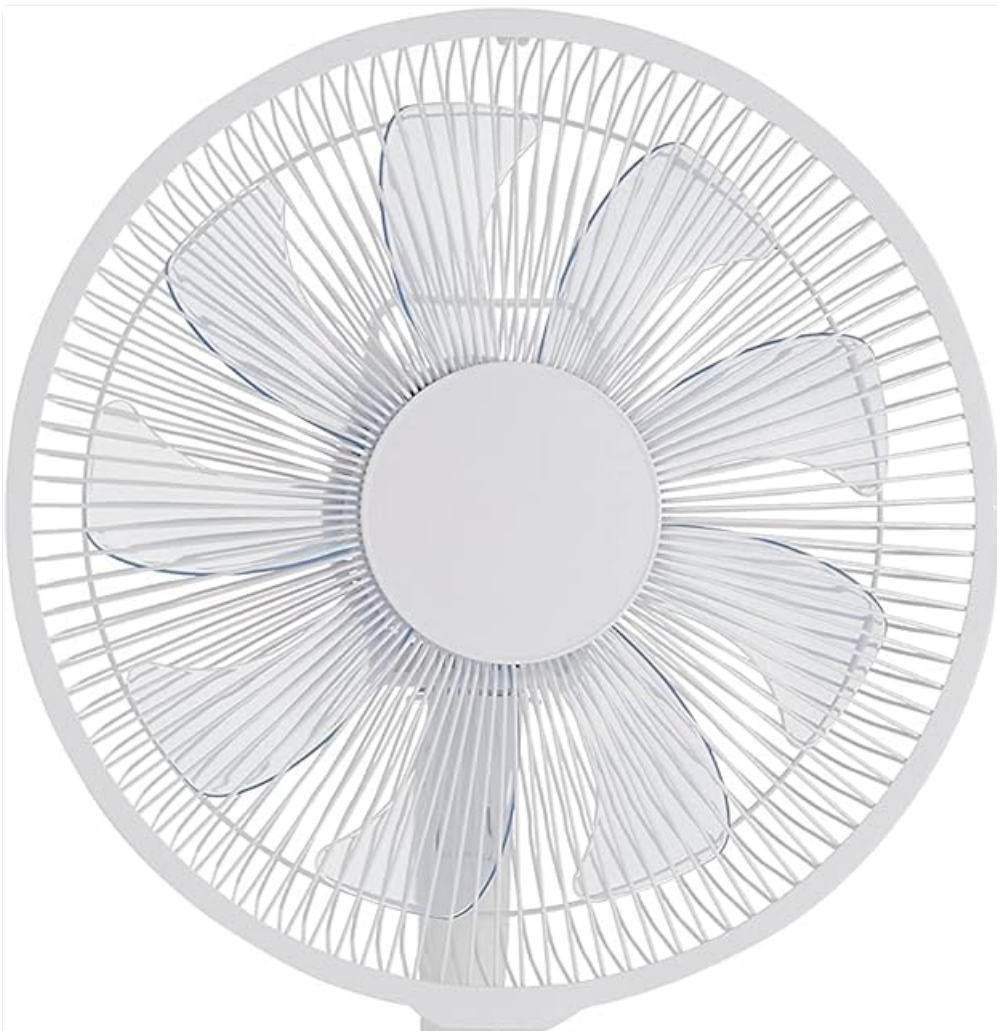




Figure 1: Front view of the Amazon Basics Living Fan.

## IMPORTANT SAFETY INSTRUCTIONS

---

- Read all instructions before using this fan.
- Do not operate any fan with a damaged cord or plug. Discard fan or return to an authorized service facility for examination and/or repair.
- Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Arrange cord away from traffic area and where it will not be tripped over.
- Always unplug the fan when moving it, cleaning, or when not in use.
- Do not insert fingers or foreign objects into any opening of the fan.
- Do not use outdoors. This fan is intended for indoor use only.
- Do not use in wet locations such as bathrooms or laundry areas.
- Ensure the fan is placed on a stable, level surface to prevent tipping.
- Keep children and pets away from the fan during operation.

## PACKAGE CONTENTS

---

Verify that all components are present in the package:

- Fan Unit (Motor, Blades, Grills, Stand)
- Base
- Remote Control
- Power Cord (integrated or separate)
- User Manual

## SETUP AND ASSEMBLY

---

Follow these steps to assemble your fan:

1. **Unpack Components:** Carefully remove all parts from the packaging.
2. **Attach the Stand to the Base:** Securely connect the fan stand to the base unit. Ensure it clicks into place or is fastened with provided screws.
3. **Assemble Fan Head:** Attach the rear grill, then the fan blades, and finally the front grill. Ensure all locking nuts and clips are securely fastened.  
*Note: Some models may have pre-assembled fan heads.*
4. **Connect Power Cord:** If the power cord is separate, connect it to the fan unit. Ensure it is fully inserted.
5. **Adjust Height:** The fan height can be adjusted from 67 cm to 86 cm. Loosen the height adjustment knob, set to desired height, and tighten the knob.



Figure 2: Fan dimensions and height adjustment range (67-86 cm).

## OPERATING INSTRUCTIONS

Your Amazon Basics Living Fan can be operated using the control panel on the base or the included remote control.

### Control Panel Overview

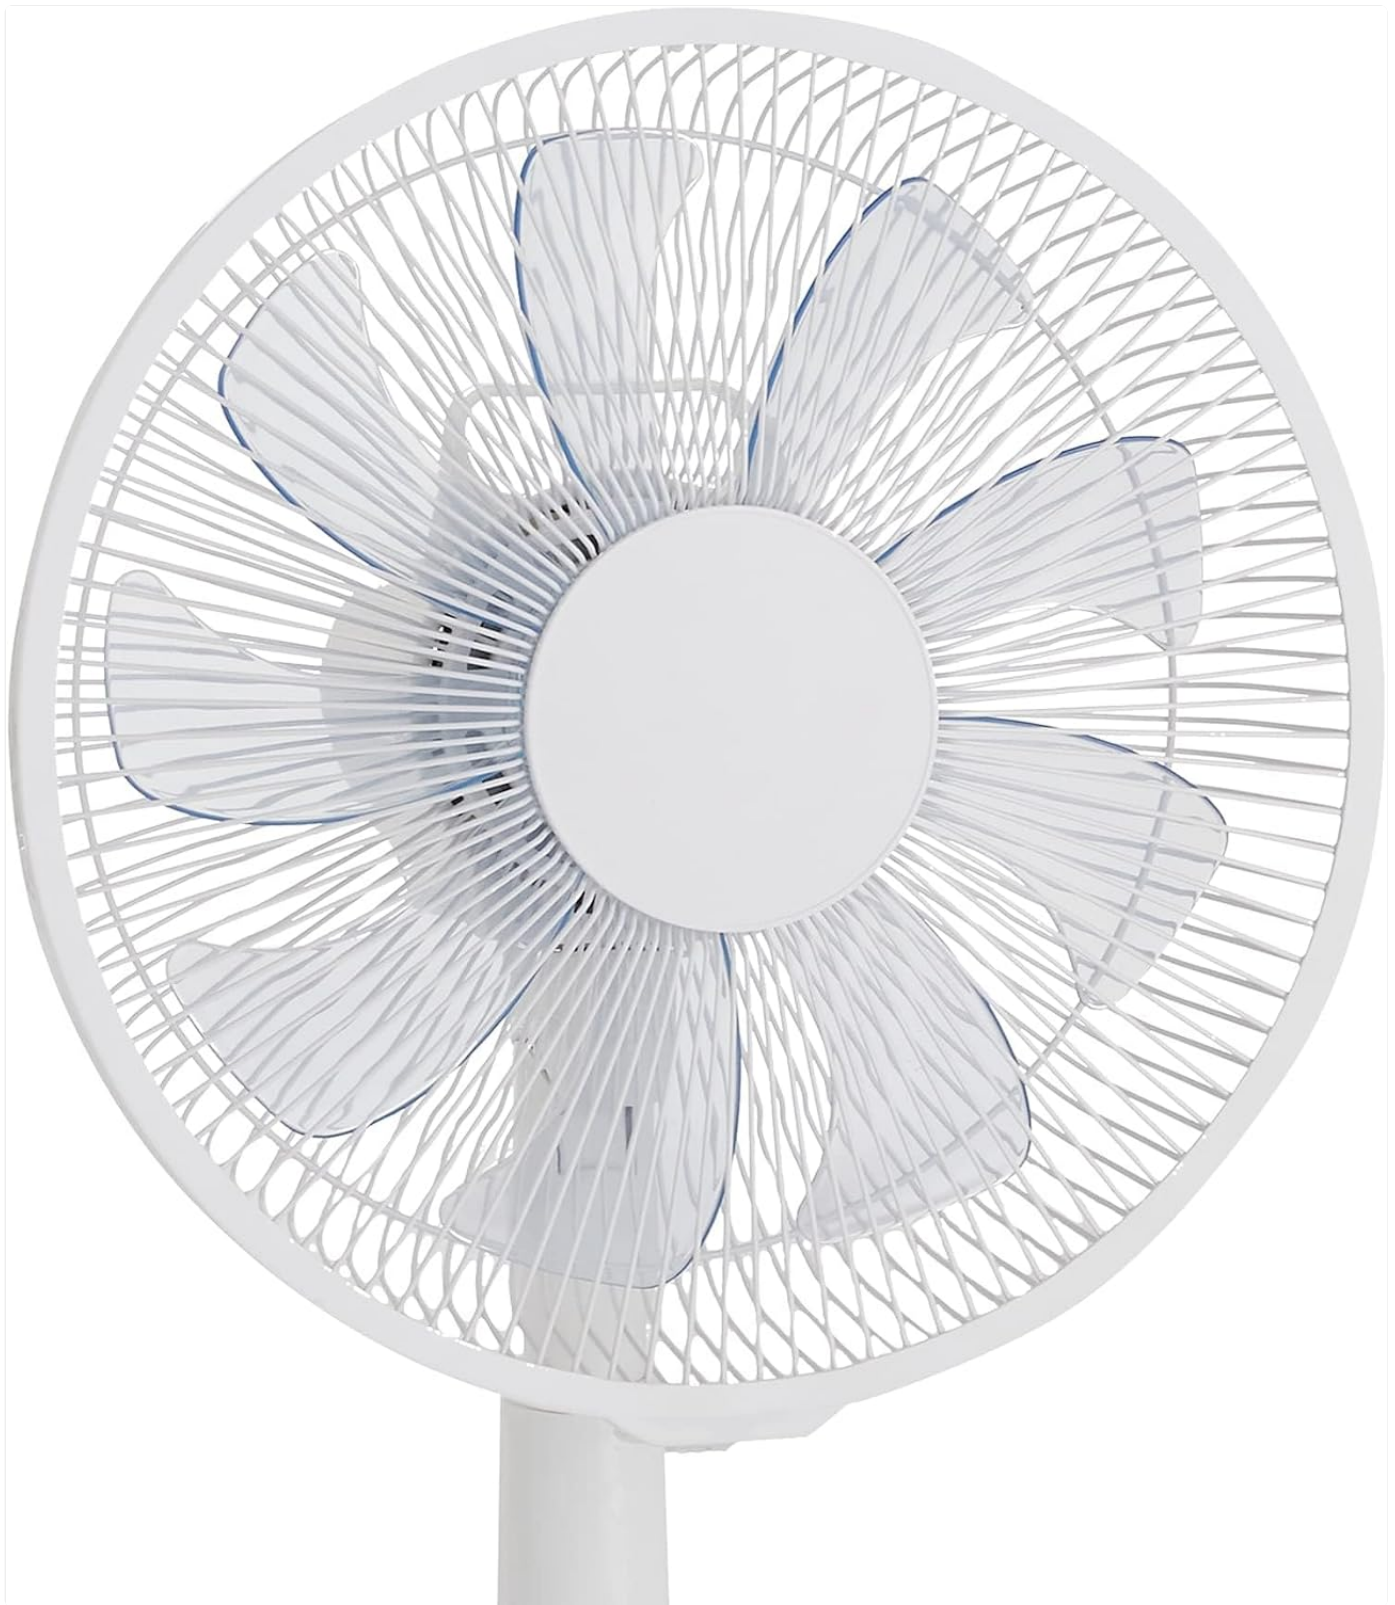


Figure 3: Close-up of the fan's control panel on the base.

- **Power Button:** Turns the fan On or Off.
- **Speed/Mode Button:** Cycles through fan speeds (Silent, Weak, Medium, Strong) and Rhythm mode.
- **Oscillation Button:** Activates or deactivates horizontal oscillation.
- **Timer Button:** Sets the On/Off timer.

## Remote Control

The remote control allows convenient operation from a distance. Ensure batteries are correctly inserted.

# 必要に応じて 快適さを簡単につくる



フルリモート  
コントロールアクセス

1.5 m  
電源コード

Figure 4: Remote control and 1.5m power cord for the fan.

- **Power (On/Off):** Press to turn the fan on or off.
- **Speed Adjustment:** Use '+' and '-' buttons to increase or decrease fan speed.
- **Mode Selection:** Cycle through Silent, Weak, Medium, Strong, and Rhythm modes.
- **Oscillation:** Activate or deactivate horizontal oscillation.
- **Timer:** Set the desired On or Off timer duration.

## Fan Features

- **DC Motor:** Provides powerful yet quiet operation, contributing to energy efficiency.
- **9-Blade Design:** Engineered for a soft, natural airflow.
- **5 Airflow Levels:** Choose from Silent, Weak, Medium, Strong, and Rhythm modes to suit your preference.
- **Oscillation:** Automatic horizontal oscillation up to 75 degrees. Manual vertical tilt up to 36 degrees.

- **Timer Function:**

- **On Timer:** Set the fan to turn on after 2, 4, or 6 hours.
- **Off Timer:** Set the fan to turn off after 1, 2, or 4 hours.

# 涼しく静かな 生活空間を楽しむ

快適な静かさを体感します



ヘッド 左右 75° / 上下 36°  
に傾斜可能です



強力でも静かな  
DC モーター



電力 19 ワット

Figure 5: Key features including 75° left/right oscillation, 36° up/down manual tilt, quiet DC motor, and 19W power consumption.

# 最適な涼しい環境をつくる

気流とタイミング制御をカスタマイズ

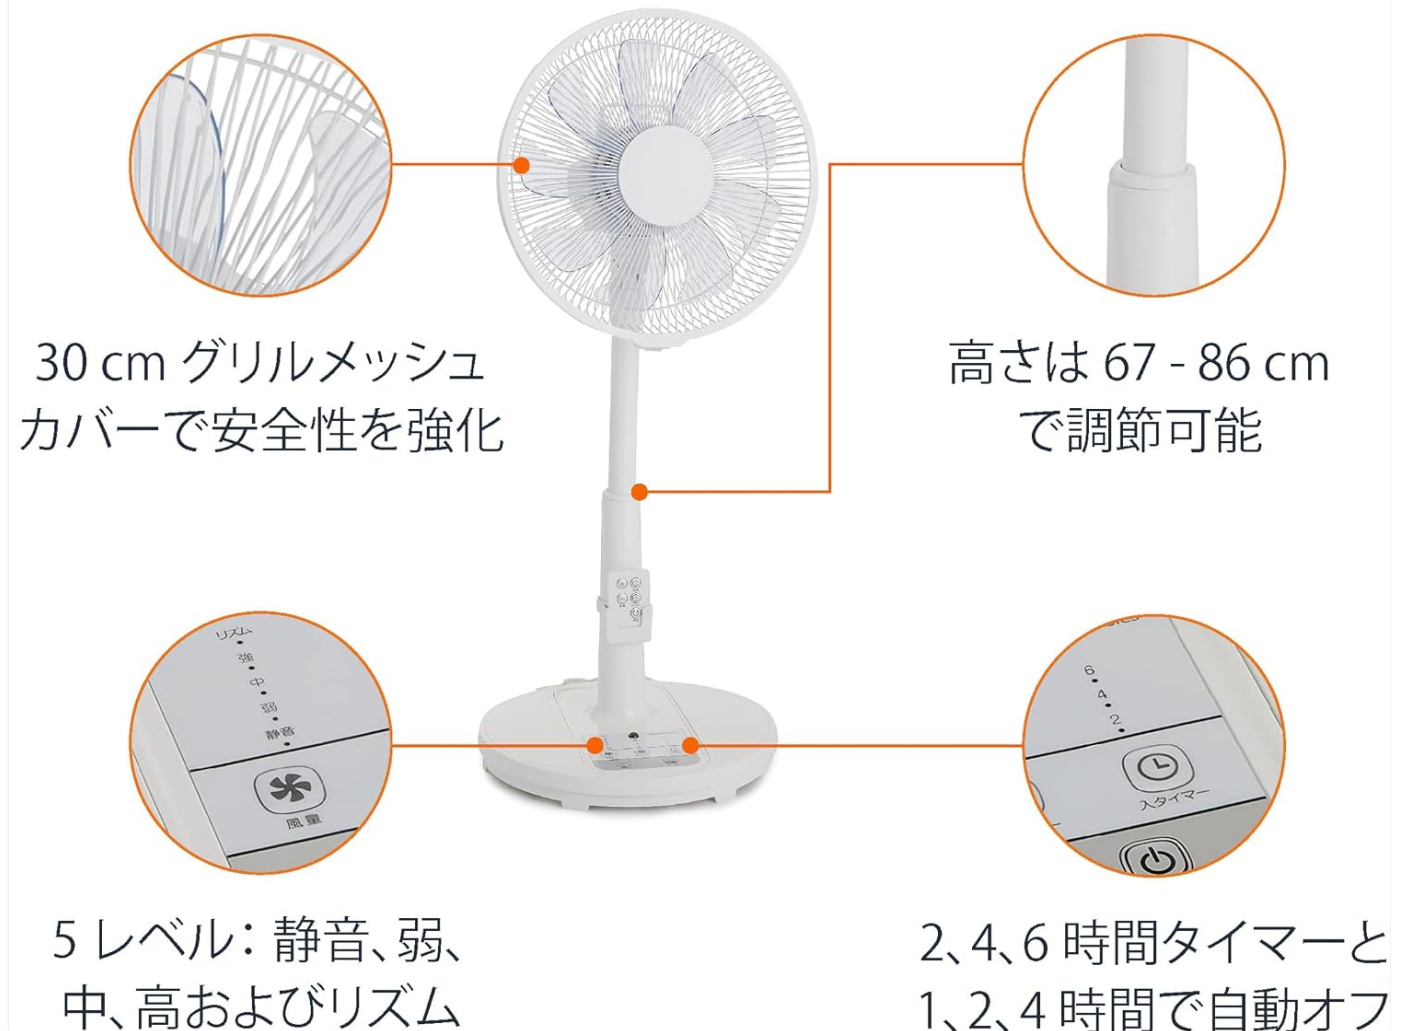


Figure 6: Features such as 30 cm grill mesh for safety, 67-86 cm adjustable height, 5-level airflow control (Silent, Weak, Medium, Strong, Rhythm), and timer settings.

## MAINTENANCE

Regular cleaning and proper storage will extend the life of your fan.

### Cleaning

1. **Unplug the Fan:** Always ensure the fan is unplugged from the power outlet before cleaning.
2. **Clean Exterior:** Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or solvents.
3. **Clean Fan Blades and Grills:**
  - Remove the front grill by carefully disengaging its clips or screws.
  - Unscrew the blade cap and remove the fan blades.
  - Wipe the blades and both front and rear grills with a soft, damp cloth. For stubborn dust, a mild soap solution can be used, followed by a clean damp cloth.

- Ensure all parts are completely dry before reassembling.

4. **Reassemble:** Reattach the fan blades, blade cap, and front grill securely.



Figure 7: Close-up view of the 9-blade fan design, illustrating the area to clean.

## Storage

When not in use for extended periods, store the fan in its original packaging or a dust-free environment. Disassemble the fan if necessary for compact storage.

## TROUBLESHOOTING

| Problem | Possible Cause | Solution |
|---------|----------------|----------|
|---------|----------------|----------|

| Problem                  | Possible Cause                                                                               | Solution                                                                                                                                                    |
|--------------------------|----------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Fan does not turn on.    | No power supply.<br>Power cord not properly connected.<br>Remote control batteries are dead. | Ensure the fan is plugged into a working outlet.<br>Check power cord connection.<br>Replace remote control batteries.                                       |
| Weak airflow.            | Fan speed set too low.<br>Grills or blades are dirty.                                        | Increase fan speed.<br>Clean the fan blades and grills as per maintenance instructions.                                                                     |
| Fan is noisy.            | Loose parts.<br>Fan not on a level surface.<br>Obstruction in blades.                        | Check for any loose components and tighten them.<br>Place the fan on a stable, level surface.<br>Ensure no foreign objects are interfering with the blades. |
| Oscillation not working. | Oscillation function is off.<br>Obstruction.                                                 | Activate oscillation using the control panel or remote.<br>Check for any obstructions preventing movement.                                                  |

## SPECIFICATIONS

|                        |                                                     |
|------------------------|-----------------------------------------------------|
| Brand                  | Amazon Basics                                       |
| Model Number           | FTS30-21MRD-W                                       |
| Color                  | White                                               |
| Fan Type               | Pedestal Fan                                        |
| Motor Type             | DC Motor                                            |
| Number of Blades       | 9                                                   |
| Number of Speeds       | 5 (Silent, Weak, Medium, Strong, Rhythm)            |
| Oscillation            | Automatic Horizontal (75°), Manual Vertical (36°)   |
| Timer Functions        | On Timer (2, 4, 6 hours), Off Timer (1, 2, 4 hours) |
| Control Type           | Remote Control, On-device buttons                   |
| Power Source           | Corded Electric                                     |
| Power Cord Length      | 1.5 meters                                          |
| Dimensions (D x W x H) | 36 x 36 x 67-86 cm (adjustable height)              |
| Product Weight         | 2.9 kg                                              |
| UPC                    | 840095884129                                        |

## WARRANTY AND SUPPORT

This Amazon Basics product is backed by a **1-year limited warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use.

For warranty claims, technical support, or any product-related inquiries, please contact Amazon customer service. Keep your proof of purchase for warranty validation.

Additional protection plans may be available for purchase, such as the 5-year accident protection plan mentioned during product acquisition.

**Ask a question about this manual**

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

**Name**

Anonymous

**Email**

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

**Question**

Example: How do I reset this device or fix this error?

**Details**

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question