

## ASKO W2084

# ASKO W2084 8KG Washing Machine User Manual

Model: W2084 | Capacity: 8 KG

## 1. INTRODUCTION

Thank you for choosing the ASKO W2084 8KG Washing Machine. This manual contains important information regarding the installation, operation, and maintenance of your appliance. Please read it thoroughly before using the washing machine to ensure safe and optimal performance. Keep this manual for future reference.

## 2. SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury to persons.

- Ensure the appliance is properly grounded.
- Do not operate the washing machine if it is damaged or malfunctioning.
- Keep children and pets away from the appliance during operation.
- Do not wash items that have been soiled with flammable substances.
- Unplug the appliance before cleaning or performing any maintenance.

## 3. SETUP AND INSTALLATION

Proper installation is crucial for the performance and longevity of your washing machine. It is recommended that installation be performed by a qualified technician. Please note that installation and setup work for this product should be arranged by the customer.

### 3.1 Unpacking

Carefully remove all packaging materials. Inspect the appliance for any damage incurred during transit. Retain packaging materials for future transport if needed.

### 3.2 Location and Leveling

Place the washing machine on a firm, level surface. Ensure there is adequate space around the appliance for ventilation and connections. Use a spirit level to check that the machine is perfectly level, adjusting the feet as necessary to prevent vibrations during operation.

**Dimensions:** W595 x D580 x H850 mm



Figure 3.1: Front view of the ASKO W2084 8KG Washing Machine, showcasing its compact design suitable for various installations.

### 3.3 Water and Electrical Connections

Connect the water inlet hose to a cold water tap and the drain hose to a suitable drain. Ensure all connections are secure to prevent leaks. Plug the power cord into a grounded electrical outlet. Refer to the appliance's rating label for specific electrical requirements.

## 4. OPERATING INSTRUCTIONS

---

This section guides you through the daily operation of your ASKO W2084 washing machine.

### 4.1 Control Panel Overview

The washing machine features a user-friendly control panel with a knob for program selection and buttons for additional functions. The display provides information on the selected program and cycle status.



Figure 4.1: Close-up view of the control panel, showing the program display and control knob.

### 4.2 Loading Laundry

Open the washing machine door and load laundry loosely into the drum. Do not overload the machine; ensure there is enough space for the clothes to tumble freely. The maximum capacity is 8 KG.



Figure 4.2: The interior of the washing machine drum, designed for efficient and gentle washing.

### 4.3 Adding Detergent

Add the appropriate amount of detergent and fabric softener to their respective compartments in the dispenser drawer. Refer to the detergent packaging for recommended dosages.

### 4.4 Selecting a Program

Turn the program selection knob to choose one of the 14 available washing programs. Programs include options for various fabric types and soil levels. The machine supports washing at temperatures up to 95°C for thorough cleaning.



Figure 4.3: An illustration demonstrating different water levels, indicative of the machine's water usage and efficiency across various cycles.

### 4.5 Starting and Stopping a Cycle

Press the Start/Pause button to begin the selected washing cycle. To pause a cycle, press the button again. To cancel a cycle, refer to the specific instructions in the full manual or hold the Start/Pause button for a few seconds.

## 5. MAINTENANCE

---

Regular maintenance ensures the longevity and efficiency of your washing machine.

### 5.1 Cleaning the Drum

Periodically run a maintenance wash cycle (e.g., a hot wash with no laundry and a small amount of detergent or a specialized washing machine cleaner) to prevent odor and residue buildup in the drum.



Figure 5.1: The washing machine drum with the door open, showing the clean interior ready for maintenance or use.

### 5.2 Cleaning the Detergent Dispenser

Remove the detergent dispenser drawer and rinse it under warm water to remove any detergent or softener residue. Clean the housing of the dispenser drawer with a brush.

### 5.3 Cleaning the Exterior

Wipe the exterior surfaces of the washing machine with a soft, damp cloth. Do not use abrasive cleaners or solvents.

## 6. TROUBLESHOOTING

Before contacting service, please check the following common issues:

Problem	Possible Cause	Solution
Machine does not start	No power; Door not closed properly; Program not selected.	Check power supply; Ensure door is latched; Select a program and press Start.
Water not filling	Water tap closed; Inlet hose kinked; Water pressure too low.	Open water tap; Straighten hose; Check household water pressure.
Excessive vibration/noise	Machine not level; Transit bolts not removed; Uneven load.	Adjust leveling feet; Remove transit bolts (if applicable); Redistribute laundry.
Water leakage	Hoses loose; Detergent overdose; Drain filter clogged.	Tighten hose connections; Use less detergent; Clean drain filter.

## 7. SPECIFICATIONS

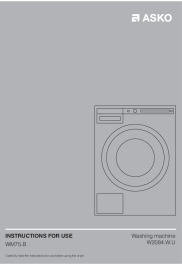
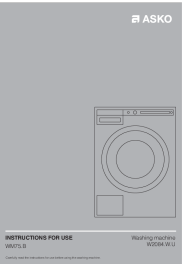



**Brand:** ASKO  
**Model:** W2084  
**Capacity:** 8 KG  
**Dimensions (W x D x H):** 595 x 580 x 850 mm  
**Weight:** 76.5 Kilograms  
**Control Type:** Knob  
**Standard Cycles:** 14  
**Max Wash Temperature:** 95°C  
**Door Position:** Top (This seems to be a mistranslation from the original data, as the image clearly shows a front-loading machine. Assuming 'Top' refers to the control panel or access point for detergent, or it's an error in the source data. For a front-loader, the door is front-facing.)

## 8. WARRANTY AND SUPPORT

For detailed warranty information, please refer to the warranty card included with your product or contact the manufacturer directly. This product is for sale only, and installation/setup work should be arranged by the customer. Please note that returns or exchanges cannot be accepted for this product.

If you require technical assistance or have questions not covered in this manual, please contact your retailer or the ASKO customer support in your region. Always provide your product model number (W2084) and serial number when seeking support.

Related Documents - W2084

	<p><a href="#">ASKO WM75.B Washing Machine User Manual</a></p> <p>Detailed instructions for use, installation, and maintenance of the ASKO WM75.B washing machine (Model W2084.W.U). Includes safety guidelines, program details, and troubleshooting.</p>
	<p><a href="#">ASKO W2084.W.U Washing Machine User Manual</a></p> <p>Comprehensive instructions for the ASKO W2084.W.U washing machine, covering installation, operation, safety, and maintenance.</p>
	<p><a href="#">ASKO W4086P.T.AU Washing Machine: Specifications, Features, and Dimensions</a></p> <p>Detailed specifications for the ASKO W4086P.T.AU freestanding 8kg washing machine, featuring 1600rpm spin speed, 22 programs, Quattro™ Construction, and 5-star energy and water ratings.</p>
	<p><a href="#">ASKO Service Manual for 600 Series Washing Machines</a></p> <p>Comprehensive service manual for ASKO 600 Series washing machines, covering installation, operation, troubleshooting, and component details for models W600, W620, W640, W650, and W660.</p>
	<p><a href="#">ASKO W4086C.W/3 Freestanding Washing Machine - Specifications and Features</a></p> <p>Detailed overview of the ASKO W4086C.W/3 freestanding washing machine, including its 8 kg capacity, 1600 rpm spin speed, energy class A, numerous programs, advanced features like Quattro Construction™ and Steel Seal™, and full technical specifications and dimensions.</p>

ASKO



Service manual: Washing machine  
Type: WM70

### [ASKO WM70 Washing Machine Service Manual | Troubleshooting & Repair Guide](#)

Official service manual for ASKO WM70 washing machines. Includes detailed troubleshooting, program guides, technical specifications, and repair procedures for WM70.1, WM70.2, and WM70.3 models.