

[manuals.plus](#) /

› [Kinzo](#) /

› [Kinzo 400W Jigsaw Instruction Manual, Model 8711252064161](#)

Kinzo 8711252064161

Kinzo 400W Jigsaw Instruction Manual

Model: 8711252064161

1. INTRODUCTION

Thank you for choosing the Kinzo 400W Jigsaw. This manual provides essential information for the safe and efficient operation, maintenance, and care of your new power tool. Please read this manual thoroughly before first use and keep it for future reference. Proper use and maintenance will ensure optimal performance and extend the lifespan of your jigsaw.



Image 1.1: Kinzo 400W Jigsaw, a versatile tool for various cutting tasks.

2. SAFETY INFORMATION

Always observe general power tool safety warnings to reduce the risk of electric shock, fire, and serious injury. Keep this manual accessible for safety guidelines.

- **Work Area Safety:** Keep the work area clean and well-lit. Cluttered or dark areas invite accidents. Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases, or dust.
- **Electrical Safety:** Power tool plugs must match the outlet. Never modify the plug in any way. Avoid body contact with earthed or grounded surfaces. Do not expose power tools to rain or wet conditions.
- **Personal Safety:** Always wear eye protection. Use hearing protection when operating for extended periods. Dress properly; avoid loose clothing or jewelry. Secure long hair.
- **Tool Use and Care:** Do not force the power tool. Use the correct power tool for your application. Disconnect the plug from the power source before making any adjustments, changing accessories, or storing power tools.
- **Maintenance:** Maintain power tools. Check for misalignment or binding of moving parts, breakage of parts, and

any other condition that may affect the power tool's operation.

3. PRODUCT OVERVIEW

The Kinzo 400W Jigsaw is designed for precise cutting in various materials. Its ergonomic design ensures comfortable handling and control during operation.

Key Features:

- Precision Cutting:** Ideal for intricate cuts, curves, and small pieces.
- Ergonomic Grip:** Provides secure and comfortable handling for enhanced control.
- Versatile Material Compatibility:** Suitable for wood up to 65mm and metal up to 6mm, as well as various plastics and ceramic plates.
- Dust Extraction Port:** Allows connection to a vacuum cleaner for a cleaner work environment.
- Protective Blade Cover:** Offers additional safety from the sharp, flexible saw blade while maintaining visibility of the cutting line.
- Extended Power Cable:** A 1.8-meter cable provides ample freedom of movement.

Components:

The Kinzo Jigsaw includes the following components:

- Jigsaw Unit
- Saw Blade
- Protective Blade Cover
- Allen Key (for blade changes)



Image 3.1: The ergonomic grip ensures comfortable and secure handling during operation.

4. SETUP

4.1 Blade Installation

1. Ensure the jigsaw is unplugged from the power source.
2. Locate the blade clamp mechanism, typically secured with an Allen screw.
3. Use the provided Allen key to loosen the screw.
4. Insert the saw blade into the clamp with the teeth facing forward.
5. Tighten the screw firmly with the Allen key to secure the blade.

**SÄGEBLATT LEICHT ZU
ERSETZT**



Image 4.1: The saw blade is easily replaced using the provided Allen key.

4.2 Protective Cover Attachment

1. Slide the transparent protective cover into its designated slot at the front of the saw base.
2. Ensure it clicks securely into place, providing a barrier between the user and the moving blade.

SCHUTZKAPPE

Zusätzlicher Schutz vor der scharfen
flexiblen Säge.



Image 4.2: The protective cover offers additional safety and maintains visibility of the cutting line.

4.3 Dust Extraction Connection

1. Locate the dust extraction port at the rear of the jigsaw.
2. Connect a suitable vacuum cleaner hose to this port to minimize dust and debris during operation.



Image 4.3: The dust extraction port can be connected to a vacuum cleaner for a cleaner workspace.

5. OPERATING INSTRUCTIONS

5.1 Preparing for Cutting

- Ensure the workpiece is securely clamped to prevent movement during cutting.
- Mark your cutting line clearly on the material.
- Select the appropriate saw blade for the material you are cutting (e.g., wood, metal, plastic).

5.2 Making a Cut

1. Plug the jigsaw into a suitable 230V power outlet.
2. Hold the jigsaw firmly by its ergonomic grip.
3. Place the base plate of the jigsaw flat on the workpiece, ensuring the blade is clear of the material.
4. Start the jigsaw by pressing the trigger. Allow the blade to reach full speed before engaging the material.

5. Slowly guide the blade into the material along your marked cutting line. Apply steady, even pressure. Do not force the tool.
6. Maintain a firm grip and keep the base plate flat against the workpiece throughout the cut.
7. Once the cut is complete, release the trigger and allow the blade to stop completely before lifting the tool from the workpiece.



Image 5.1: The Kinzo Jigsaw is capable of cutting wood up to 65mm thickness.

6. MAINTENANCE

Regular maintenance ensures the longevity and safe operation of your Kinzo Jigsaw.

- **Cleaning:** After each use, unplug the tool and clean it with a dry cloth. Remove any sawdust or debris from the ventilation slots and the blade area. Ensure the dust extraction port is clear.
- **Blade Inspection:** Regularly inspect the saw blade for wear, damage, or dullness. Replace dull or damaged blades promptly to ensure efficient and safe cutting.
- **Cord Inspection:** Check the power cord for any signs of damage, cuts, or fraying. If damaged, have it replaced

by a qualified technician.

- **Storage:** Store the jigsaw in a dry, secure location, out of reach of children.

7. TROUBLESHOOTING

If you encounter issues with your Kinzo Jigsaw, refer to the following common troubleshooting steps:

- **Tool Does Not Start:** Check if the power cord is securely plugged into a working outlet. Ensure the power switch is in the 'ON' position.
- **Blade Not Cutting Effectively:** The blade might be dull or incorrect for the material. Replace the blade or ensure you are using the appropriate type. Check if the blade is securely installed.
- **Excessive Vibration/Noise:** This could indicate a loose blade or a damaged blade. Ensure the blade is correctly installed and not bent. If the issue persists, discontinue use and contact customer support.
- **Dust Extraction Ineffective:** Check if the dust extraction port is clear of blockages and if the vacuum cleaner is properly connected and functioning.

For problems not addressed here, please contact Kinzo customer support.

8. SPECIFICATIONS

Feature	Specification
Model Number	8711252064161
Power	400 W
Voltage	230 V
Max. Cutting Depth (Wood)	65 mm
Max. Cutting Depth (Metal)	6 mm
Cable Length	1.8 meters
Weight	1.4 kg
Dimensions (Product)	22 x 8 x 21 cm
Material	Plastic, Metal
Color	Blue
Included Components	1 Jigsaw, 1 Instruction Manual, 1 Allen Key, 1 Saw Blade

400W

LEISTUNG



1,4 KG



1,8 METER



230-240V



Image 8.1: Key specifications of the Kinzo Jigsaw, including power, weight, and cable length.



Image 8.2: Physical dimensions of the Kinzo Jigsaw.

9. WARRANTY AND SUPPORT

For warranty information, technical support, or service inquiries, please refer to the contact details provided with your purchase documentation or visit the official Kinzo website. Keep your proof of purchase for warranty claims.