

[Manuals.plus](#) /

› [Bright Starts](#) /

› Bright Starts Disney Baby Winnie The Pooh Soothing Vibrations Baby Bassinet - Instruction Manual

Bright Starts 13002

Bright Starts Disney Baby Winnie The Pooh Soothing Vibrations Baby Bassinet

INSTRUCTION MANUAL - MODEL 13002

Product Overview

The Bright Starts Disney Baby Winnie The Pooh Soothing Vibrations Baby Bassinet is designed to provide a safe and comfortable sleeping environment for newborns up to 5 months old or 15 lbs. This portable bassinet features soothing vibrations, locking wheels for easy mobility, an adjustable and removable canopy, and convenient storage space. The design incorporates classic Winnie the Pooh characters, offering a neutral aesthetic suitable for any nursery.



Image: The Bright Starts Disney Baby Winnie The Pooh Soothing Vibrations Baby Bassinet, shown with a baby resting comfortably inside. The bassinet features a grey fabric with Winnie the Pooh character outlines, mesh sides, a grey canopy, and a white frame with wheels.

Important Safety Information

WARNING: Failure to follow these warnings and instructions could result in serious injury or death.

- Always provide the supervision necessary for the continued safety of your child.
- Do not use this bassinet if any parts are missing, damaged, or broken. Contact the manufacturer for replacement parts and instructional literature if needed. Do not substitute parts.
- The bassinet is intended for infants from birth until 5 months of age, or up to 15 lbs (6.8 kg), or until the infant begins to push up on hands and knees, whichever comes first.
- To reduce the risk of SIDS, pediatricians recommend healthy infants be placed on their back to sleep, unless otherwise advised by your physician.
- Never use plastic shipping bags or other plastic film as mattress covers not sold for that purpose. They can cause suffocation.
- Never place a pillow, comforter, or another mattress in the bassinet.
- Strings can cause strangulation! Do not place items with a string around a child's neck, such as hood strings or pacifier cords. Do not suspend strings over a bassinet or attach strings to toys.

- Keep the bassinet away from windows, blinds, drapes, heaters, and other heat sources.
- Ensure all locking mechanisms are engaged before placing a child in the bassinet.

What's in the Box

Upon opening the package, verify that all components are present:

- Bassinet frame components
- Bassinet fabric assembly
- Mattress pad
- Canopy
- Vibration unit
- Storage bin fabric
- Wheels (4)



Image: The retail packaging for the Bright Starts Disney Baby Winnie The Pooh Soothing Vibrations Baby Bassinet, indicating the product name and key features.

Setup and Assembly

Follow these steps to assemble your bassinet. It is recommended to assemble the bassinet in the room where it will be primarily used.

1. **Assemble the Frame:** Connect the metal frame components according to the included diagrams. Ensure all connections click into place securely.
2. **Attach Wheels:** Insert the four wheels into the designated slots on the bassinet legs. Press firmly until they lock. Engage the wheel locks for stability during assembly.
3. **Install Fabric Assembly:** Drape the bassinet fabric over the assembled frame, ensuring the mesh sides are properly aligned and the fabric is taut. Secure any fasteners or zippers as indicated.
4. **Insert Mattress Pad:** Place the mattress pad firmly into the bassinet, ensuring it lies flat and fits snugly within the fabric enclosure.
5. **Attach Canopy:** Secure the canopy to the designated attachment points on the bassinet frame. The canopy can be adjusted or removed as needed.
6. **Install Vibration Unit:** Attach the vibration unit to the side of the bassinet as shown in the instructions. Insert one C battery (not included) into the unit.
7. **Attach Storage Bin:** Secure the fabric storage bin to the lower part of the frame, providing convenient access to baby essentials.



Image: The assembled bassinet positioned in a bedroom setting, demonstrating its compact size and integrated storage bin.

Operating Instructions

Soothing Vibrations

The bassinet includes a vibration unit to help soothe your baby. To activate, ensure a C battery is installed in the unit. Press the on/off button located on the vibration unit to start or stop the gentle vibrations.

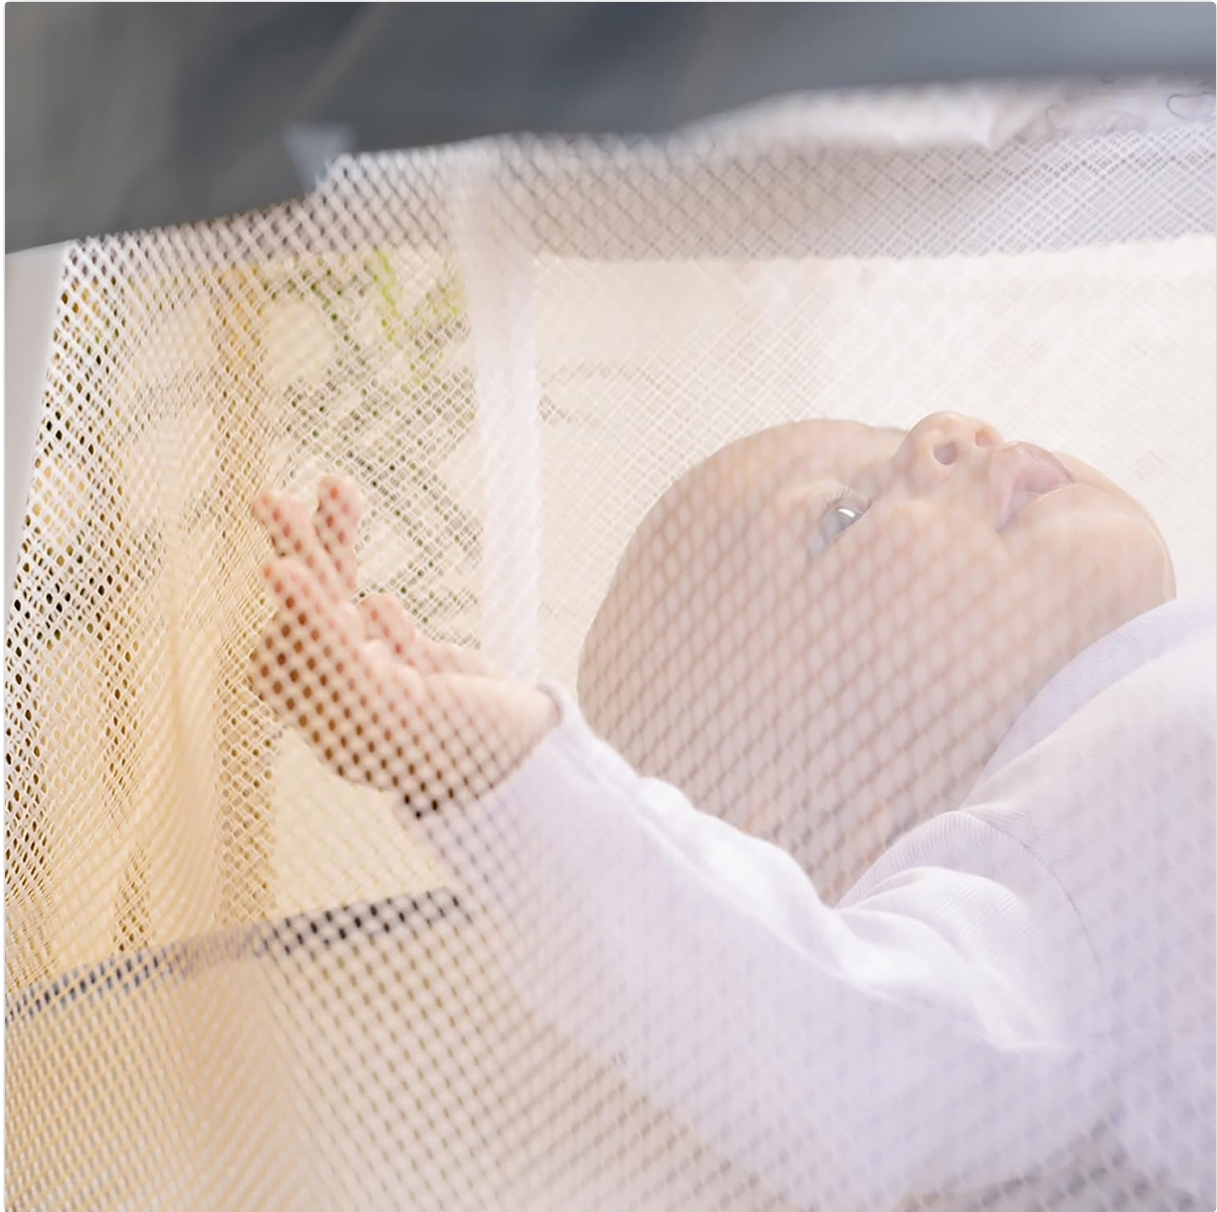


Image: A close-up view of the white vibration unit attached to the side rail of the bassinet, showing its simple design and button.

Portable Design and Wheels

The bassinet is equipped with four locking wheels, allowing for easy movement between rooms. To move the bassinet, unlock the wheels by flipping the small levers on each wheel. Once positioned, push the levers back down to lock the wheels and ensure stability.



Image: A detailed view of one of the bassinet's white wheels, showing the locking mechanism engaged.

Adjustable and Removable Canopy

The canopy can be adjusted to help dim ambient light for your baby's comfort. Simply pivot the canopy to the desired position. For full visibility or when not needed, the canopy can be easily removed from its attachment points.

Underneath Storage Space

Utilize the large storage space located beneath the bassinet to keep essential baby items such as diapers, wipes, and pacifiers within easy reach.



Image: The grey fabric storage bin located under the bassinet, shown holding a stack of diapers and a pack of wipes, demonstrating its utility.

Maintenance and Care

Proper care ensures the longevity and hygiene of your bassinet:

- **Bassinet Fabrics/Storage Bin:** Remove from the frame. Fasten zippers and all hook-and-loop patches. Machine wash with cold water on a gentle cycle. Do not use bleach. Air dry flat.
- **Canopy/Mattress:** Spot clean with a soft, clean cloth and mild soap. Do not machine wash.
- **Frame:** Wipe the metal frame with a soft, damp cloth and mild soap. Dry thoroughly.
- Regularly inspect the bassinet for loose parts, damaged fabric, or any signs of wear.

Troubleshooting

Problem	Possible Cause / Solution
Vibration unit not working.	Check if the C battery is installed correctly and has sufficient charge. Replace battery if necessary. Ensure the unit is properly attached.

Problem	Possible Cause / Solution
Wheels not rolling smoothly or locking.	Check for debris caught in the wheels. Ensure the locking levers are fully disengaged for rolling and fully engaged for locking.
Bassinet feels unstable.	Verify that all frame connections are securely clicked into place. Ensure all four wheels are locked when the bassinet is stationary.
Fabric appears loose or ill-fitting.	Ensure the fabric assembly is correctly draped and secured to the frame, with all zippers and fasteners properly engaged.

Specifications

Feature	Detail
Model Number	13002
Product Dimensions	30"L x 15.2"W x 40"H
Item Weight	8.43 Pounds
Recommended Age	Newborn to 5 Months
Maximum Weight Capacity	15 lbs (6.8 kg)
Material Composition	50% Fabric, 50% Metal
Battery Requirement	1 x C battery (for vibration unit, not included)
Mattress Pad Dimensions	30.75 x 17.75 inches

Warranty and Support

For warranty information or product support, please refer to the documentation included with your purchase or contact Bright Starts customer service directly. You can also visit the official Bright Starts store on Amazon for more information and contact options: [Bright Starts Store](#).

No relevant official product videos were found for this model that meet the embedding criteria (creator_type: Seller).