



Manuals.plus /

- › REPORSHOP /
- › REPORSHOP Teka Oven Selector 4 Positions 640463 Instruction Manual

REPORSHOP 640463

REPORSHOP Teka Oven Selector 4 Positions 640463 Instruction Manual

Model: 640463

1. PRODUCT OVERVIEW

This manual provides essential information for the installation, operation, and maintenance of the REPORSHOP Teka Oven Selector 4 Positions 640463. This component is designed to control various functions within compatible Teka ovens by allowing selection between four distinct positions.



Figure 1: REPORSHOP Teka Oven Selector 4 Positions 640463. This image displays the selector with its brown plastic shaft, metal housing, and electrical terminals, ready for installation in an oven.

2. SAFETY INFORMATION

- Always disconnect power to the appliance before attempting any installation, maintenance, or repair.
- Installation should only be performed by a qualified technician to prevent electrical shock or damage to the appliance.
- Ensure all connections are secure and correctly wired according to the oven's wiring diagram.
- Do not operate the oven if the selector is damaged or improperly installed.

3. INSTALLATION INSTRUCTIONS

This selector is a replacement part. Refer to your specific oven model's service manual for detailed installation steps. The following are general guidelines:

1. **Power Disconnection:** Ensure the oven is completely disconnected from the main power supply.
2. **Access Panel Removal:** Carefully remove the oven's control panel or access cover to expose the existing selector switch.
3. **Wiring Disconnection:** Document or photograph the existing wiring connections to the old selector. Disconnect all wires.

4. **Old Selector Removal:** Unmount the old selector from its position.
5. **New Selector Installation:** Mount the new REPORSHOP Teka Oven Selector 4 Positions 640463 in the same location.
6. **Wiring Connection:** Reconnect the wires to the new selector according to your documentation. Ensure each wire is securely attached to the correct terminal.
7. **Panel Reassembly:** Reattach the control panel or access cover.
8. **Power Restoration:** Restore power to the oven and test the selector's functionality.

Compatibility

This selector is compatible with various Teka oven models, including but not limited to:

- TEKA HA-810 VR02 E00
- HBB490V00
- HC 510 ME VR01
- HC-490 VR03 E00
- HC436ESBLANCOE50VR00
- HC485
- HC485BLANCOVR01
- HC485BLANCOVR02
- HC485 WhiteVR03
- HC485ESBLANCOE00VR00
- HC485MARRONVR01
- HC485MARRONVR02
- HC485MARRONVR03
- HC485MEVR00Black
- HC485MEVR01
- HC485MEVR02
- HC485MEV

If your oven model is not listed, consult your oven's documentation or contact a qualified technician to confirm compatibility before installation.

4. OPERATING INSTRUCTIONS

The 4-position selector allows you to choose between different oven functions. The specific functions associated with each position are determined by your oven model. Typically, these positions correspond to:

- **Position 0 (Off):** The oven is turned off.
- **Position 1:** A specific cooking mode (e.g., conventional heating, bottom heat).
- **Position 2:** Another specific cooking mode (e.g., grill, fan-assisted).
- **Position 3:** A third specific cooking mode (e.g., defrost, top heat).

To operate, gently turn the oven knob (attached to the selector shaft) to the desired position. Ensure the knob clicks firmly into place for proper function selection.

5. MAINTENANCE AND CARE

The oven selector is a sealed component and requires minimal maintenance. If cleaning is necessary, ensure the oven is disconnected from power.

- **Cleaning:** Use a dry, soft cloth to wipe away any dust or debris from the exterior of the selector and its surrounding area. Do not use liquid cleaners directly on the component.
- **Inspection:** Periodically inspect the selector and its wiring for any signs of wear, damage, or loose connections. If any issues are found, consult a qualified technician.

6. TROUBLESHOOTING

If you experience issues with your oven's function selection after installing this component, consider the following:

- **Oven Not Turning On:**
 - Check if the oven is properly connected to the power supply.
 - Verify that the selector is correctly wired and all connections are secure.
 - Ensure the selector knob is firmly in an active position (not 'Off').
- **Incorrect Function Selected:**
 - Confirm that the selector knob is aligned with the desired function marking on your oven's control panel.
 - Re-check wiring against the oven's diagram to ensure correct terminal connections.
- **Selector Feels Loose or Stiff:**
 - Ensure the selector is securely mounted.
 - If stiffness persists, the component may be faulty or improperly installed.

For persistent issues, it is recommended to contact a qualified appliance repair technician.

7. SPECIFICATIONS

Feature	Detail
Product Dimensions	0.04 x 0.05 x 0.04 inches
Item Weight	1.06 ounces
Manufacturer	REPORSHOP
ASIN	B09QXMBNNP
Item Model Number	IB16UN1446
Number of Positions	4

8. WARRANTY AND SUPPORT

For warranty information or technical support regarding the REPORSHOP Teka Oven Selector 4 Positions 640463, please refer to the original purchase documentation or contact REPORSHOP customer service directly. Keep your proof of purchase for any warranty claims.

