

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Octagon](#) /

› [Octagon SX RCU 05 Universal Remote Control 2-in-1 User Manual](#)

## Octagon SX RCU 05

# Octagon SX RCU 05 Universal Remote Control 2-in-1 User Manual

Model: **SX RCU 05** | Brand: **Octagon**

## 1. INTRODUCTION

This manual provides comprehensive instructions for the Octagon SX RCU 05 universal remote control. It is designed for use with Octagon SX and SF series receivers, offering a convenient and ergonomic solution for controlling your entertainment system. Please read this manual carefully before using the remote control.

## 2. PACKAGE CONTENTS

Verify that all items are present in your package:

- 1 x Octagon SX RCU 05 Universal Remote Control (Original)
- *Note: AAA batteries are not included and must be purchased separately.*

## 3. PRODUCT OVERVIEW

The Octagon SX RCU 05 remote control features a 50-key layout designed for intuitive operation. Below is an image of the remote with a description of its key sections and buttons.



**Figure 1:** Octagon SX RCU 05 Universal Remote Control. This image displays the full layout of the remote control, highlighting its ergonomic design and 50 functional buttons for various operations.

## Button Functions:

### Top Section:

- **TV Power (Top Left):** Controls the power of your television.
- **Receiver Power (Top Right):** Controls the power of your Octagon receiver.
- **STUDY:** Button for learning functions from other remotes.
- **TV/AV:** Switches TV input source.
- **VOL +/- (TV):** Adjusts television volume.
- **AUDIO:** Selects audio tracks or modes.
- **Mute:** Mutes or unmutes audio.
- **SUB:** Activates or deactivates subtitles.
- **OPT:** Accesses options menu.

### Middle Section (Media & Navigation):

- **NETFLIX, KODI, WEBTV, REC:** Dedicated shortcut buttons for streaming services and recording.
- **Color Buttons (Red, Green, Yellow, Blue):** Context-sensitive function buttons, often used in menus

or for teletext.

- **Media Control (<<, >>, K<, >K, Play/Pause, Stop):** Standard buttons for controlling media playback (rewind, fast forward, previous, next, play/pause, stop).
- **YouTube:** Dedicated shortcut button for YouTube.
- **Info (i):** Displays program information.
- **Exit/Return (Curved Arrow):** Returns to the previous menu or exits current function.
- **Navigation Pad (Up, Down, Left, Right, OK):** Used for menu navigation and selection. The **OK** button confirms selections.
- **Menu (Three Lines):** Accesses the main menu.

#### **Bottom Section (Channel & Numeric):**

- **VOL +/- (Receiver):** Adjusts receiver volume.
- **FAV:** Accesses favorite channels list.
- **EPG:** Opens the Electronic Program Guide.
- **PAGE +/-:** Navigates through pages in menus or lists.
- **Numeric Keypad (0-9):** For direct channel entry and text input.
- **V.FORMAT:** Changes video format.
- **RESOLUTION:** Adjusts display resolution.

## **4. BATTERY INSTALLATION**

---

To power your Octagon SX RCU 05 remote control, you will need two AAA batteries.

1. Locate the battery compartment on the back of the remote control.
2. Slide open the battery compartment cover.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Close the battery compartment cover until it clicks securely into place.

**Important:** Remove batteries if the remote control will not be used for an extended period to prevent leakage.

## **5. SETUP AND PAIRING**

---

The Octagon SX RCU 05 is designed to be compatible with all Octagon SX and SF series receivers. Typically, no complex pairing is required for Octagon receivers as it functions as an original replacement remote.

### **5.1. Initial Use with Octagon Receiver:**

After installing the batteries, the remote should immediately control your compatible Octagon SX or SF series receiver. Point the remote directly at the receiver and test basic functions like power, channel change, and volume.

### **5.2. TV Function Compatibility:**

The remote includes a "TV Power" button and "VOL +/-" for TV control. These buttons may require a learning process to control your specific television model. Refer to your television's manual for instructions on programming universal remote functions or using the "STUDY" button on the Octagon remote if available for learning IR codes.

## 6. OPERATING INSTRUCTIONS

Operate the remote control by pointing it towards your Octagon receiver or television (when using TV functions). Ensure there are no obstructions between the remote and the device.

- **Power On/Off:** Use the respective power buttons for the receiver and TV.
- **Channel Navigation:** Use the numeric keypad for direct channel input or the navigation pad (Up/Down) for sequential channel browsing.
- **Volume Control:** Use the VOL +/- buttons. Note there are separate volume controls for the TV and the receiver.
- **Menu Access:** Press the **Menu** button (three lines icon) to access the receiver's main menu. Use the navigation pad to browse and **OK** to select.
- **Special Functions:** Utilize dedicated buttons for EPG, Netflix, YouTube, Subtitles, and Teletext as needed.

## 7. COMPATIBLE MODELS

The Octagon SX RCU 05 remote control is compatible with the following Octagon SX and SF series receivers:

- OCTAGON SX88
- OCTAGON SX88+
- OCTAGON SX88+ SE
- OCTAGON SX88+ SE WL
- OCTAGON SX88+ SE C/T2
- OCTAGON SX88+ SE C/T2 WL
- OCTAGON SX88+ Optima
- OCTAGON SX88+ Optima Combo
- OCTAGON SX888 IP
- OCTAGON SX888 WL
- OCTAGON SX88 4K
- OCTAGON SX888 4K
- OCTAGON SX89
- OCTAGON SX889
- Octagon SX988 4K
- OCTAGON SF8008 Single
- OCTAGON SF8008 Twin
- OCTAGON SF8008 Combo
- OCTAGON SF8008 MINI Combo

## 8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote not responding.	Dead or incorrectly inserted batteries.	Replace batteries with new AAA batteries, ensuring correct polarity (+/-).

Problem	Possible Cause	Solution
Remote range is poor.	Low batteries; Obstruction between remote and device.	Replace batteries. Ensure a clear line of sight to the receiver/TV.
TV functions not working.	TV functions not programmed or incompatible.	Refer to your TV manual for universal remote programming. Use the "STUDY" button if available for learning.
Specific receiver buttons not working.	Remote is not compatible with the specific receiver model.	Verify your receiver model is listed in the "Compatible Models" section.

## 9. SPECIFICATIONS

Feature	Detail
Brand	Octagon
Model Number	08280
Color	Black
Connectivity Technology	Infrared (IR)
Special Features	Universal, 4K Compatible
Compatible Devices	Octagon SX and SF Series Receivers, Television
Maximum Supported Devices	1 (Primary device, with limited TV control)
Number of Buttons	50
Controller Type	Button Control
Maximum Range	10 Meters
Battery Type	2 x AAA Alkaline (not included)

## 10. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation provided with your Octagon receiver or visit the official Octagon website. Keep your purchase receipt as proof of purchase for any warranty claims.