

BWBQNZ-01

Emoji Alarm Clock for Kids User Manual

Model: BWBQNZ-01 | Brand: Generic

1. PRODUCT OVERVIEW

The Generic Emoji Alarm Clock for Kids is a versatile and fun alarm clock designed specifically for children. It features dual alarms, five selectable ringtones, adjustable volume, a snooze function, and displays date and temperature. Its unique smart luminous function allows the display to activate with sound or touch, and it comes with a cute emoji display that changes with interaction.



Image 1.1: The pink Emoji Alarm Clock, showing the time 06:30 on its display.

2. PACKAGE CONTENTS

- 1 x Emoji Alarm Clock (Pink)
- 1 x USB Charging Cable (DC5V)
- 1 x User Manual

Note: A charger plug is not included and must be provided separately.



Image 2.1: The alarm clock, USB charging cable, and user manual as included in the package.

3. SETUP

3.1 Initial Charging

Before first use, ensure the alarm clock is fully charged. Connect the provided USB cable to the charging port on the back of the clock and plug the other end into a DC5V USB power adapter (not included) or a computer USB port.



Image 3.1: The alarm clock being charged via its USB port.

3.2 Power On/Off

The clock typically powers on automatically when connected to power or when the battery has sufficient charge. To conserve battery, the screen defaults to an energy-saving mode and will not display continuously.

4. OPERATING INSTRUCTIONS

4.1 Activating the Display (Smart Luminous Function)

The display screen will light up for 15 seconds when activated by a sound louder than 56 dB (e.g., a clap) or by touching the clock. After 15 seconds, the display will automatically turn off to save power.

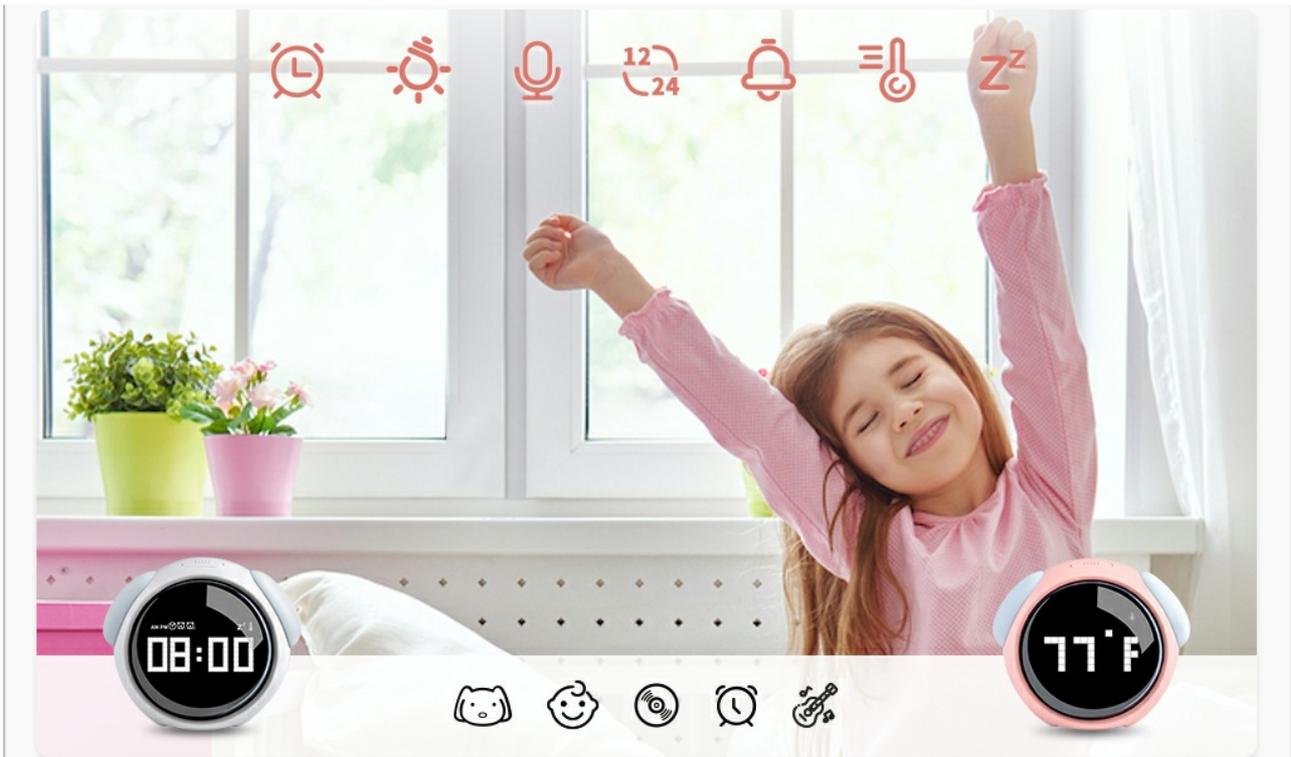


Image 4.1: A child clapping their hands to activate the clock's display, showing the time.

4.2 Setting Time and Date

Refer to the control panel diagram below for button identification. Press the **"Display Time"** button (usually indicated by a clock icon) to enter time setting mode. Use the "+" and "-" buttons to adjust hours, minutes, and date. Press the **"Light button"** (power button) to confirm each setting and move to the next.

Night Light Time Display

The automatic screen saver can be activated by clap sound and vibration. When sound is detected, the display screen will light up, after 15 seconds, it will automatically close the display.



Image 4.2: An overhead view of the alarm clock's control panel, showing buttons for light, wake-up alarm, sleeping alarm, volume control, display time, and music change.

4.3 Setting Dual Alarms

The clock supports two separate alarms. Press the **"Wake up alarm clock"** or **"Sleeping alarm clock"** button (indicated by alarm icons) to select an alarm. Use **"+"** and **"-"** to set the desired alarm time. Confirm with the **"Light button"**. You can choose from 5 optional chord ringtones.

4.4 Snooze Function

When an alarm sounds, shake the clock to activate the 5-minute snooze function. To completely shut down the alarm and snooze, press any button on the clock.

Basic version:
2 groups of alarm clock
Adjustable volume of ring tones
Press button to turn on/off night light



Image 4.3: A child's hand reaching towards the alarm clock to activate the snooze function.

4.5 Adjusting Volume and Ringtones

Use the **"Increase volume"** and **"Decrease volume"** buttons to adjust the alarm volume to one of the 4 available levels. Press the **"Change music"** button to cycle through the 5 chord ringtones.

4.6 Night Light Function

The clock features a night light. Press the **"Light button"** to turn the night light on or off. This function provides a soft glow for nighttime visibility.



Image 4.4: Two Emoji Alarm Clocks, one pink and one white, with their side night lights illuminated, creating a soft glow in

a dimly lit setting.

5. MAINTENANCE

5.1 Cleaning

Wipe the clock with a soft, dry cloth. Do not use abrasive cleaners or immerse the device in water.

5.2 Battery Care

The clock uses a 2000mAh lithium battery. For optimal battery life, avoid fully discharging the battery frequently. Recharge when the low battery indicator appears or when the display becomes dim.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Display does not light up.	Energy-saving mode active; low battery.	Clap or touch the clock to activate. Charge the clock if battery is low.
Alarm not sounding.	Alarm not set or volume too low.	Ensure alarm is set correctly and volume is adjusted.
Clock not charging.	Faulty USB cable or power adapter.	Try a different USB cable or power adapter. Ensure connection is secure.

7. SPECIFICATIONS

Brand	Generic
Model Number	BWBQNZ-01
Color	Pink
Display Type	Digital (Emoji Display)
Product Dimensions	10W x 10H Centimeters
Power Source	Battery Powered (2000mAh Lithium Battery)
Special Features	Dual Alarm, 5 Ringtones, Snooze, Date, Temperature, Smart Luminous Function (Sound/Touch Activated), Adjustable Volume, 12/24 Hour Format
Material	Plastic, Acrylonitrile Butadiene Styrene
Item Weight	270 g

8. WARRANTY AND SUPPORT

For any questions or comments regarding your Emoji Alarm Clock, please contact the seller or

manufacturer directly. Please refer to your purchase documentation for specific warranty details and customer service contact information.

© 2024 Generic. All rights reserved.