

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [BEKO](#) /
- › [BEKO Blender User Manual](#)

BEKO TBN81808BX

BEKO Blender User Manual

Model: TBN81808BX

1. IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before using your BEKO Blender. Retain this manual for future reference.

- **Electrical Safety:** Ensure the voltage indicated on the appliance corresponds to your local mains voltage before connecting. Always unplug the blender from the power outlet when not in use, before assembling or disassembling parts, and before cleaning. Do not immerse the motor unit, cord, or plug in water or any other liquid.
- **Blade Safety:** The blades are extremely sharp. Handle them with extreme care, especially when removing, cleaning, or emptying the jug.
- **Operation Safety:** Never operate the blender without the lid securely in place. Do not attempt to defeat the safety interlock mechanism. Do not overload the blender; refer to the maximum fill lines on the jug. Allow the motor to cool down if it overheats.
- **Usage Restrictions:** This appliance is intended for household use only. Do not use it outdoors. Do not blend extremely hot liquids, as pressure buildup can cause the lid to eject. Do not blend dry ingredients without adding sufficient liquid.
- **Children and Supervision:** This appliance should not be used by children. Close supervision is necessary when any appliance is used near children or persons with reduced physical, sensory, or mental capabilities.

2. PRODUCT OVERVIEW

The BEKO TBN81808BX Blender is designed for efficient blending, crushing, and mixing of various ingredients. It features a powerful motor, durable glass jug, and multiple speed settings.





Image: The BEKO TBN81808BX Blender, showcasing its main components including the motor base, glass jug, and lid.



Image: The BEKO Blender positioned on a kitchen countertop, ready for use.

3. SETUP AND FIRST USE

1. **Unpacking:** Carefully remove all packaging materials and inspect the blender for any damage. Keep

packaging for future storage or disposal.

2. **Initial Cleaning:** Before first use, wash the glass jug, lid, and blade assembly in warm, soapy water. Rinse thoroughly and dry all parts completely. The jug and blade assembly are dishwasher-safe. Wipe the motor base with a damp cloth.
3. **Assembly:** Place the blade assembly securely into the bottom of the glass jug. Ensure it is tightened properly to prevent leaks. Place the assembled jug onto the motor base, aligning it correctly until it clicks into place.
4. **Lid Placement:** Place the lid firmly onto the jug. Ensure the measuring cap is inserted into the lid opening. The blender will not operate unless the jug and lid are correctly assembled and locked into position due to the safety interlock system.

4. OPERATING INSTRUCTIONS

Your BEKO Blender offers versatile blending options with its adjustable speeds and pulse function.

1. **Add Ingredients:** Place your desired ingredients into the glass jug. Do not exceed the maximum fill line indicated on the jug (1.75 Liters). For best results, add liquids first, then soft ingredients, and finally harder ingredients or ice.
2. **Secure Lid:** Ensure the lid is securely placed on the jug and the measuring cap is inserted.
3. **Connect Power:** Plug the blender into a suitable power outlet.
4. **Select Speed:** Use the control dial on the front of the motor base to select your desired speed from 1 to 6. Start with a lower speed and gradually increase as needed.



Image: A detailed view of the blender's control dial, showing the 'P' (Pulse) setting and speed indicators from minimum to maximum.

- **Pulse Function (P):** For short bursts of power or to achieve a coarser consistency, turn the dial to the 'P' (Pulse) setting and hold it. Release the dial to stop. This is ideal for chopping or quick mixing.
- **Ice Crushing:** The blender features an IceCrush function. For best results, use the pulse function with a small amount of water or liquid to help the ice move around the blades. Do not overload with ice.
- **Stability:** The blender is equipped with non-slip feet to ensure stability during operation.

Important: Do not operate the blender continuously for more than 1 minute for heavy loads or 2 minutes for lighter loads. Allow a rest period of at least 10 minutes between cycles to prevent motor overheating.

5. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your BEKO Blender.

1. **Unplug:** Always unplug the blender from the power outlet before cleaning.
2. **Disassemble:** Remove the glass jug from the motor base. Carefully unscrew the blade assembly from the bottom of the jug. Remove the lid and measuring cap.
3. **Cleaning Removable Parts:** The glass jug, lid, and blade assembly are dishwasher-safe. Alternatively, wash them in warm, soapy water. Use a brush to clean the blades carefully due to their sharpness. Rinse thoroughly.



Image: A close-up view of the removable stainless steel blade assembly, highlighting its sharp, serrated edges.

4. **Cleaning Motor Base:** Wipe the exterior of the motor base with a soft, damp cloth. Do not use abrasive cleaners or scourers. Never immerse the motor base in water or any other liquid.
5. **Drying and Storage:** Ensure all parts are completely dry before reassembling or storing the blender. Store the blender in a dry place, away from direct sunlight and heat sources.

6. TROUBLESHOOTING

If you encounter issues with your BEKO Blender, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Blender does not start.	Not plugged in; Jug or lid not correctly assembled; Safety interlock not engaged.	Ensure the power cord is securely plugged in. Check that the glass jug is properly seated on the motor base and the lid is firmly closed and locked.
Blades are not spinning or spinning slowly.	Too much food; Ingredients are too thick; Obstruction around blades.	Reduce the amount of ingredients. Add more liquid. Unplug the blender and carefully remove any obstructions. Use the pulse function to break up larger pieces.
Loud noise or excessive vibration.	Blender not on a stable surface; Jug not properly seated; Overloaded.	Place the blender on a flat, stable surface. Ensure the jug is securely locked onto the motor base. Reduce the amount of ingredients.
Motor stops during operation.	Overheating due to prolonged use or overloading.	Unplug the blender and allow it to cool down for at least 10-15 minutes. Reduce the load before restarting.

If the problem persists after trying these solutions, please contact BEKO customer support.

7. SPECIFICATIONS

- **Brand:** BEKO
- **Model Number:** TBN81808BX
- **Power:** 800 Watts
- **Voltage:** 220 Volts
- **Frequency:** 50 Hz
- **Jug Capacity:** 1.75 Liters (Glass)
- **Number of Speeds:** 6 adjustable speeds
- **Blades:** 4 removable stainless steel blades (serrated)
- **Dimensions (L x W x H):** Approximately 20 x 15.5 x 38 cm
- **Weight:** Approximately 3.34 Kilograms
- **Special Features:** Pulse function, IceCrush function, Dishwasher-safe components (jug, blades), Non-slip feet
- **Material:** Stainless Steel, Glass

8. WARRANTY AND SUPPORT

For information regarding the warranty of your BEKO Blender, please refer to the warranty card included with your purchase or visit the official BEKO website. Warranty terms and conditions may vary by region.

For technical support, spare parts, or service inquiries, please contact BEKO customer service through their official channels. Ensure you have your model number (TBN81808BX) and proof of purchase available when contacting support.

You can find more information and contact details on the official BEKO website: www.beko.com

