

[Manuals.plus](#) /

› [KitchenAid](#) /

› KitchenAid Pure Power Blender KSB2072DG Instruction Manual

KitchenAid KSB2072DG

KitchenAid Pure Power Blender KSB2072DG Instruction Manual

Model: KSB2072DG

1. INTRODUCTION

This manual provides essential information for the safe and effective operation, maintenance, and care of your KitchenAid Pure Power Blender KSB2072DG. Please read all instructions carefully before using the appliance and retain this manual for future reference.

The KitchenAid Pure Power Blender is designed to assist in preparing a wide range of recipes, from smooth purees to chunky salsas, by offering precise speed control and powerful blending capabilities.



Image 1.1: The KitchenAid Pure Power Blender KSB2072DG, showcasing its sleek design and control panel.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

1. Read all instructions.
2. Do not immerse the blender base in water or other liquids.
3. Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
4. Close supervision is necessary when any appliance is used by or near children.
5. Avoid contact with moving parts.

6. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
7. The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock, or injury.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter.
10. Keep hands and utensils out of the container while blending to reduce the risk of severe injury to persons or damage to the blender. A scraper may be used but only when the blender is not running.
11. Blades are sharp. Handle carefully.
12. Always operate blender with lid in place.
13. When blending hot liquids, use caution as steam can escape and cause burns. Ensure the vented lid is properly positioned.
14. Do not use the appliance for other than intended use.

3. COMPONENTS AND FEATURES

Familiarize yourself with the parts of your KitchenAid Pure Power Blender:

- **Blender Base:** Houses the motor and control panel.
- **68 oz BPA-free Plastic Blender Jar:** The main blending container with measurement markings.
- **Blender Jar Lid:** Secures the contents during blending and features a removable ingredient cap.
- **Heat Release Vented Lid:** Specifically designed to allow steam to escape when blending hot ingredients.
- **Ice Crushing Blades:** Durable blades designed for efficient blending and ice crushing.
- **Precision Speed Control Knob:** Allows selection of 10 variable speeds and a Pulse function.
- **Pre-settings:** Dedicated buttons for On/Off, Smoothie, Ice Crush, and Clean functions.



Image 3.1: Diagram illustrating the key components of the blender, including the precision control speed knob, ice crushing blades, heat release vented lid, pre-settings, and the 68 oz BPA-free jar.

4. SETUP AND FIRST USE

1. **Unpack:** Carefully remove all parts from the packaging. Dispose of packaging materials responsibly.
2. **Clean:** Before first use, wash the blender jar, lid, and ingredient cap in warm, soapy water. Rinse thoroughly and dry. The blender base should be wiped clean with a damp cloth. Do not immerse the base in water.
3. **Assemble:** Place the blender jar securely onto the blender base. Ensure it is seated correctly. Place the lid onto the jar and twist to lock if applicable, or ensure it is firmly pressed down.
4. **Position:** Place the blender on a clean, dry, and stable surface.
5. **Connect Power:** Plug the power cord into a grounded electrical outlet.

5. OPERATING INSTRUCTIONS

The KitchenAid Pure Power Blender offers versatile blending options through its precision speed control and pre-set functions.

5.1 Adding Ingredients

- Always add liquids first, then soft ingredients, followed by hard ingredients, and finally ice.
- Do not overfill the blender jar beyond the maximum fill line.
- Ensure the lid is securely in place before operating.

5.2 Using the Precision Speed Control Knob

The control knob allows you to select speeds from 1 to 10, or use the Pulse function for short bursts of power.

1. Press the **On/Off** button to power on the blender.
2. Turn the **Precision Speed Control Knob** to your desired speed setting (1-10). The blender will start blending at the selected speed.
3. For short bursts of power, turn the knob to the **Pulse** setting and hold. Release to stop.
4. To stop blending, turn the knob to the '0' position or press the **On/Off** button.

5.3 Using Pre-set Functions

The blender features dedicated buttons for common blending tasks:

- **Smoothie:** Press this button for an optimized blending cycle to create smooth beverages.
- **Ice Crush:** Press this button for a cycle designed to efficiently crush ice.
- **Clean:** Press this button to initiate a cleaning cycle (refer to Maintenance section for details).

To use a pre-set function, ensure the blender is powered on, then press the desired function button. The blender will run through its pre-programmed cycle and stop automatically.

5.4 Blending Hot Liquids

When blending hot liquids, always ensure the **Heat Release Vented Lid** is properly positioned. Start blending at a low speed and gradually increase. Do not fill the jar beyond the 'Hot Liquids' maximum fill line, if indicated, to prevent overflow and potential burns.



Image 5.1: The KitchenAid Pure Power Blender ready for use in a kitchen, demonstrating its integration into a culinary environment.

6. CARE AND CLEANING

Regular cleaning ensures optimal performance and longevity of your blender.

6.1 Cleaning the Blender Jar and Lid

1. **Quick Clean (using 'Clean' pre-setting):** After use, rinse the jar. Fill the jar halfway with warm water and add a drop of dish soap. Secure the lid. Press the **Clean** button. Once the cycle is complete, empty the jar, rinse thoroughly, and dry.
2. **Hand Washing:** For a more thorough clean, disassemble the jar and lid components. Wash in warm, soapy water using a soft brush for the blades. Rinse thoroughly and dry completely before reassembling or storing. Exercise caution when handling the sharp blades.

6.2 Cleaning the Blender Base

Always unplug the blender before cleaning the base.

- Wipe the blender base with a damp cloth.
- Do not use abrasive cleaners or scourers, as they may damage the finish.
- Never immerse the blender base in water or any other liquid.

6.3 Storage

Store the blender in a clean, dry place. Ensure the power cord is neatly wrapped and not kinked. The jar can be stored assembled on the base or separately.

7. TROUBLESHOOTING

If you experience issues with your blender, consult the following table before contacting customer support.

Problem	Possible Cause	Solution
Blender does not turn on.	Not plugged in; power outlet not working; jar not seated correctly.	Ensure power cord is securely plugged in. Check power outlet with another appliance. Ensure blender jar is properly aligned and locked onto the base.
Ingredients are not blending smoothly.	Too little liquid; too many ingredients; ingredients too large.	Add more liquid. Reduce the amount of ingredients. Cut ingredients into smaller pieces. Use the Pulse function or increase speed.
Blender is leaking.	Lid not properly secured; jar overfilled.	Ensure the lid is firmly in place. Do not fill the jar beyond the maximum fill line.
Motor stops during operation.	Overload protection activated.	Unplug the blender. Remove some ingredients. Let the motor cool down for 10-15 minutes before restarting.

8. SPECIFICATIONS

- **Model Number:** KSB2072DG
- **Brand:** KitchenAid
- **Product Dimensions:** 27.9 cm (D) x 33 cm (W) x 45.7 cm (H)
- **Item Weight:** 4.66 kg
- **Jar Capacity:** 68 oz (BPA-free Plastic)
- **Power:** 1700 watt peak power (approximate)
- **UPC:** 883049917733



Image 8.1: Visual representation of the blender's dimensions, indicating height, depth, and width.

9. WARRANTY INFORMATION

This KitchenAid Pure Power Blender KSB2072DG comes with a **1 Year Limited Warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal household use. It does not cover damage resulting from accident, misuse, abuse, commercial use, or unauthorized modification. Please retain your proof of purchase for warranty claims.

10. CUSTOMER SUPPORT

For further assistance, service, or to inquire about replacement parts, please visit the official KitchenAid website or contact KitchenAid customer service. Contact information can typically be found on the KitchenAid website or on the product packaging.

You can find more information and support resources at the [KitchenAid Store on Amazon](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question