

GDR PRO GK-R

GDR PRO Keyless Keypad Intellicode GK-R User Manual

Model: GK-R

1. INTRODUCTION

Thank you for choosing the GDR PRO Keyless Keypad Intellicode GK-R. This device provides convenient, secure access to your garage without the need for a traditional remote. It is designed to be compatible with Genie Intellicode garage door openers.

This manual provides essential information for the proper installation, programming, and maintenance of your new keypad.

Package Contents:

- GDR PRO Keyless Keypad Unit(s)
- Wall Mount Hardware (Screws and Anchors)
- Lithium Metal Battery(ies) (pre-installed or included separately)
- Programming Guide



Image: Contents included with the GDR PRO Keyless Keypad package, showing two keypads, a programming guide, mounting screws, and two 9V batteries.

2. IMPORTANT SAFETY INFORMATION

Please read and understand all safety warnings before installation and operation. Failure to follow these instructions may result in serious injury or property damage.

- **DO NOT** allow children to operate the keypad or play with the garage door opener.
- Keep the garage door in sight while operating it with the keypad. Ensure no persons or objects are in the path of the door.
- Install the keypad out of the reach of small children (at least 5 feet above the floor) and away from all moving parts of the door.
- Dispose of batteries properly according to local regulations.

3. SETUP AND INSTALLATION

3.1 Battery Installation

The keypad requires one Lithium Metal battery (included). The battery compartment is typically located on the back of the unit or under a removable cover. Ensure the battery is inserted with the correct polarity (+/-) as indicated inside the compartment.

3.2 Mounting the Keypad

Select a convenient location outside your garage, at least 5 feet above the ground, where the keypad is easily accessible but out of reach of small children. Avoid mounting directly in direct sunlight or where it will be exposed to excessive moisture.

1. Open the keypad cover.
2. Mark the desired mounting holes on the wall using the keypad as a template.
3. Drill pilot holes if necessary, and insert the provided wall anchors.
4. Secure the keypad to the wall using the provided screws. Ensure it is firmly attached.



Image: Two GDR PRO keypads shown with the included mounting screws and wall anchors, illustrating the components used for installation.

4. OPERATING INSTRUCTIONS

4.1 Programming the Keypad

The GDR PRO Keyless Keypad is designed to be programmed to your Genie Intellicode garage door opener. Detailed

programming instructions are provided with your purchase on a separate programming guide. Generally, the process involves:

1. Locating the "Learn" or "Program" button on your garage door opener motor head unit.
2. Pressing the "Learn" button to activate programming mode (the indicator light will typically illuminate).
3. Quickly entering your desired personal identification number (PIN) on the keypad and pressing the "Program" or "Send" button.
4. Confirming the programming by testing the keypad.

Note: Refer to the specific programming guide included with your keypad for exact steps, as procedures may vary slightly depending on your Genie opener model. A programming video may also be available to assist you.

4.2 Daily Operation

To operate your garage door using the keypad:

1. Open the keypad cover.
2. Enter your programmed 4-digit PIN.
3. Press the "Program" or "Send" button (or the designated activation button).
4. The garage door should activate.

5. MAINTENANCE

5.1 Battery Replacement

When the keypad's backlight dims or the range decreases, it is likely time to replace the battery. Replace with a new Lithium Metal battery of the same type.

1. Open the keypad cover.
2. Locate and remove the battery compartment cover.
3. Remove the old battery and insert the new battery, observing correct polarity.
4. Securely replace the battery compartment cover. Ensure it clicks into place to prevent it from falling off.
5. Test the keypad operation.

5.2 Cleaning

Clean the keypad surface with a soft, damp cloth. Do not use abrasive cleaners or solvents, as they may damage the finish or electronic components.

6. TROUBLESHOOTING

- **Keypad not responding:**
 - Check if the battery is properly installed and has sufficient charge. Replace if necessary.
 - Ensure the keypad is within range of the garage door opener.
 - Verify that the keypad is correctly programmed to your opener. If unsure, repeat the programming steps.
- **Garage door does not open/close:**
 - Confirm you are entering the correct PIN.
 - Check for any obstructions in the path of the garage door.
 - Ensure the garage door opener itself is powered and functioning correctly.
- **Battery cover loose or falling off:**
 - Ensure the battery is seated correctly and not causing pressure on the cover.

- Press the cover firmly until it clicks into place. If it continues to be loose, contact customer support.

7. SPECIFICATIONS

Brand	GDR PRO
Model	GK-R
Recommended Uses	Residential
Material	Acrylonitrile Butadiene Styrene (ABS)
Item Weight	1 ounces
Package Dimensions	8.58 x 4.92 x 2.68 inches
Batteries Required	Yes (1 Lithium Metal battery included)
Installation Type	Screw-In
UPC	850039199103

8. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation provided with your purchase or contact the seller directly. Keep your proof of purchase for warranty claims.