

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Bioby](#) /

> [Bioby Electric Baby Swing BB008HP Instruction Manual](#)

Bioby BB008HP

Bioby Electric Baby Swing BB008HP Instruction Manual

Model: BB008HP | Brand: Bioby

1. INTRODUCTION

Thank you for choosing the Bioby Electric Baby Swing. This manual provides essential information for the safe and effective use, assembly, operation, and maintenance of your baby swing. Please read all instructions carefully before use and retain this manual for future reference.

2. IMPORTANT SAFETY INFORMATION

WARNING: Failure to follow these warnings and instructions could result in serious injury or death.

- Always use the 5-point harness system to secure your child. Ensure all straps are properly fastened and adjusted snugly.
- Never leave child unattended.
- Discontinue use of the product when child can sit up unaided or attempts to climb out.
- Maximum weight recommendation: 20 pounds (9 kg). Suitable for infants 0-6 months.
- Do not use this product if it is damaged or broken.
- Keep the product away from water and moisture.
- Ensure the swing is placed on a flat, level surface.
- Only use the power adapter provided by the manufacturer.

3. PACKAGE CONTENTS

Please check that all items are present and in good condition:

- Main Base Unit
- Seat Frame
- Seat Cover with Headrest and 5-Point Harness

- Canopy with Integrated Mosquito Net
- 2 Hanging Plush Toys (Moon and Star)
- Remote Control (with 1 CR2032 battery included)
- Power Adapter (Output: 5V/1A)
- Instruction Manual

4. SETUP AND ASSEMBLY

Follow these steps to assemble your Bioby Electric Baby Swing:

1. **Assemble the Base Bracket:** Connect the two curved base brackets to the main base unit. Ensure they click securely into place. Use the provided screws to tighten and secure the connection points.
2. **Attach the Seat Frame:** Insert the seat frame into the designated slot on the main base unit. Align the shape and push down until it locks.
3. **Install the Seat Cover & Pillow:** Slide the seat cover onto the seat frame from top to bottom. Zip up and fasten the Velcro straps on the back to secure it. Attach the soft headrest pillow to the top ring, securing it with Velcro.
4. **Attach the Canopy with Toys:** Add the two plush toys (moon and star) to the loops on the canopy. Fasten the canopy clasps to the seat frame pipe. Attach the mosquito net to the bottom of the frame for full coverage.
5. **Power Connection:** Plug the power adapter into the designated port on the base unit and then into a wall outlet. The swing can also be powered by a power bank for portability.

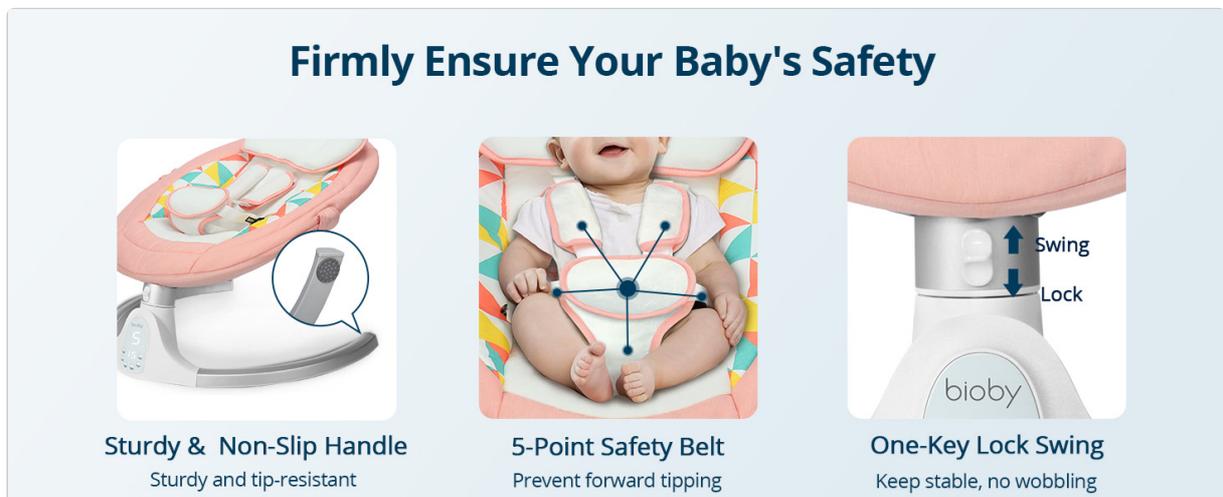


Image: Detailed steps for assembling the base, seat cover, and canopy.

Your browser does not support the video tag.

Video: Official Bioby video demonstrating the assembly process of the baby swing.

5. OPERATING INSTRUCTIONS

The Bioby Electric Baby Swing can be operated using the IMD touch panel on the base unit or the included remote control.

Touch Panel Controls:

- **Power Button:** Turn the swing ON/OFF.
- **Swing Speed:** Adjust between 5 gentle swing speeds.

- **Timer:** Set the swing to operate for 8, 15, or 30 minutes.
- **Music:** Play built-in natural sounds or connect via Bluetooth for custom music.
- **Volume:** Adjust music volume up or down.

Remote Control Functions:

The remote control offers convenient operation from a distance.



Image: Remote control for the baby swing, detailing buttons for music, volume, timer, and 5 swing speeds.

- **Power (Red Button):** Turn the swing ON/OFF.
- **Music (Blue Button):** Toggle built-in music.
- **Timer (Blue Button):** Cycle through 8, 15, 30 minute timer options.
- **Volume +/-:** Adjust music volume.
- **Play/Pause, Next/Previous Track:** Control music playback.
- **Sleep (Green Button):** Activates a gentle sleep mode.
- **Stop (Yellow Button):** Stops the swing motion.
- **Speed Levels (1-5 Buttons):** Select desired swing speed.

Bluetooth Connectivity:

To connect your device via Bluetooth, press the music button on the touch panel or remote until the Bluetooth indicator lights up. Search for 'Bioby Swing' on your device and pair. You can then play your child's favorite tunes through the swing's speaker.

6. FEATURES

- **5 Gentle Swing Speeds:** Provides various soothing motions for your infant.
- **3 Timer Options:** Allows for automatic shut-off after 8, 15, or 30 minutes.
- **Built-in Music & Bluetooth:** Features natural sounds and Bluetooth connectivity for personalized music.
- **Ergonomic Seat:** Designed with adjustable angles to cradle infants comfortably and support neck and spine.
- **5-Point Harness:** Ensures your baby is securely fastened.
- **Removable Mosquito Net:** Protects your baby from insects and harsh lighting, ideal for indoor and outdoor use.
- **Detachable & Machine-Washable Cushion:** Easy to clean for hygiene and convenience.
- **Portable Design:** Lightweight aluminum base allows for easy movement and storage. Can be powered by an adapter or power bank.

Premium Comfort Materials

Safe, cozy, and rash-free

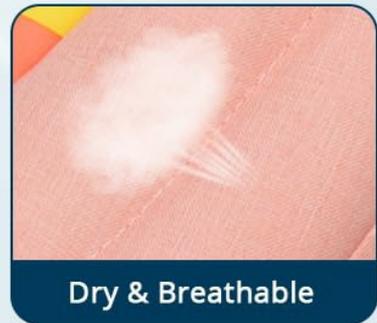


Image: Close-up of the swing's premium comfort materials, including a softer pillow, non-slip cushion, and dry & breathable fabric.

3 Timer Settings Plus 2 Hanging Stuffed Toys

Enable you to own your space and time



Timer settings

8
min

15
min

30
min

Develop grasping strength

Image: The baby swing featuring its removable canopy with mosquito net and hanging plush toys.

7. MAINTENANCE

- **Cushion Cleaning:** The seat cushion is detachable and machine-washable. Refer to the care label for specific washing instructions.
- **Frame Cleaning:** Wipe the frame and plastic components with a damp cloth and mild soap. Do not use abrasive cleaners.
- **Storage:** When not in use, store the swing in a clean, dry place away from direct sunlight.

8. TROUBLESHOOTING

- **Swing Not Turning On:** Ensure the power adapter is securely plugged into both the swing and a working wall outlet. Check if the power button on the touch panel or remote is pressed.
- **Swing Not Moving:** Verify that a swing speed is selected (1-5). Ensure no obstructions are preventing the swing motion.
- **Music Not Playing:** Check the volume settings on both the swing and your Bluetooth device (if connected). Ensure Bluetooth is properly paired.
- **Remote Control Not Working:** Check the CR2032 battery in the remote control and replace if

necessary. Ensure there are no obstructions between the remote and the swing's sensor.

9. SPECIFICATIONS

Feature	Specification
Model Number	BB008HP
Product Dimensions	27.6 x 24.4 x 27.6 inches (70 x 62 x 70 cm)
Item Weight	7.27 pounds (3.3 kg)
Maximum Weight Recommendation	20 Pounds (9 kg)
Material Type	Aluminum, Polycotton
Power Source	Battery Powered (1 CR2032 included for remote), Adapter Powered
Is Portable	Yes

10. WARRANTY AND SUPPORT

Bioby products come with a standard manufacturer's warranty. For detailed warranty information, product support, or to inquire about replacement parts, please visit the official Bioby website or contact customer service using the information provided on the product packaging.

You can also visit the Bioby Store on Amazon for more products and support:[Bioby Store](#)