

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Remington](#) /

› [Remington® 'The Beardsman' Beard Trimmer for Men, Ultimate Precision Full Beard Grooming Kit and Hair Clippers, with 3 Adjustable Combs, Scissors, and Brush, Black](#)

Remington MB4046

Remington® 'The Beardsman' Beard Trimmer User Manual

Model: MB4046

INTRODUCTION

This manual provides comprehensive instructions for the safe and effective use of your Remington® 'The Beardsman' Beard Trimmer. Designed for precise grooming, this kit offers versatile options for maintaining various beard styles, from short stubble to full, luxurious beards.



Figure 1: The Remington® 'The Beardsman' Beard Trimmer and its complete grooming kit, including the trimmer, three adjustable combs, scissors, and a beard brush.

IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before using this appliance. Keep this manual for future reference.

- Always keep the trimmer away from your eyes and face during operation.
- Do not ingest or inhale small parts. Ensure all components are securely attached before use.
- Do not immerse the trimmer in water. This appliance is not waterproof.
- Keep out of reach of children.
- Use only with the provided charging adapter.

PRODUCT OVERVIEW & COMPONENTS

Your Remington® 'The Beardsman' grooming kit includes the following components:

- Remington® Beard Trimmer Unit

- XL Length Trimming Comb (20-35mm)
- Full Beard Comb (1.5-18mm)
- Stubble Comb (1-5mm)
- Precision Detail Trimmer (Pop-up)
- Beard Scissors
- Beard Brush
- Charging Adapter

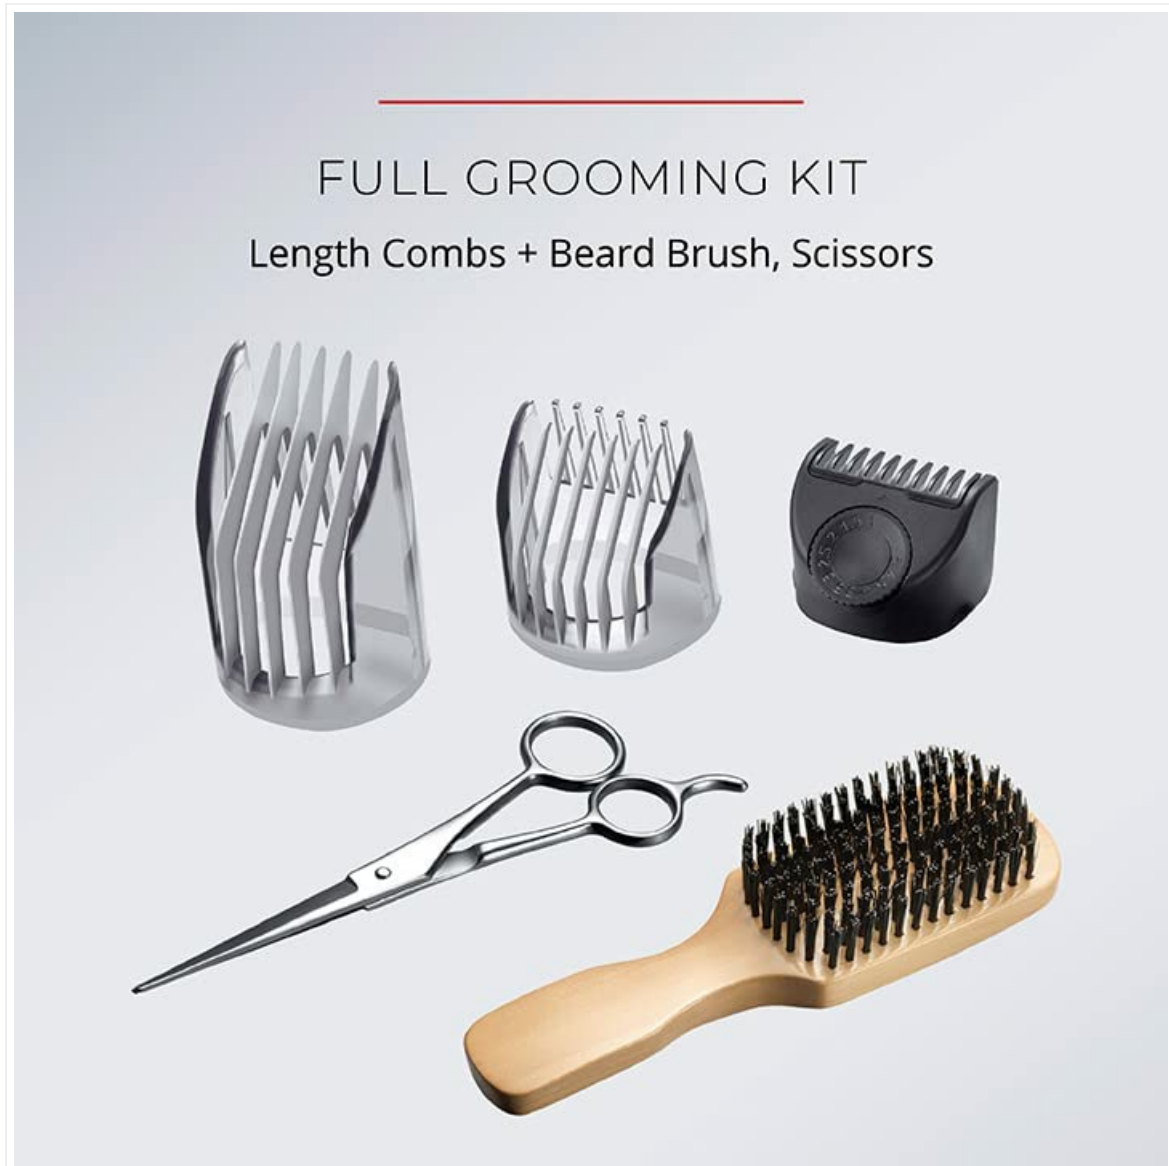


Figure 2: The various accessories included in the grooming kit, such as the adjustable combs, scissors, and beard brush.

SETUP

Charging the Trimmer

1. Ensure the trimmer is switched off.
2. Connect the charging adapter to the trimmer's charging port.
3. Plug the adapter into a standard electrical outlet.
4. Allow the trimmer to charge for approximately 4 hours for a full charge. The charging indicator light will illuminate during charging.

A full charge provides up to 90 minutes of cordless runtime.

RECHARGEABLE BATTERY

Up To 90 Minutes Of
Cordless Runtime



Figure 3: The power button and charging indicator light on the trimmer, indicating its rechargeable battery status.

Attaching and Adjusting Combs

1. Select the desired comb (XL, Full Beard, or Stubble) based on your preferred length.
2. Align the comb with the trimmer head and gently push until it clicks into place.
3. Use the zoom wheel located on the trimmer body to adjust the cutting length. Rotate the wheel to select from the 27 available length options. The selected length will be displayed.
4. Ensure the comb is securely locked in place before trimming.



ZOOM WHEEL

Lock Adjustable
Combs in Place

Figure 4: The zoom wheel mechanism for locking adjustable combs and setting desired trimming lengths.

3 ADJUSTABLE COMBS

27 Length Options for Our Widest Trimming Range*



Figure 5: The three distinct adjustable combs provided for various beard lengths: XL, full beard, and stubble.

OPERATING INSTRUCTIONS

General Trimming

1. Before trimming, ensure your beard is clean and dry.
2. Select the appropriate comb and length setting.
3. Turn on the trimmer by pressing the power button.
4. Hold the trimmer with the blades pointing towards your beard.
5. Trim against the direction of hair growth for an even cut. Use smooth, controlled strokes.
6. For best results, trim small sections at a time.

Using the Detail Trimmer

The precision detail trimmer is ideal for shaping sideburns, defining beard lines, and reaching hard-to-access areas.

1. Ensure the main comb is removed or retracted.
2. Locate the pop-up detail trimmer release button (if applicable, based on image 61vXrBGAoCL.jpg).
3. Activate the detail trimmer.
4. Carefully use the smaller blade to create precise lines and edges.



Figure 6: The trimmer with its integrated pop-up detail trimmer extended, ready for precise shaping.

MAINTENANCE

Cleaning the Trimmer

1. Turn off and unplug the trimmer before cleaning.
2. Remove any attached combs.
3. Use the provided cleaning brush to remove hair clippings from the blades and comb attachments.
4. For a more thorough clean, the trimmer head can be detached (refer to specific instructions in the full user guide if available). Do not rinse the entire unit under water as it is not waterproof.
5. Periodically oil the blades with light machine oil (not included) to maintain optimal performance.

Storage

Store the trimmer and its accessories in a dry place, away from moisture and extreme temperatures. Keep all components together to prevent loss.

TROUBLESHOOTING

| Problem | Possible Cause | Solution |
|---|---------------------------------------|---|
| Trimmer does not turn on. | Battery is depleted. | Charge the trimmer for 4 hours. |
| Poor trimming performance / pulling hair. | Blades are dull or clogged with hair. | Clean the blades thoroughly. Consider oiling the blades. |
| Comb attachment is loose. | Comb not properly secured. | Ensure the comb is fully clicked into place and the zoom wheel is locked. |

SPECIFICATIONS

Model Number: MB4046

Brand: Remington

Power Source: Battery Powered (Rechargeable)

Runtime: Up to 90 minutes (cordless)

Charging Time: Approximately 4 hours

Cutting Lengths: 27 options (1-35mm with various combs)

Product Dimensions: 6 x 2 x 1 inches

Weight: 1.39 Pounds

Color: Black Beardsman

UPC: 074590556223

WARRANTY AND SUPPORT

Remington products are manufactured to the highest quality standards. For detailed warranty information, please refer to the warranty card included with your product or visit the official Remington website.

For further assistance, troubleshooting, or to access the full user manual, please visit the [Remington Store](#) or consult the [User Manual \(PDF\)](#).