

[Manuals.plus](#) /

> [Aiwa](#) /

> Aiwa MI-X180 Retro Heritage Bluetooth Speaker User Manual

Aiwa MI X180

Aiwa MI-X180 Retro Heritage Bluetooth Speaker User Manual

Model: MI-X180

1. INTRODUCTION

Thank you for purchasing the Aiwa MI-X180 Retro Heritage Bluetooth Speaker. This manual provides essential information for setting up, operating, and maintaining your speaker. Please read it thoroughly before use to ensure optimal performance and longevity of your device.



Figure 1.1: Aiwa MI-X180 Speaker - Angled View

This image shows the Aiwa MI-X180 speaker from an angled perspective, highlighting its brown leatherette finish, large silver front grille, and the top control panel with metallic accents. The speaker's retro design is prominent.



Figure 1.2: Aiwa MI-X180 Speaker - Front View with Handle

This image presents a direct front view of the Aiwa MI-X180 speaker, featuring its prominent silver grille and the Aiwa logo at the bottom. The red carrying handle is extended upwards, indicating its portability.

2. PACKAGE CONTENTS

Please check the package for the following items:

- Aiwa MI-X180 Retro Heritage Bluetooth Speaker
- USB Charging Cable
- AUX Cable
- User Manual (this document)

If any items are missing or damaged, please contact your retailer or Aiwa customer support.

3. PRODUCT FEATURES

- **80W High-Fidelity Audio:** Powerful sound output for an immersive listening experience.

- **Bluetooth Connectivity:** Seamless wireless streaming from compatible devices (AVRCP, A2DP).
- **True Wireless Stereo (TWS):** Connect two MI-X180 speakers for enhanced stereo sound.
- **Hands-Free Calling:** Built-in microphone for convenient call management.
- **AUX IN:** Wired connection option for non-Bluetooth devices.
- **DSP Technology:** Digital Signal Processing for optimized audio performance.
- **Retro Heritage Design:** Classic aesthetic with modern functionality.

4. CONTROLS AND INDICATORS



Figure 4.1: Top Control Panel

This image displays a detailed view of the speaker's top control panel. From left to right, it features a USB port, an AUX input, and a DC IN 5V charging port. Below these are three rotary knobs for adjusting Treble, Bass, and Volume, respectively. To the far right is a toggle switch for power. Below the ports and knobs are three buttons: a previous track/rewind button, a play/pause button (also for pairing), and a next track/fast forward button.

Table 4.1: Control Panel Functions

Control/Indicator	Function
USB Port	For charging external devices or playing music from USB drives (if supported).
AUX IN	Connect external audio sources via 3.5mm audio cable.
DC IN 5V	Power input for charging the speaker.
Treble Knob	Adjusts the high-frequency audio output.
Bass Knob	Adjusts the low-frequency audio output.
Volume Knob	Adjusts the overall audio volume.
Power Switch	Turns the speaker ON or OFF.

Control/Indicator	Function
M/◀◀	Short press for previous track; Long press for rewind.
PAIR/▶▶	Short press for play/pause; Long press to enter Bluetooth pairing mode.
▶▶/I	Short press for next track; Long press for fast forward.

5. SETUP

5.1 Charging the Speaker

Before first use, fully charge the speaker. Connect the supplied USB charging cable to the DC IN 5V port on the speaker and the other end to a USB power adapter (not included) or a computer's USB port. The charging indicator light will illuminate during charging and turn off when fully charged.

5.2 Powering On/Off

To power on the speaker, toggle the Power Switch to the ON position. To power off, toggle the switch to the OFF position.

6. OPERATING INSTRUCTIONS

6.1 Bluetooth Pairing

1. Ensure the speaker is powered on and within 10 meters (33 feet) of your Bluetooth device.
2. The speaker will automatically enter Bluetooth pairing mode when powered on for the first time, or if no device is connected. The Bluetooth indicator light will flash.
3. If already connected to a device, or to force pairing mode, long press the ▶▶ button (PAIR).
4. Enable Bluetooth on your device (smartphone, tablet, computer).
5. Search for "AIWA MI-X180" in the list of available devices and select it.
6. Once paired, the Bluetooth indicator light will become solid, and you will hear a confirmation tone.

Note: The speaker will automatically attempt to reconnect to the last paired device when powered on.

6.2 AUX Input Mode

To use the AUX input:

1. Connect one end of the supplied 3.5mm AUX cable to the AUX IN port on the speaker.
2. Connect the other end of the AUX cable to the headphone jack or audio output port of your external audio device (e.g., MP3 player, TV).
3. The speaker will automatically switch to AUX mode. Adjust volume using the speaker's volume knob and your external device.

6.3 Hands-Free Calling

When connected to a smartphone via Bluetooth:

- **Answer Call:** Short press the ▶▶ button (PLAY/PAUSE).
- **End Call:** Short press the ▶▶ button (PLAY/PAUSE) during a call.
- **Reject Call:** Long press the ▶▶ button (PLAY/PAUSE) when an incoming call rings.
- **Redial Last Number:** Double press the ▶▶ button (PLAY/PAUSE).

6.4 True Wireless Stereo (TWS) Pairing

To pair two Aiwa MI-X180 speakers for TWS stereo sound:

1. Ensure both MI-X180 speakers are powered on and not connected to any Bluetooth device.
2. On one speaker (this will be the primary speaker), long press the **▶▶** button (PAIR) until you hear a TWS pairing prompt.
3. The two speakers will automatically search for and connect to each other. Once connected, you will hear a confirmation tone, and the indicator lights will change.
4. Now, connect your Bluetooth device to the primary speaker as described in section 6.1. Audio will play in stereo through both speakers.

Note: TWS pairing only works between two identical MI-X180 speakers.

7. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the speaker. Do not use abrasive cleaners, waxes, or solvents.
- **Storage:** Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the speaker regularly, even if not in use for extended periods.
- **Water Resistance:** This speaker is not water-resistant. Avoid exposure to liquids.

8. TROUBLESHOOTING

Table 8.1: Common Issues and Solutions

Problem	Possible Cause	Solution
Speaker does not power on.	Battery is depleted.	Charge the speaker fully.
No sound from speaker.	Volume is too low; Incorrect input mode; Device not connected.	Increase volume; Ensure correct mode (Bluetooth/AUX); Re-pair Bluetooth device or check AUX cable connection.
Bluetooth device cannot pair.	Speaker not in pairing mode; Device too far; Interference.	Long press PAIR button; Move device closer; Turn off other Bluetooth devices.
Poor sound quality.	Low battery; Device too far; Interference; Source audio quality.	Charge speaker; Move device closer; Reduce interference; Try a different audio source.
TWS pairing fails.	Speakers not identical; One speaker already paired to a device.	Ensure both are MI-X180 models; Disconnect any Bluetooth devices from both speakers before TWS pairing.

If the problem persists after trying these solutions, please contact Aiwa customer support.

9. SPECIFICATIONS

Table 9.1: Technical Specifications

Feature	Detail
Model Name	MI-X180
Brand	Aiwa
Speaker Output Power	80 Watts
Connectivity Technology	Bluetooth (AVRCP, A2DP), Auxiliary
Audio Output Mode	Stereo
Special Features	TWS (True Wireless Stereo), Hands-Free Calling, DSP
Compatible Devices	MP3 Player, Laptop, Tablet, Smartphone
Mounting Type	Tabletop

10. SAFETY INFORMATION

Please read and follow these safety guidelines:

- Do not expose the speaker to extreme temperatures, humidity, or direct sunlight.
- Do not disassemble, repair, or modify the speaker yourself. Refer all servicing to qualified personnel.
- Keep the speaker away from water and other liquids.
- Do not block any ventilation openings.
- Use only the supplied charging cable.
- Avoid listening at high volumes for extended periods to prevent hearing damage.

11. WARRANTY AND SUPPORT

The Aiwa MI-X180 Retro Heritage Bluetooth Speaker comes with a standard manufacturer's warranty. Please refer to the warranty card included in your package for details regarding warranty period and terms. For technical support, troubleshooting assistance, or warranty claims, please contact Aiwa customer service through their official website or the contact information provided with your purchase.

You can visit the official Aiwa store for more information: [Aiwa Official Store](#)

