

[Manuals.plus](#) /

> [Aspes](#) /

> Aspes ALV118X Dishwasher User Manual

## Aspes ALV118X

# Aspes ALV118X Dishwasher User Manual

Model: ALV118X

## INTRODUCTION

---

This manual provides essential information for the safe and efficient use of your Aspes ALV118X Stainless Steel Dishwasher. Please read these instructions carefully before installation, operation, or maintenance to ensure optimal performance and longevity of your appliance. Keep this manual for future reference.



Image: Front view of the Aspes ALV118X Stainless Steel Dishwasher, showcasing its sleek design and integrated control panel.

## SETUP AND INSTALLATION

---

The Aspes ALV118X is designed for integrated installation, meaning it is built into your kitchen cabinetry for a seamless look. Due to the nature of integrated appliances, professional installation is highly recommended to ensure proper fitting, electrical connection, and plumbing.

### Unpacking

- Carefully remove all packaging materials.
- Inspect the dishwasher for any signs of damage during transit. Do not install a damaged appliance.
- Ensure all included components, such as the cutlery basket and drying system, are present.

### Location Requirements

- The installation area must be level and capable of supporting the dishwasher's weight (approximately 46.9 kg).
- Ensure adequate space for plumbing and electrical connections. The dishwasher has a width of 60 cm.
- Avoid installing near heat sources or in direct sunlight.

### Electrical and Water Connections

- The dishwasher requires a 230 Volts (AC) mains electrical supply. Ensure the circuit is properly grounded and protected by a fuse or circuit breaker.
- Connect the water inlet hose to a cold water supply with appropriate pressure.
- Connect the drain hose to a suitable drain system, ensuring it is properly secured to prevent leaks.

**Important:** All electrical and plumbing connections must comply with local codes and regulations. If you are unsure, consult a qualified technician.

## OPERATING INSTRUCTIONS

---

Your Aspes ALV118X dishwasher features intuitive touch controls for easy program selection and operation.

### Loading the Dishwasher

- Scrape off large food particles from dishes before loading.
- Place larger items in the lower basket and smaller, delicate items in the upper basket.
- Ensure dishes do not block the spray arms.
- Use the included cutlery basket for forks, spoons, and knives, ensuring sharp ends face downwards.

### Adding Detergent and Rinse Aid

- Open the detergent dispenser and add the recommended amount of dishwasher detergent. Close the dispenser lid securely.
- Check the rinse aid indicator. If low, refill the rinse aid dispenser to ensure streak-free drying.

### Selecting and Starting a Wash Program

1. Close the dishwasher door firmly.
2. Using the touch controls on the panel, select your desired wash program. Available options include:
  - **Normal Wash:** For daily soiled dishes and glassware.

- **Quick Wash:** For lightly soiled items or when you need dishes cleaned faster.
3. Press the Start button to begin the cycle. The dishwasher will automatically proceed through the wash, rinse, and drying phases.

## After the Cycle

- Wait a few minutes after the cycle finishes before opening the door to allow steam to dissipate and dishes to cool.
- Unload the lower basket first to prevent water from dripping onto dry dishes.

## MAINTENANCE

---

Regular maintenance ensures your Aspes ALV118X dishwasher operates efficiently and extends its lifespan.

### Cleaning the Filters

- Locate the filter assembly at the bottom of the dishwasher tub.
- Twist and remove the coarse filter, fine filter, and microfilter.
- Rinse all filter components under running water to remove food particles. Use a soft brush if necessary.
- Reassemble the filters and place them back into the dishwasher, ensuring they are securely locked in place. Clean filters regularly, ideally after every few washes.

### Cleaning the Spray Arms

- Periodically check the spray arm nozzles for blockages.
- If blocked, remove the spray arms and clear the holes with a thin wire or toothpick.
- Rinse and reattach the spray arms.

### Exterior and Interior Cleaning

- Wipe the exterior stainless steel surface with a soft, damp cloth and a mild detergent. Avoid abrasive cleaners.
- Clean the interior of the dishwasher periodically by running an empty cycle with a dishwasher cleaner or a cup of white vinegar.

### Salt and Rinse Aid

- Regularly check and refill the dishwasher salt reservoir, especially in hard water areas, to prevent limescale buildup.
- Ensure the rinse aid dispenser is topped up for optimal drying performance and to prevent water spots.

## TROUBLESHOOTING

---

Before contacting customer service, refer to the following common issues and solutions:

Problem	Possible Cause	Solution
Dishwasher does not start	Power supply issue, door not closed properly, program not selected.	Check power connection, ensure door is latched, select a wash program.
Dishes are not clean	Clogged filters, blocked spray arms, incorrect loading, insufficient detergent.	Clean filters and spray arms, reload dishes correctly, use appropriate detergent.
Water spots or streaks on dishes	Low rinse aid, hard water.	Refill rinse aid dispenser, check salt level, consider a higher quality rinse aid.

Problem	Possible Cause	Solution
Dishwasher is leaking	Improper hose connection, damaged door seal, excessive detergent.	Check hose connections, inspect door seal for damage, use correct detergent amount.

If the problem persists after attempting these solutions, please contact customer support.

## PRODUCT SPECIFICATIONS

---

Brand	Aspes
Model Name	ALV118X
Installation Type	Integrated
Form Factor	Freestanding (designed for integration)
Material	Stainless Steel
Capacity (Place Settings)	12
Water Consumption (per cycle)	12 Litres
Noise Level	49 Decibels
Controls Type	Touch
Special Features	Quick Wash, Leak-resistant
Cycle Options	Normal Wash, Quick Wash (2 options)
Voltage	230 Volts (AC)
Weight	46.9 Kilograms
Included Components	Cutlery Basket, Drying System
Recommended Use	Daily dishware and glassware

## WARRANTY INFORMATION

---

For detailed information regarding the warranty coverage for your Aspes ALV118X Dishwasher, please refer to the warranty card included with your purchase or consult your retailer. Warranty terms and conditions may vary by region and point of purchase.

## CUSTOMER SUPPORT

---

If you require further assistance, have questions not covered in this manual, or need to report a service issue, please contact Aspes customer service or your authorized retailer. Have your model number (ALV118X) and purchase details ready when contacting support.

