

[Manuals.plus](#) /

› [Wildgame Innovations](#) /

› WILDGAME Innovations Terra Extreme 2.0 Trail Camera User Manual

Wildgame Innovations TERAX

WILDGAME Innovations Terra Extreme 2.0 Trail Camera User Manual

Model: TERAX

INTRODUCTION

The WILDGAME Innovations Terra Extreme 2.0 Trail Camera is designed for outdoor use, providing reliable surveillance for hunting and wildlife monitoring. This manual provides essential information for setting up, operating, and maintaining your trail camera to ensure optimal performance.



Figure 1: Front view of the Terra Extreme 2.0 Trail Camera, showcasing its rugged, camouflaged design.

1. Battery Installation

The Terra Extreme 2.0 Trail Camera requires eight (8) AA batteries (not included). For best performance and battery life, it is recommended to use high-quality alkaline or lithium batteries.

1. Locate the battery compartment on the camera.
2. Open the latch to access the compartment.
3. Insert eight AA batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
4. Close the battery compartment securely to maintain the camera's waterproof seal.

2. SD Card Installation

A memory card is required to store photos and videos. The camera supports SD cards up to 32 GB. A Class 10 SD card is recommended for optimal performance.

1. With the camera powered off, locate the SD card slot.
2. Insert the SD card into the slot with the label facing up until it clicks into place.
3. To remove the SD card, gently push it in until it springs out.

3. Mounting the Camera

The camera comes with an adjustable tree strap for easy mounting. It also features a cable-lock ready latch for additional security (security accessories not included).

1. Select a sturdy tree or post at the desired height and location.
2. Thread the adjustable tree strap through the slots on the back of the camera.
3. Wrap the strap around the tree and secure it using the durable alligator-style clips.
4. Tighten the strap to ensure the camera is firmly attached and stable.
5. Angle the camera to cover the desired detection area.



Figure 2: The Terra Extreme 2.0 Trail Camera securely mounted to a tree using the provided strap.

OPERATING INSTRUCTIONS

1. Powering On and Off

To power on the camera, open the front cover and locate the power switch. Slide the switch to the 'ON' position. To power off, slide the switch to 'OFF'.



Figure 3: Angled view of the camera, illustrating the side latch for opening the unit and accessing controls.

2. Setting Camera Modes

The camera offers different modes for capturing content. Use the mode selector switch inside the camera to choose your preferred setting:

- **Photos Only:** Captures still images when motion is detected.
- **Videos Only:** Records video clips when motion is detected.
- **Photos + Videos:** Captures both still images and video clips when motion is detected.

3. Adjusting Settings

Use the menu buttons (MENU, UP, DOWN, ENTER) located inside the camera to navigate and adjust various settings such as time, date, moon phase stamp, burst length, and delay between captures. Refer to the on-screen display for current selections. The camera also supports the HuntSmart app for enhanced control and data management. You can download the app from the Apple App Store or Google Play Store.

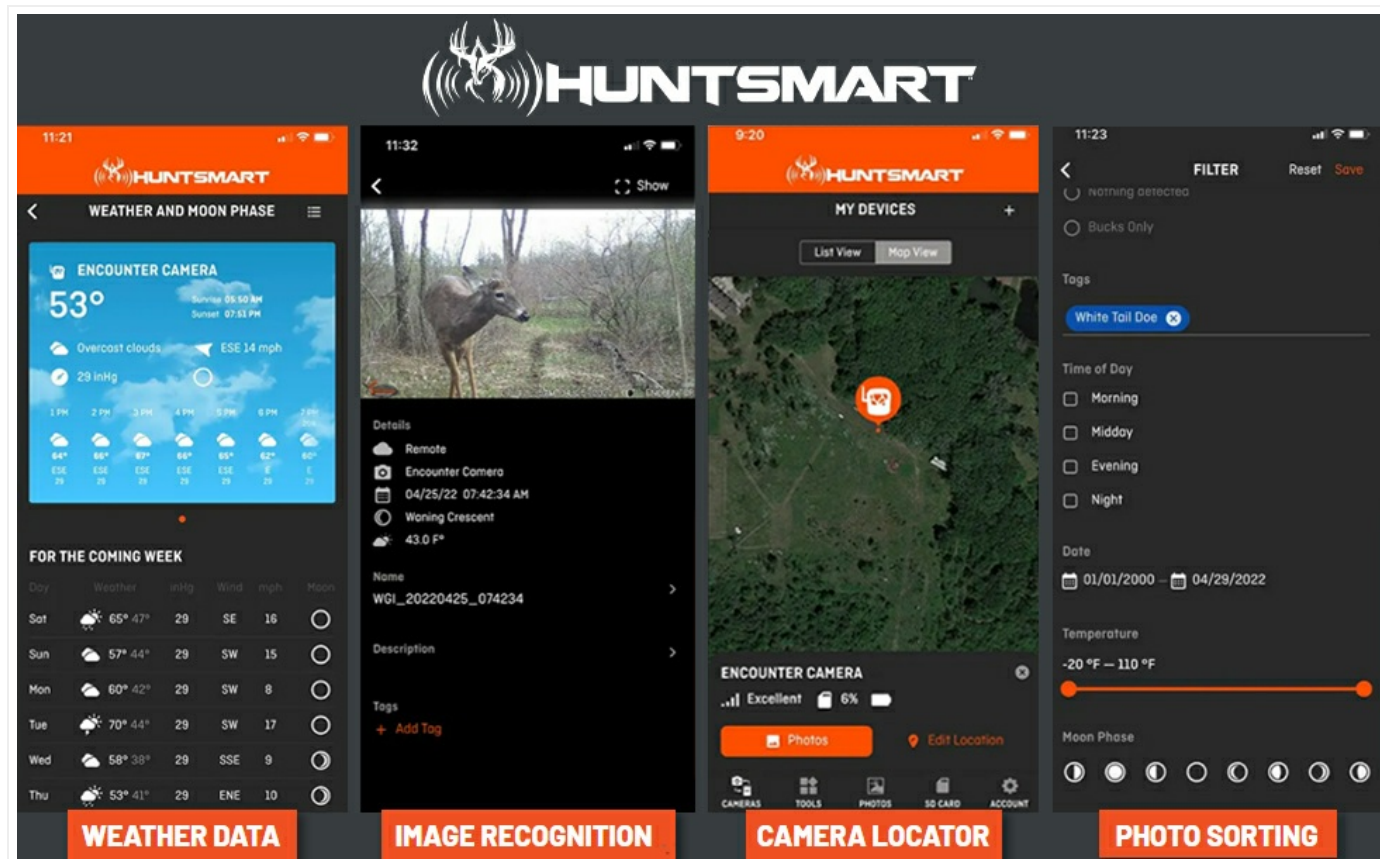


Figure 4: Screenshots illustrating the user interface of the HuntSmart mobile application, which can be used to manage camera settings and view captured media.

4. Retrieving Data

To view captured photos and videos, remove the SD card from the camera and insert it into a compatible device (e.g., computer, card reader). The images are delivered in a 16:9 format, ideal for viewing on TV and computer screens.

MAINTENANCE

- **Battery Replacement:** Replace all eight AA batteries when the battery indicator shows low power to ensure continuous operation.
- **SD Card Management:** Regularly check the SD card capacity. Transfer or delete files as needed to prevent the card from becoming full.
- **Cleaning:** The camera has an IP54 rating, indicating resistance to dust and splashing water. Wipe the exterior with a soft, damp cloth. Do not use harsh chemicals or abrasive materials. Ensure the lens and sensor areas are clean for clear images.
- **Storage:** When not in use for extended periods, remove batteries and the SD card. Store the camera in a cool, dry place.

TROUBLESHOOTING

Problem	Possible Cause / Solution
Camera not powering on	Check battery installation and ensure batteries are fresh. Verify the power switch is in the 'ON' position.
"No SD Card" message	Ensure the SD card is properly inserted. Try reinserting the card or using a different, compatible SD card.
Poor image/video quality	Clean the camera lens and sensor. Ensure the camera is stable and not subject to excessive movement. Check lighting conditions.
Camera not triggering	Verify the detection range is appropriate for the placement. Ensure there are no obstructions in front of the sensor. Check battery level.

SPECIFICATIONS

Feature	Detail
Image Resolution	16 Megapixels
Video Resolution	720P (without audio)
Trigger Speed	0.7 seconds
Detection & Illumination Range	60 feet
Image Aspect Ratio	16:9
Memory	Supports SD cards up to 32 GB (Class 10 recommended)
Power Source	8 AA batteries (not included)
Battery Life	Up to 6 months or 12,000 photos (depending on usage and environment)
Mounting	Adjustable tree strap (included)
Waterproof Rating	IP54
Dimensions (L x W x H)	3.8 x 3.8 x 3.8 inches
Weight	11.4 ounces
Special Features	Motion Sensor, Time/Date/Moon Phase Stamps



Figure 5: Product packaging displaying a comprehensive list of features and specifications.

WARRANTY AND SUPPORT

The WILDGAME Innovations Terra Extreme 2.0 Trail Camera comes with a 1-year limited warranty. For warranty claims or technical support, please contact GSM Outdoors, the manufacturer.

For more information and resources, including the HuntSmart app, visit the official Wildgame Innovations website or refer to the contact information provided on the product packaging.

- **Manufacturer:** GSM Outdoors
- **UPC:** 888151039250
- **HuntSmart App:** Available on [Apple App Store](#) and Google Play Store.

Proposition 65 Warning: This product may contain chemicals known to the state of California to cause cancer and reproductive harm. For more information, visit [www.P65Warnings.ca.gov](#).

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question