

Westinghouse WR43FX2212

Westinghouse Roku TV 43-inch 1080P LED Full HD Smart Television Instruction Manual

Model: WR43FX2212

1. SETUP GUIDE

1.1 Unpacking and Initial Inspection

Carefully remove the television from its packaging. Ensure all components are present and undamaged. The package should include:

- Westinghouse Roku TV (43-inch)
- TV Stand (2 pieces)
- Roku Remote Control
- AAA Batteries (2)



Image: Westinghouse Roku TV 43-inch with indicated dimensions of 38.01 inches width, 24 inches height, and 8.2 inches depth.

1.2 Attaching the TV Stand

If you plan to place the TV on a surface, attach the included stand pieces:

1. Place the TV screen-down on a soft, clean surface to prevent scratches.
2. Align each stand piece with the corresponding screw holes on the bottom of the TV.
3. Secure the stands using the provided screws. Do not overtighten.

1.3 Wall Mounting (Optional)

The Westinghouse Roku TV is VESA compatible for wall mounting. Ensure you use a compatible wall mount kit (sold separately) and follow its instructions carefully. For visual guidance on wall mount installation, refer to the video below.

Your browser does not support the video tag.

Video: A user demonstrates the installation of a tilting TV wall mount on a television. This video provides a step-by-step guide for securely attaching the mount to the TV and the wall.

1.4 Connecting Peripherals

Connect your external devices using the available ports:

- **HDMI:** 3 HDMI ports (including 1 eARC) for high-definition audio/video devices like cable boxes, game consoles, or streaming sticks.
- **Composite Video:** 1 input for older devices.
- **Optical Digital Audio:** 1 output for connecting to soundbars or audio receivers.
- **USB:** For media playback or firmware updates.
- **Antenna/Cable:** For connecting a digital antenna for local channels.



Image: Side view of the Westinghouse Roku TV, highlighting the various input and output ports for connecting external devices.

1.5 Power On and First-Time Setup

Once all connections are made:

1. Plug the TV's power cord into an electrical outlet.
2. Press the power button on the remote control or the TV.
3. Follow the on-screen instructions to complete the initial Roku setup, including connecting to your Wi-Fi network and creating/logging into a Roku account.

2. OPERATING INSTRUCTIONS

2.1 Roku Remote Control

The included Roku remote provides easy navigation and control:

- **Power Button:** Turns the TV on/off.
- **Home Button:** Returns to the Roku Home screen.
- **Directional Pad (OK button):** Navigates menus and selects items.
- **Volume Up/Down:** Adjusts the TV volume.
- **Mute Button:** Mutes/unmutes the TV audio.
- **App Shortcut Buttons:** Direct access to popular streaming services like Netflix, Hulu, etc.

Your browser does not support the video tag.

Video: A user demonstrates the functionality of the Roku remote control, showing how to navigate the Roku TV interface and access various streaming applications.

2.2 Navigating the Roku Home Screen

The Roku Home screen provides access to all your entertainment options:

- Use the directional pad on your remote to browse through installed streaming channels and input sources.
- Select an icon to launch an app or switch to a connected device.



Image: The Westinghouse Roku TV home screen displaying a grid of streaming applications and input selections.

2.3 Streaming Content

Access a wide variety of streaming services:

- The Roku platform offers access to Netflix, Prime Video, MAX, Apple TV+, Disney+, ESPN+, Hulu, Fox Sports, YouTube TV, Pluto TV, Peacock, NFL, and many more.
- Discover new content through the Roku Channel, which includes free live TV channels and premium subscription options.

2.4 Smart Home Integration

Integrate your TV with smart home ecosystems:

- Pair your Roku TV with Amazon Alexa, Google Assistant-enabled, and Apple HomeKit devices.
- Use voice commands to find and play entertainment, control streaming, or turn the TV on/off.

Your browser does not support the video tag.

Video: A user reviews the Westinghouse Roku TV, highlighting its picture quality, quick app processing, and integration with smart home devices like Alexa for voice control and screen sharing.

2.5 Mobile App Functions

Enhance your TV experience with the Roku Mobile app (available for iOS and Android):

- **Voice Control or Fast Keyboard Search:** Search for content using voice commands or quick keyboard input.
- **Private Listening:** Connect earbuds or headphones to your mobile device for private audio without disturbing others.
- **On-the-Go TV Streaming:** Access the Roku channel to stream movies, TV shows, and family programs directly on your mobile device.
- **Screen Mirroring:** Cast content from your compatible smartphone or tablet directly to your Roku TV.

3. MAINTENANCE AND CARE

3.1 Cleaning the Screen

To clean the TV screen:

- Gently wipe the screen with a soft, lint-free cloth.
- For stubborn marks, lightly dampen the cloth with water or a screen-specific cleaning solution. Never spray liquid directly onto the screen.
- Avoid using harsh chemicals, abrasive cleaners, or alcohol-based solutions, as these can damage the screen.

3.2 Software Updates

Your Roku TV receives automatic software updates to ensure you have the latest features and channels. Ensure your TV is connected to the internet for these updates.

3.3 Power Management

To optimize energy consumption:

- Adjust backlight settings to a comfortable level.
- Utilize the TV's sleep timer function if available.
- Unplug the TV from the power outlet during extended periods of non-use or during electrical storms.

4. TROUBLESHOOTING GUIDE

If you encounter any issues, refer to the following common troubleshooting steps:

4.1 No Power

- Ensure the power cord is securely plugged into both the TV and a working electrical outlet.
- Test the outlet with another device to confirm it has power.
- Try a different power outlet.

4.2 No Picture or Sound

- Verify that the correct input source is selected (e.g., HDMI 1, HDMI 2).
- Check all cable connections (HDMI, composite, etc.) to ensure they are firmly seated.
- Increase the volume on the TV and ensure it is not muted.
- If using external audio equipment, ensure it is powered on and correctly configured.

4.3 Wi-Fi Connectivity Issues

- Restart your Wi-Fi router and modem.
- Go to *Settings > Network > Set up connection* on your Roku TV to re-establish the Wi-Fi connection.
- Ensure the TV is within range of your Wi-Fi router.

4.4 Remote Control Not Responding

- Replace the batteries in the remote control.
- Ensure there are no obstructions between the remote and the TV's IR sensor.
- If using a Roku Voice Remote, try re-pairing it by pressing and holding the pairing button inside the battery compartment.

5. PRODUCT SPECIFICATIONS

Feature	Specification
Brand Name	Westinghouse
Model Number	WR43FX2212
Screen Size	42.5 Inches
Display Technology	LED
Resolution	1080p (1920 x 1080)
Refresh Rate	60 Hz

Aspect Ratio	16:9
Connectivity Technology	Wi-Fi
Special Features	Dolby Audio, Voice Command, Roku TV
Speaker Type	Built-In
Product Dimensions (DxWxH)	8.2"D x 38.01"W x 24"H
Item Weight	20.1 pounds
Voltage	240 Volts
Wattage	74 watts
Included Components	Stand, TV

6. WARRANTY AND SUPPORT

6.1 Warranty Information

For detailed warranty information, please refer to the warranty card included with your product packaging or visit the official Westinghouse website. Keep your proof of purchase for warranty claims.

6.2 Customer Support

If you require further assistance or have questions not covered in this manual, please contact Westinghouse customer support. Contact details can typically be found on the Westinghouse website or in your product documentation.