



[Manuals.plus](#) /

> [IMOURLIVE](#) /

> IMOURLIVE 6-inch Cordless Mini Chainsaw User Manual (Model: DLJ-6)

## IMOURLIVE DLJ-6

# IMOURLIVE 6-inch Cordless Mini Chainsaw User Manual

Model: DLJ-6

[Introduction](#)   [Safety Instructions](#)   [Package Contents](#)   [Setup](#)   [Operating](#)  
[Instructions](#)   [Maintenance](#)   [Troubleshooting](#)   [Specifications](#)   [Warranty & Support](#)

## 1. INTRODUCTION

Thank you for choosing the IMOURLIVE 6-inch Cordless Mini Chainsaw. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new tool. Please read it thoroughly before first use and keep it for future reference.

This compact and powerful electric chainsaw is designed for light-duty pruning, cutting, and trimming tasks. Its brushless motor and auto-oiling system ensure smooth performance and extended tool life.

## 2. SAFETY INSTRUCTIONS

Always prioritize safety when operating power tools. Failure to follow these instructions may result in serious injury or property damage.

- **Personal Protective Equipment (PPE):** Always wear safety glasses, gloves, and appropriate clothing. A face shield and hearing protection are also recommended.
- **Work Area:** Ensure the work area is clear of bystanders, especially children and pets. Keep the area well-lit and free from clutter.
- **Battery Safety:** Use only the specified 21V batteries and charger. Do not expose batteries to extreme temperatures or moisture. Remove the battery when not in use, before cleaning, or when changing accessories.
- **Chain Safety:** Ensure the chain is properly tensioned and lubricated before each use. Never touch the chain when the tool is powered on.
- **Secure Workpiece:** Always secure the material you are cutting to prevent movement and kickback.
- **Proper Grip:** Hold the chainsaw firmly with one hand, ensuring a stable and balanced stance.
- **Avoid Kickback:** Be aware of the chainsaw's tip and avoid contact with hard objects or the ground, which can cause sudden upward or backward movement.
- **Safety Lock:** The chainsaw features a safety lock button that must be pressed simultaneously with the

trigger to activate the tool. This prevents accidental starting.

- **Weather Conditions:** Do not operate the chainsaw in wet conditions or rain.

### 3. PACKAGE CONTENTS

Verify that all items are present in your package:

- IMOUM LIVE 6-inch Cordless Mini Chainsaw (Model: DLJ-6)
- 2 x 21V 2.0Ah Lithium Batteries
- Battery Charger
- 2 x Saw Chains (one pre-installed, one spare)
- Chain Guard
- Safety Goggles
- Screwdriver
- Brush
- User Manual
- Storage Case



Image: Complete package contents of the IMOUM LIVE 6-inch Mini Chainsaw.

## 4. SETUP

### 4.1. Charging the Battery

Before first use, fully charge both 21V lithium batteries. Connect the charger to a power outlet and insert the battery. The indicator lights on the battery will show the charging status. A full charge typically takes 60-75 minutes.



Image: Two 21V Lithium batteries with charge level indicators.

### 4.2. Installing the Chain Guard

Attach the chain guard to the chainsaw using the provided screwdriver. Ensure it is securely fastened to protect your hands during operation.

### 4.3. Adding Lubricating Oil

The chainsaw features an auto-oiling system. Unscrew the oil reservoir cap and fill it with 2/3 of suitable chainsaw lubricating oil. Do not overfill. Securely replace the cap. Press the oil pump button periodically during operation to ensure the chain is adequately lubricated.

## UPGRADED **AUTO-LUBRICATION** SYSTEM



Image: Steps for adding oil to the auto-lubrication system.

### 4.4. Adjusting Chain Tension

Proper chain tension is crucial for safe and efficient cutting. The chainsaw features an adjustment mechanism. Turn the adjustment knob to tighten or loosen the chain. The chain should be snug against the guide bar but still able to be pulled freely by hand. Refer to the user manual for detailed instructions on tension adjustment.

## 5. OPERATING INSTRUCTIONS

### 5.1. Starting the Chainsaw

Insert a fully charged battery into the chainsaw. To start, press the safety lock button with your thumb and simultaneously squeeze the trigger. Release the safety lock button once the chain starts moving.

### 5.2. Cutting Techniques

Always maintain a firm grip on the chainsaw. For optimal cutting, allow the chain to reach full speed before engaging the wood. Apply steady, moderate pressure. Avoid forcing the saw, as this can lead to kickback or damage to the tool. For branches, cut from the top down to prevent pinching the blade. For larger logs, make a relief cut on the underside first.



Image: The mini chainsaw in action, cutting through a log.

### 5.3. Safety Features

The IMOURLIVE mini chainsaw is equipped with multiple safety features:

- **100° Rotatable Top Guard Baffle:** Provides protection against flying debris.
- **Locking Button:** Prevents accidental activation.
- **Rubber and Ergonomic Handle:** Ensures a secure and comfortable grip, reducing fatigue.

## **MULTIPLE SECURITY DESIGNS ENSURE USER SAFETY !**

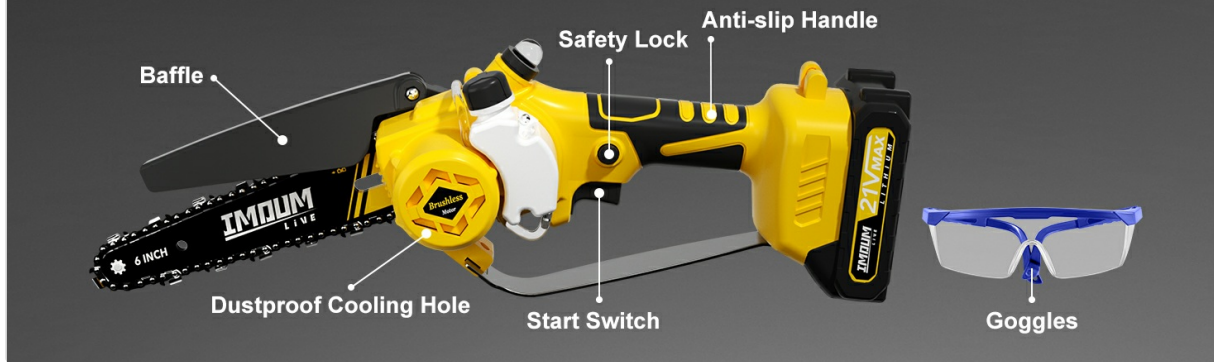


Image: Overview of the chainsaw's safety features.

### **5.4. Versatile Use**

This mini chainsaw is suitable for various tasks:

- Cutting wood
- Pruning twigs and small branches
- Gardening tasks
- Storm clean-up

It is also compatible with an IMOUMLIVE exclusive extended telescopic pole (sold separately) for reaching higher branches.



Image: Demonstrating the multifunctionality of the mini chainsaw, including use with an extension pole.

Your browser does not support the video tag.

Video: Official product video demonstrating the IMOULIVE mini chainsaw in use for various cutting tasks.

## 6. MAINTENANCE

### 6.1. Cleaning

After each use, remove the battery and clean the chainsaw. Use the provided brush to remove sawdust and debris from the chain, guide bar, and motor housing. Ensure the auto-oiling system reservoir is clean and free of blockages.

### 6.2. Chain Sharpening

A sharp chain is essential for efficient and safe cutting. Use the provided file to sharpen the chain teeth as needed. Follow the instructions in the user manual for proper sharpening techniques. Replace the chain if it becomes dull beyond sharpening or is damaged.

### 6.3. Battery Care

Store batteries in a cool, dry place away from direct sunlight. Do not store fully discharged batteries for extended

periods. Charge them periodically to maintain battery health.

## 7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Chainsaw does not start	Battery not charged; Battery not inserted correctly; Safety lock not engaged; Faulty battery/tool.	Charge battery; Re-insert battery firmly; Press safety lock and trigger simultaneously; Contact support.
Chain not cutting efficiently	Dull chain; Incorrect chain tension; Insufficient lubrication.	Sharpen or replace chain; Adjust chain tension; Ensure auto-oiling system is working and reservoir is full.
Chainsaw overheats	Continuous heavy use; Blocked ventilation; Dull chain.	Allow tool to cool down; Clean ventilation holes; Sharpen or replace chain.
Oil leaking from reservoir	Overfilled reservoir; Loose cap; Tool stored incorrectly.	Do not overfill; Ensure cap is tight; Store tool upright.

## 8. SPECIFICATIONS

Feature	Detail
Brand	IMOURLIVE
Model Number	DLJ-6
Power Source	Battery Powered
Motor Type	Brushless Motor
Chain Length	6 Inches
Chain Speed	26.2 ft/s
Horsepower	600 Watts
Battery Voltage	21V (2 x 2.0Ah included)
Battery Life (per battery)	50-60 minutes
Item Weight	2.2 Pounds
Product Dimensions	6"L x 3"W x 12"H
Auto-Oiling System	Yes
Safety Features	100° Rotatable Top Guard Baffle, Locking Button, Ergonomic Handle

## 9. WARRANTY & SUPPORT

IMOURLIVE offers a 365-day replacement policy for this product. For any questions, technical assistance, or warranty claims, please contact IMOURLIVE customer service. Keep your purchase receipt as proof of purchase. Contact information can typically be found on the product packaging or the official IMOURLIVE website.

