

[Manuals.plus](#) /

› [CIRCLE JOY](#) /

› CIRCLE JOY Electric Wine Opener Instruction Manual KB1-602103

CIRCLE JOY KB1-602103

CIRCLE JOY Electric Wine Opener Instruction Manual

Brand: CIRCLE JOY | **Model:** KB1-602103

INTRODUCTION

This instruction manual provides detailed guidance for the safe and efficient use of your CIRCLE JOY Electric Wine Opener. Please read these instructions thoroughly before first use and retain for future reference.

SAFETY INFORMATION

- Keep out of reach of children. This product is not a toy.
- Do not immerse the electric wine opener in water or other liquids.
- Avoid touching the corkscrew spiral during operation.
- Use only with standard wine bottles. Do not use with synthetic corks or champagne bottles.
- Ensure batteries are inserted correctly according to polarity markings.
- Remove batteries if the device will not be used for an extended period.

PRODUCT OVERVIEW

The CIRCLE JOY Electric Wine Opener is designed for effortless cork removal from wine bottles. It features a durable stainless steel and ABS construction.



Image: Components of the CIRCLE JOY Electric Wine Opener. This image highlights the upper and lower buttons, the battery compartment requiring 4 AA batteries (not included), the spiral hook, and the 7-layer finish processing of the device.



Image: The electric wine opener shown with its included foil cutter and a cork that has been removed from a bottle.

SETUP

1. **Install Batteries:** Open the battery compartment cover at the bottom of the opener. Insert 4 AA batteries (not included) according to the polarity markings (+/-). Close the cover securely.

HOW TO USE?

1



Open the cap and install the batteries according to the signs

2



Twist the included foil cutter to remove the seal

3



Place the opener vertically and press the 'Down' button until the cork is removed

4



Press the 'Up' button until the cork is released



Image: Step 1 shows opening the battery compartment and inserting AA batteries. Steps 2-4 illustrate the process of using the foil cutter and operating the opener.

OPERATING INSTRUCTIONS

1. **Remove Foil Seal:** Place the included foil cutter on top of the wine bottle. Grip firmly and twist the cutter around the bottle neck to remove the foil seal.
2. **Open the Bottle:** Place the electric wine opener vertically on top of the wine bottle, ensuring it is aligned with the cork. Hold the bottle firmly with one hand and the opener with the other. Press and hold the lower button (extraction button). The corkscrew will automatically penetrate the cork and pull it out of the bottle.
3. **Release the Cork:** Once the cork is fully extracted from the bottle, lift the opener away. To release the cork from the opener, press and hold the upper button (release button). The cork will automatically be ejected.

BATTERY OPERATED WINE OPENER REMOVE CORKS EASILY AND FASTLY



4 AA BATTERIES REQUIRED
(NOT INCLUDED)



Image: A hand holding the battery-operated wine opener over a wine bottle, ready for cork removal. The image also indicates that 4 AA batteries are required.



Image: A hand holding the electric wine opener as a cork is being released from its mechanism after opening a bottle.

Instructional Videos

Video: Demonstrates the use of the electric wine opener, including foil cutting and cork extraction.

Your browser does not support the video tag.

Video: Shows the process of using a similar electric wine opener, from foil removal to cork extraction and release.

Your browser does not support the video tag.

MAINTENANCE

- **Cleaning:** Wipe the exterior of the wine opener with a soft, damp cloth. Do not use abrasive cleaners or immerse in water.
- **Storage:** Store the wine opener in a dry place, away from direct sunlight and extreme temperatures.
- **Battery Replacement:** Replace batteries when the opener's performance decreases.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Opener does not work.	Batteries are dead or incorrectly installed.	Replace batteries or check polarity.
Cork does not extract.	Opener not aligned correctly; cork is synthetic or damaged.	Ensure opener is vertical and centered. This opener is designed for natural corks.
Cork is stuck in the opener.	Release button not pressed or held long enough.	Press and hold the upper release button until the cork is ejected.

SPECIFICATIONS

- **Model Number:** KB1-602103
- **Material:** Stainless Steel, ABS
- **Dimensions:** 22.9L x 4.6W cm (9L x 1.8W inches)
- **Power Source:** 4 AA Batteries (not included)
- **Weight:** Approximately 270g
- **Color:** Battery Operated - Stainless Steel
- **Manufacturer:** KLT
- **Country of Origin:** China

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the product packaging or contact CIRCLE JOY customer service directly. Keep your purchase receipt as proof of purchase.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question