

[Manuals.plus](#) /

> [THOMSON](#) /

> THOMSON THDV2158 Steam Defroster with Integrated Ironing Board Instruction Manual

THOMSON THDV2158

THOMSON THDV2158 Steam Defroster Instruction Manual

Model: THDV2158

1. INTRODUCTION AND SAFETY INFORMATION

Thank you for purchasing the THOMSON THDV2158 Steam Defroster. This all-in-one vertical garment steamer with an integrated ironing board is designed to efficiently remove wrinkles, refresh fabrics, and disinfect garments. Please read this manual carefully before use to ensure safe and optimal operation.

Important Safety Instructions

- Always ensure the appliance is unplugged before filling or emptying the water tank, or when not in use.
- Do not immerse the appliance, power cord, or plug in water or other liquids.
- Keep the appliance out of reach of children and pets.
- Use only distilled or demineralized water to prevent mineral buildup and extend the life of the appliance.
- Do not direct steam at people, animals, or electrical appliances. Steam is hot and can cause burns.
- Ensure the power cord is not damaged and avoid placing it near hot surfaces.
- Only use attachments and accessories specified by the manufacturer.
- If the appliance malfunctions or is damaged, discontinue use immediately and contact customer support.

2. PRODUCT COMPONENTS

Familiarize yourself with the parts of your THOMSON THDV2158 Steam Defroster:

1. Main Unit (Base with water tank and controls)
2. Adjustable Ironing Board
3. Steam Head with Hose
4. Water Tank (1.45 L capacity)
5. Telescopic Poles for height adjustment
6. Fabric Brush Attachment







Figure 2.1: Overall front view of the THOMSON THDV2158 Steam Defroster, showing the main unit, adjustable ironing board, and steam head.





Figure 2.2: Detailed front view highlighting the steam head and the control panel on the main unit.



Figure 2.3: The fabric brush attachment, used for deeper penetration and lint removal.

3. SETUP AND ASSEMBLY

3.1 Assembly

1. Unpack all components and place the main unit on a stable, flat surface.
2. Insert the telescopic poles into the designated slots on the main unit. Extend them to your desired height.
3. Attach the adjustable ironing board to the top of the telescopic poles. Ensure it clicks securely into place. The board can be set to three different positions for optimal ironing.
4. Connect the steam hose to the steam outlet on the main unit. Twist clockwise until it is firmly secured.
5. Attach the steam head to the end of the steam hose.



Figure 3.1: Rear view of the main unit, illustrating the water tank and the connection point for the steam hose.

3.2 Filling the Water Tank

1. Ensure the appliance is unplugged from the power outlet.
2. Remove the water tank from the main unit.
3. Open the water tank cap and fill it with clean, distilled or demineralized water up to the MAX line (1.45 liters). Do not overfill.
4. Close the cap securely and place the water tank back into the main unit.

4. OPERATING INSTRUCTIONS

4.1 Powering On and Heating

1. Plug the power cord into a suitable electrical outlet (230V).
2. Press the power button on the main unit. The indicator light will illuminate.
3. The appliance will heat up in approximately 60 seconds. The indicator light may change or stop flashing when ready.

4.2 Adjusting Steam Settings

The THDV2158 offers 5 different steam settings to suit various fabric types. Use the steam control dial or buttons on the main unit to select your desired steam level. The continuous steam output is up to 40 g/min.

- **Low Steam:** Delicate fabrics like silk, satin.
- **Medium Steam:** Synthetics, blends.
- **High Steam:** Cotton, linen, denim.
- Adjust as needed for optimal results without damaging the fabric.

4.3 Steaming Garments

1. Hang the garment on a hanger on the adjustable ironing board. The board can be positioned vertically for steaming or at an angle for light ironing.
2. Hold the steam head a few centimeters away from the fabric.
3. Move the steam head slowly over the garment, from top to bottom.
4. For stubborn wrinkles, gently press the steam head against the fabric while steaming.
5. For thicker fabrics or to remove lint, attach the fabric brush to the steam head.
6. The 40 g/min hot steam also provides a disinfection function, eliminating up to 99.99% of germs and bacteria from fabrics.
7. The 1.45L water tank allows for up to 40 minutes of continuous steaming.

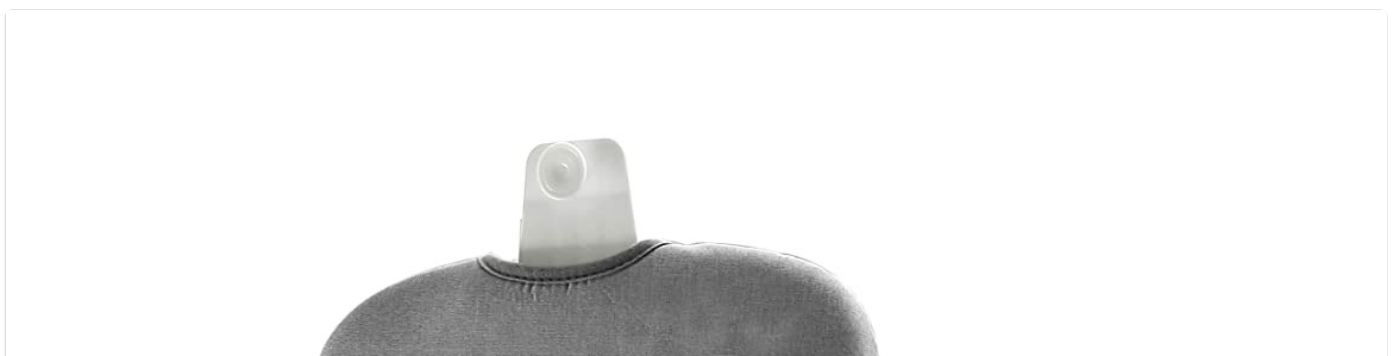






Figure 4.1: The steam defroster in operation, effectively steaming a white shirt on the integrated board.





Figure 4.2: Rear view of the steam defroster while a shirt is being steamed, showing the stability of the unit.

4.4 Finishing and Storage

1. When finished, press the power button to turn off the appliance.
2. Unplug the power cord from the outlet.
3. Allow the appliance to cool down completely before storing.

5. MAINTENANCE AND CLEANING

Regular maintenance ensures the longevity and optimal performance of your steam defroster.

5.1 Emptying and Cleaning the Water Tank

1. Ensure the appliance is unplugged and cool.
2. Remove the water tank and empty any remaining water.
3. Rinse the tank with clean water. Do not use harsh detergents.
4. Allow the tank to air dry before reattaching or storing.

5.2 Descaling

Over time, mineral deposits can build up, especially if tap water is used. Descale your appliance every few months or as needed:

1. Mix a solution of equal parts white vinegar and water.
2. Fill the water tank with this solution.
3. Plug in the appliance and allow it to heat up.
4. Run the steamer until half of the solution has been used.
5. Turn off and unplug the appliance, allowing it to cool.
6. Empty the remaining solution and rinse the tank thoroughly with fresh water.
7. Refill with fresh water and run the steamer for a few minutes to flush out any remaining vinegar.

5.3 Cleaning the Steam Head and Exterior

- Wipe the steam head and exterior surfaces with a soft, damp cloth.
- Do not use abrasive cleaners or solvents.
- Ensure all parts are dry before storing.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
No steam output	Water tank empty; Appliance not heated; Steam hose blocked; Mineral buildup.	Refill water tank; Wait for heat-up (60 seconds); Check hose for kinks; Descale the appliance.
Water leakage from steam head	Condensation; Overfilling water tank; Appliance not fully heated.	This is normal for initial use; Do not overfill; Allow full heat-up before use.
Appliance not turning on	Not plugged in; Power outlet issue; Faulty power cord.	Check power connection; Try a different outlet; Contact customer support if cord is damaged.
Steam is weak or inconsistent	Low water level; Mineral buildup; Incorrect steam setting.	Refill water tank; Descale the appliance; Select a higher steam setting.

7. TECHNICAL SPECIFICATIONS

- **Model:** THDV2158
- **Brand:** THOMSON
- **Power:** 1580 Watts
- **Voltage:** 230 Volts
- **Water Tank Capacity:** 1.45 Liters
- **Continuous Steam Output:** 40 g/min
- **Heat-up Time:** Approximately 60 seconds
- **Continuous Operating Time:** Up to 40 minutes
- **Weight:** 4750 Grams
- **Steam Settings:** 5 levels
- **Ironing Board Positions:** 3 adjustable positions

8. WARRANTY AND CUSTOMER SUPPORT

Your THOMSON THDV2158 Steam Defroster is covered by the manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions.

For technical assistance, troubleshooting beyond this manual, or warranty claims, please contact THOMSON customer support. Contact details can typically be found on the product packaging or the official THOMSON website.

Please have your model number (THDV2158) and proof of purchase ready when contacting support.



© 2024 THOMSON. All rights reserved.