Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- Candy /
- > Candy CBG625-1XGG Integrated Cooker Hood User Manual

Candy CBG625-1XGG

Candy CBG625-1XGG Integrated Cooker Hood User Manual

Model: CBG625-1XGG | Brand: Candy

1. Introduction

Thank you for choosing the Candy CBG625-1XGG Integrated Cooker Hood. This manual provides essential information for the safe installation, efficient operation, and proper maintenance of your appliance. Please read these instructions carefully before use and retain them for future reference.

2. SAFETY INFORMATION

To ensure safe operation, please observe the following:

- Ensure the electrical supply matches the rating plate on the appliance.
- Installation must be carried out by a qualified technician in accordance with local regulations.
- Do not flambé under the cooker hood.
- Regularly clean grease filters to prevent fire hazards.
- Maintain adequate ventilation in the room when the hood is used simultaneously with gas or other fuelburning appliances.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or
 mental capabilities, or lack of experience and knowledge, unless they have been given supervision or
 instruction concerning use of the appliance by a person responsible for their safety.

3. PRODUCT OVERVIEW

The Candy CBG625-1XGG is an integrated cooker hood designed to be discreetly installed within a kitchen cabinet. It features a stainless steel finish, push-button controls, LED lighting, and a removable aluminum grease filter.



Figure 1: Front view of the Candy CBG625-1XGG cooker hood, highlighting the control panel and filter.



Figure 2: The cooker hood integrated into a kitchen environment, demonstrating its discreet design.


Components:

- Control Panel: Push buttons for fan speed and lighting.
- LED Lights: Two 2W LED lights for illuminating the cooking area.
- Aluminum Grease Filter: Collects grease particles from cooking fumes.
- Motor: Provides extraction power.

• Carbon Filter (optional/recirculation mode): Absorbs odors in recirculation setups.

4. Installation

The Candy CBG625-1XGG cooker hood can be installed in either extraction (ducted) or recirculation (filter) mode. Refer to the technical drawing for precise dimensions and mounting requirements.

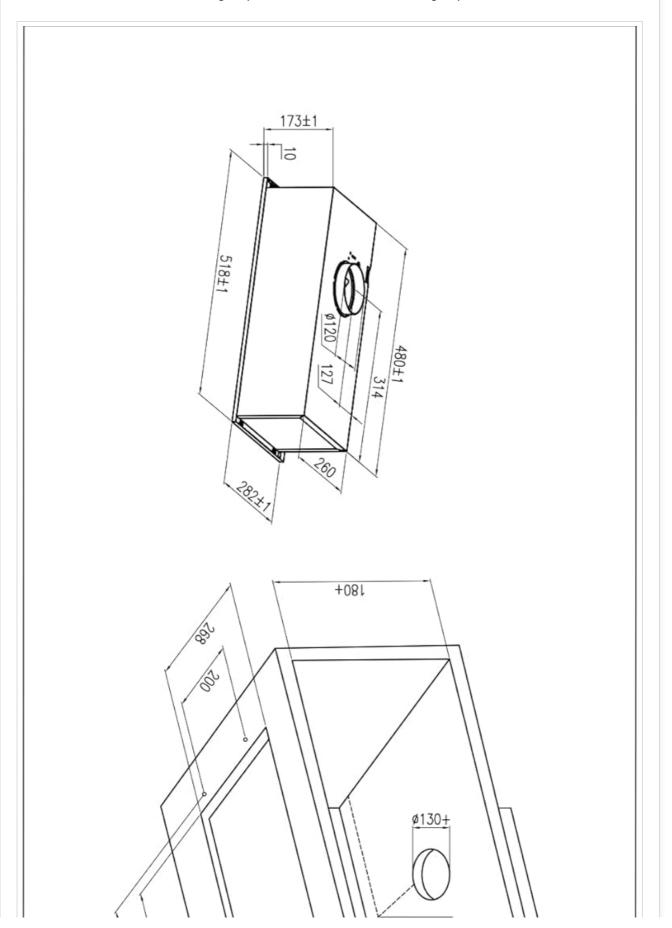

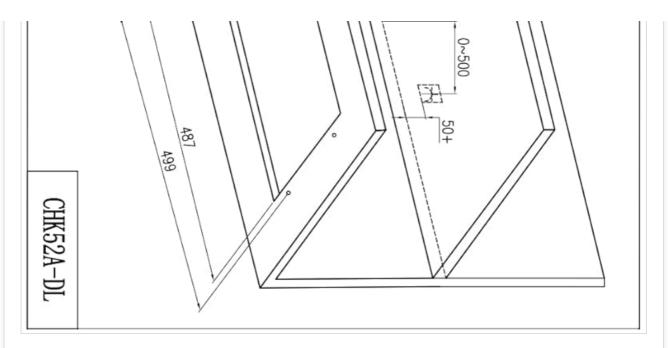


Figure 3: Technical drawing with installation dimensions.

Installation Options:

- Extraction Mode: Air is extracted from the kitchen and vented outside through a ducting system. This requires a suitable exhaust duct.
- **Recirculation Mode:** Air is filtered through carbon filters to remove odors and then recirculated back into the kitchen. This mode is suitable for kitchens without external venting options. Carbon filters are required for this mode (often sold separately).

Mounting:

The hood is designed for integrated installation within a kitchen cabinet. Ensure sufficient clearance above the cooking surface as specified by local safety standards and the appliance manual. The product dimensions are approximately 17.3 cm (Height) x 52 cm (Width) x 28 cm (Depth).

5. OPERATION

The cooker hood is operated via the push-button control panel located on the front of the appliance.

Controls:

- Power Button (0): Turns the hood off.
- **Speed Buttons (1, 2, 3):** Selects one of the three available extraction speeds. Speed 1 is for light cooking, Speed 2 for normal cooking, and Speed 3 for intensive cooking or strong odors.
- Light Button (★): Turns the LED lights on or off.

For optimal performance, switch on the hood a few minutes before you start cooking and leave it running for approximately 10-15 minutes after you finish to clear residual fumes and odors.

6. MAINTENANCE

Regular maintenance ensures the longevity and efficiency of your cooker hood.

Aluminum Grease Filters:

The aluminum grease filters capture airborne grease particles. They should be cleaned regularly (approximately every 2-4 weeks, depending on usage) to maintain optimal performance and prevent fire hazards. The filters are dishwasher safe.

- 1. To remove, locate the release clips on the filter and gently pull down.
- 2. Wash the filters by hand in hot soapy water or in a dishwasher on a low-temperature cycle.
- 3. Ensure filters are completely dry before re-installing.

Carbon Filters (for Recirculation Mode):

If your hood is operating in recirculation mode, carbon filters are used to absorb cooking odors. These filters cannot be washed and must be replaced periodically (typically every 3-6 months, depending on usage). Refer to your specific carbon filter instructions for replacement details.

LED Lighting:

The hood is equipped with long-lasting LED lights. If a light needs replacement, consult a qualified technician or the manufacturer's service center.

Cleaning the Exterior:

Clean the exterior surfaces of the hood with a soft cloth and a mild, non-abrasive detergent. Avoid using harsh chemicals or abrasive cleaning pads.

7. TROUBLESHOOTING

If you encounter issues with your cooker hood, refer to the following common problems and solutions:

- **Hood does not operate:** Check if the appliance is properly plugged into the power outlet and if the circuit breaker has tripped.
- Low extraction performance: Ensure grease filters are clean and not clogged. If in recirculation mode, check if carbon filters need replacement. Verify that the ducting (if applicable) is not obstructed.
- Excessive noise: Check for loose components or improper installation. Ensure filters are correctly seated.
- **Lights not working:** Check if the light button is pressed. If individual LEDs are out, they may require professional replacement.

For problems not listed here or if solutions do not resolve the issue, contact a qualified service technician.

8. Specifications

Feature	Specification
Brand	Candy
Model	CBG625-1XGG
Dimensions (WxDxH)	52 cm x 28 cm x 17.3 cm
Weight	4.5 kg
Control Type	Push Button

Feature	Specification
Power Levels	3
Max Airflow	206 m³/h
Noise Level	68 dB
Lighting Type	LED (2 x 2W)
Voltage	220 Volts
Total Power	50 W
Filter Type	Aluminum Mesh (Grease)
Energy Efficiency Class	В
Annual Energy Consumption	27 kWh/year
Material	Stainless Steel

9. WARRANTY AND SUPPORT

For warranty information, please refer to the documentation provided at the time of purchase or contact your retailer. In case of technical issues or for spare parts, please contact Candy customer support or an authorized service center, providing your product model number (CBG625-1XGG) and serial number (if applicable).

Related Documents - CBG625-1XGG



Candy Cooker Hood Installation and User Manual

Comprehensive guide for Candy cooker hoods, covering installation, operation, maintenance, safety precautions, and troubleshooting. Includes model specifications and environmental guidelines.





Candy CVMAD90N Cooker Hood: Installation, Usage, and Maintenance Manual

Comprehensive instruction manual for the Candy CVMAD90N cooker hood, covering safety, installation, operation, troubleshooting, maintenance, and environmental disposal. Provides detailed guidance for optimal use and care.



 
CBT6130/3X Cooker Hood: Installation and User Manual

Comprehensive instruction manual for the Candy CBT6130/3X Cooker Hood, covering installation, safe operation, maintenance, troubleshooting, and environmental protection guidelines.



Candy CBT625/2X/1, CBT625/2W/1, CBT625/2B/1 Cooker Hood Instruction Manual

Instruction manual for Candy CBT625/2X/1, CBT625/2W/1, and CBT625/2B/1 cooker hoods, detailing installation, safe usage, maintenance, troubleshooting, and environmental information.

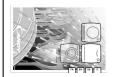

Manuale d'Uso e Manutenzione Lavastoviglie Candy

Guida completa per l'utilizzo sicuro ed efficiente della tua lavastoviglie Candy. Include istruzioni su installazione, programmi, manutenzione e risoluzione problemi.



Candy Oven User Manual: Comprehensive Guide to Operation and Maintenance

Official user manual for Candy ovens, providing detailed instructions on safety, installation, operation, cleaning, maintenance, and troubleshooting. Available in English, French, German, and Dutch.

