

[Manuals.plus](#) /

› [Portronics](#) /

› Portronics Power 10 10000 mAh Wireless Power Bank User Manual

Portronics Power 10 (POR-1210)

Portronics Power 10 10000 mAh Wireless Power Bank User Manual

Model: Power 10 (POR-1210)

INTRODUCTION

The Portronics Power 10 is a versatile 10000 mAh power bank designed for portable charging. It features 22.5W Power Delivery (PD) fast charging, 15W wireless charging, and multiple output ports, including Type-C. This manual provides essential information for the safe and efficient use of your Power 10 device.

PRODUCT FEATURES

- **10W Wireless Charging:** Conveniently charge compatible smartphones wirelessly.
- **18W Type-C PD Output:** Provides fast charging for smartphones and tablets via the Type-C port.
- **Dual USB Output:** Allows simultaneous charging of two devices via USB-A ports.
- **Type-C Input:** Enables efficient recharging of the power bank and supports laptop charging.
- **Lightweight Design:** Weighs approximately 273g for enhanced portability.
- **LED Digital Display:** Shows the remaining battery percentage and charging status.

PACKAGE CONTENTS

- Portronics Power 10 Power Bank
- USB Charging Cable
- User Manual

SETUP

Initial Charging of the Power Bank

Before first use, fully charge your Portronics Power 10 power bank. Connect the provided USB charging cable to the Type-C input port on the power bank and to a compatible USB wall adapter (not included). The LED digital display will show the charging progress. A full charge typically takes approximately 6 hours.

High Power Capacity

Super fast stealth charging to keep you ready on the go.



Image: The Portronics Power 10 power bank displaying its 10000mAh capacity and a smartphone being charged via cable, illustrating its high power capacity.

Understanding the Digital Display

The integrated LED digital display shows the current battery percentage of the power bank. This allows you to monitor the charge level accurately.

LED Digital Display

See what's going on with the device.



Image: A close-up view of the Portronics Power 10's LED digital display, clearly showing '75%' battery charge, indicating its digital display feature.

OPERATING INSTRUCTIONS

Wired Charging

1. Connect one end of your device's charging cable to your smartphone or tablet.
2. Connect the other end of the cable to one of the USB output ports (USB-A or Type-C PD) on the Power 10 power bank.
3. The power bank will automatically begin charging your device. The digital display will show the power bank's remaining charge.

Enhanced Connectivity

Dual USB Output for multitasking



Image: The Portronics Power 10 power bank connected to two smartphones via USB cables, demonstrating its dual USB output capability for multitasking.

Wireless Charging

The Power 10 supports 10W wireless charging for compatible devices.

1. Ensure your device supports wireless charging.
2. Place your wireless charging compatible device directly onto the wireless charging pad area of the Power 10 power bank.
3. Ensure the device is centered on the charging pad for optimal connection. The power bank will automatically detect and begin charging your device wirelessly.

Touch And Charge

With 10W Wireless charging, Charge your smartphones, smartly enough.



Image: A smartphone being wirelessly charged on the Portronics Power 10, with the phone screen indicating '75% Charged', highlighting the 10W wireless charging feature.

MAINTENANCE

- Keep the power bank away from water, moisture, and extreme temperatures.
- Avoid dropping or subjecting the device to strong impacts.
- Clean the power bank with a soft, dry cloth. Do not use harsh chemicals or abrasive materials.
- Store the power bank in a cool, dry place when not in use.
- For optimal battery life, fully charge the power bank at least once every three months if not used regularly.

TROUBLESHOOTING

- **Power bank not charging:** Ensure the charging cable is securely connected to both the power bank's Type-C input and a working power source. Try a different cable or adapter.

- **Device not charging from power bank:** Check if the power bank has sufficient charge. Ensure the charging cable is properly connected to both the power bank's output port and your device. For wireless charging, ensure your device is centered on the pad and supports wireless charging.
- **Slow charging:** Ensure you are using a fast-charging compatible cable and your device supports fast charging. For optimal speed, use the Type-C PD output.
- **Digital display not working:** Try charging the power bank to see if the display reactivates. If the issue persists, contact customer support.

SPECIFICATIONS

Feature	Detail
Model Name	Power 10
Model Number	POR-1210
Battery Capacity	10000 mAh
Battery Type	Lithium Polymer
Wireless Charging Output	10W
Type-C PD Output	18W
USB Output Ports	2
Type-C Input	Yes
Digital Display	Yes
Dimensions (L x W x T)	15.2 x 9.9 x 2.2 cm
Weight	273 Grams
Battery Charge Time	6 Hours
Country of Origin	India

Product Dimensions



Image: A visual representation of the Portronics Power 10 power bank with its dimensions labeled: 148.5mm length, 68.5mm width, and 18mm thickness.

SAFETY INFORMATION

- Do not disassemble, modify, or repair the device yourself.
- Avoid exposure to direct sunlight, heat sources, or flammable materials.
- Do not use the power bank in environments with high humidity or dust.
- Keep out of reach of children.
- Dispose of the power bank responsibly according to local regulations.

WARRANTY AND SUPPORT

Warranty

The Portronics Power 10 comes with a **1 Year Manufacturing Warranty** from the date of purchase. This warranty covers

manufacturing defects. Please retain your purchase receipt for warranty claims.

Customer Support

For any assistance, please contact Portronics customer support:

Call/WhatsApp: 9555-245-245

Email Support: <https://support.portronics.com>

Operating Hours: 10 AM - 6 PM



Image: Portronics Port-Care support details, including contact number and email for personalized assistance.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question