

MUSTAR Piano Keyboard 88 Keys

MUSTAR Digital Piano Keyboard 88 Keys - Instruction Manual

Model: Piano Keyboard 88 Keys

INTRODUCTION

Thank you for choosing the MUSTAR Digital Piano Keyboard. This manual provides essential information for the proper setup, operation, and maintenance of your instrument. Please read it thoroughly before use to ensure optimal performance and longevity.

SAFETY PRECAUTIONS

- Do not expose the instrument to direct sunlight, high temperatures, or excessive humidity.
- Avoid placing the instrument near heat sources or in dusty environments.
- Ensure the power adapter is connected to a compatible power outlet.
- Do not attempt to disassemble or modify the instrument. Refer all servicing to qualified personnel.
- Keep the instrument away from water or other liquids.

PACKAGE CONTENTS

Verify that all items are present in the package:

- MUSTAR Digital Piano Keyboard (88 Keys)
- Furniture Stand components
- 3-Pedal Unit
- Power Adapter
- Music Rest
- Instruction Manual
- Assembly Screws and Tools
- Dust Cover

SETUP AND ASSEMBLY

Follow these steps to assemble your digital piano:

1. **Unpacking:** Carefully remove all components from the packaging. Ensure all protective materials are removed from the piano and stand parts.
2. **Stand Assembly:**
Assemble the furniture stand using the provided screws and tools. Ensure all connections are secure. The stand is designed for stability and to complement modern living spaces.



Image: The MUSTAR Digital Piano Keyboard fully assembled with its furniture stand and 3-pedal unit.

3. **Attaching the Piano:**
Carefully place the digital piano keyboard onto the assembled stand. Align the mounting points and secure the piano to the stand using the designated screws. The piano also features small legs on its underside, allowing it to be used on a tabletop if the stand is not desired.
4. **Pedal Unit Connection:**
Connect the 3-pedal unit to the designated port on the underside of the piano. Ensure the connection is firm. The pedals provide Sostenuto, Sustain, and Soft functions, mimicking an acoustic piano.

3 HIGH BRIGHTNESS ELECTROPLATED METAL PEDALS

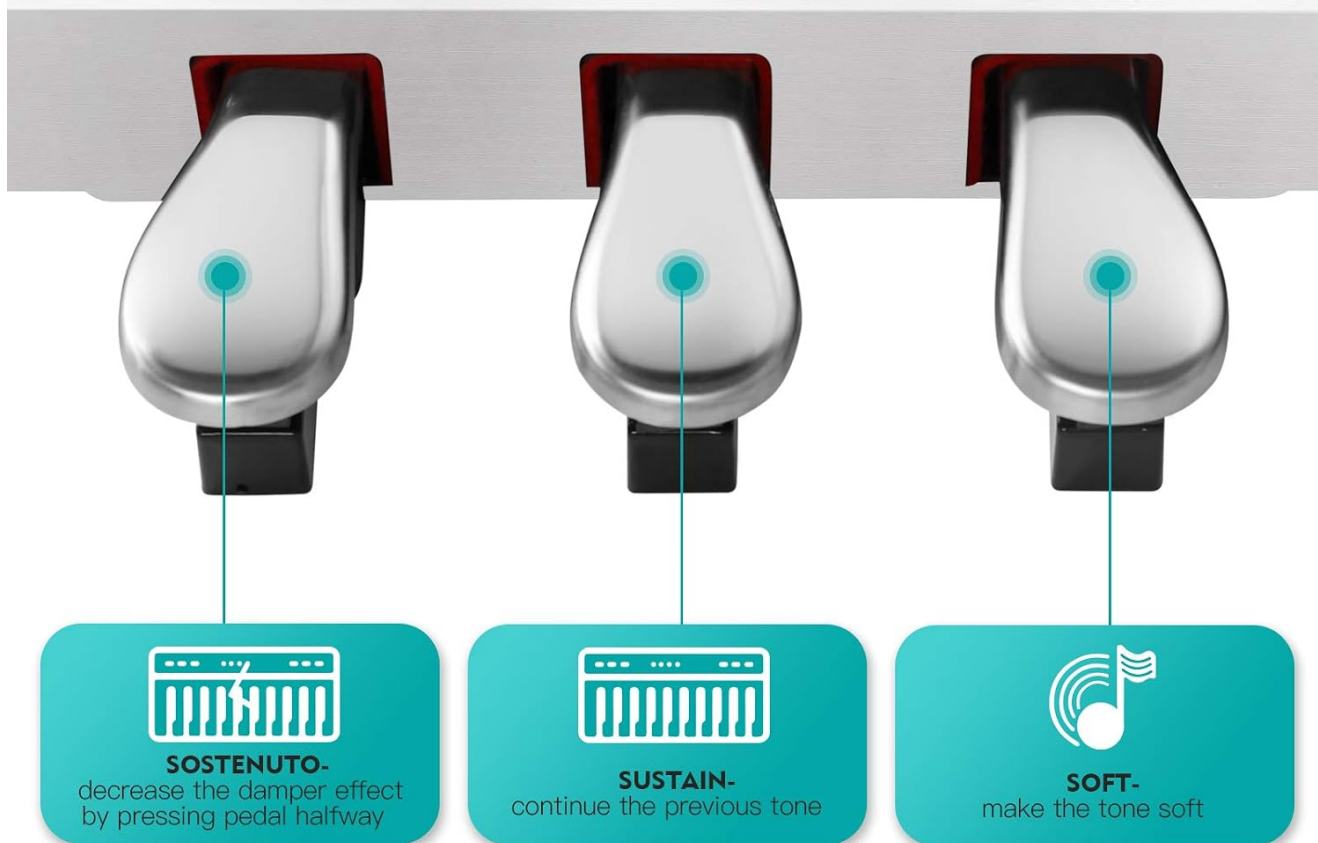


Image: A close-up view of the three electroplated metal pedals: Sostenuto, Sustain, and Soft.

5. Music Rest Installation:

Insert the music rest into the slot on the top panel of the piano.

6. Power Connection:

Connect the power adapter to the DC IN port on the piano and then plug it into a standard electrical outlet.

OPERATING INSTRUCTIONS

Control Panel Overview



Image: A detailed view of the piano's control panel, showing the LCD display, volume knobs, and function buttons.

- **Power Button:** Turns the piano on or off.
- **Volume Knobs:** Adjust the main volume and accompaniment volume.
- **Select Knob:** Used to navigate and select different tones, rhythms, and demo songs displayed on the LCD.
- **LCD Display:** Provides feedback on current settings, selected tones, rhythms, and teaching functionality.
- **Function Buttons:** Access various modes and features such as Demo, Timbre, Rhythm, Metronome, Record, Playback, Dual Mode, Split, Touch, and Effect.

Key Features and Functions

- **88 Weighted Keys with Hammer Action:** The keyboard features 88 graded hammer standard keys designed to replicate the feel of an acoustic piano. The touch response is adjustable to match finger strength changes, aiding beginners in developing proper technique.

PRECISELY MATCHING THE FINGER STRENGTH CHANGES

MORE REALISTICALLY RESTORED THE SOUND
OF THE ORIGINAL GRAND PIANO

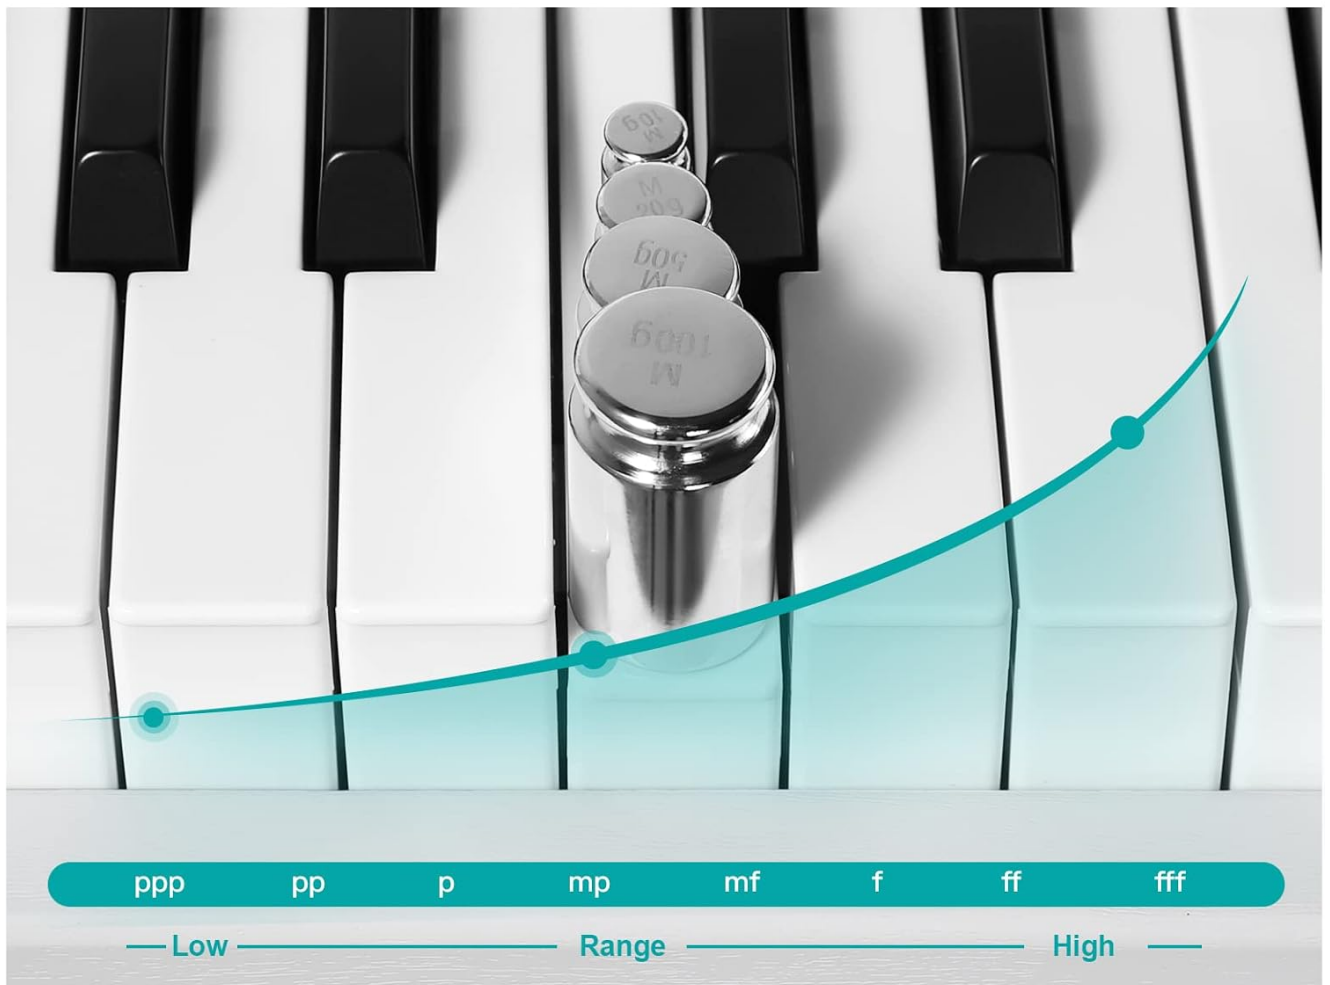


Image: A diagram showing how the weighted keys respond to varying finger strength, from soft (ppp) to strong (fff).

- **Sound Source:** Equipped with a DREAM sound source and advanced double stereo speakers, providing realistic and rich sound quality with smooth treble and strong bass.



DOUBLE 20W STEREO SPEAKERS

FRENCH DREAM SOURCE, DIGITIZATION SAMPLING



MIDI OUT/ MIDI IN

HEADPHONE, USB FUNCTION, MP3



Image: An illustration of the internal double stereo speakers and the French DREAM sound source chip, highlighting the piano's audio technology.

- **Tones and Rhythms:** Access 960 tones and 200 preset rhythms. Use the Select knob to browse and choose different instrument sounds and rhythmic accompaniments.
- **Demo Songs:** The piano includes 80 demo songs for listening and practice.
- **Metronome:** Activate the built-in metronome to assist with timing and rhythm practice. Adjust the tempo and beat type as needed.
- **Record & Playback:** Use the Record function to capture your performance and the Playback function to listen back. This feature allows for self-assessment and practice improvement.
- **Dual Mode:** Combine two different voices (e.g., piano and strings) to create layered sounds.
- **Split Mode:** Divide the keyboard into two sections, each with a different voice, allowing two different instruments to be played simultaneously.
- **Headphone Jack:** Connect headphones for private practice without disturbing others. The piano features dual headphone jacks for shared listening.
- **USB/MIDI Connectivity:** Connect the piano to a computer or other MIDI-compatible devices via USB/MIDI ports for use with music software or learning applications.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to wipe the surface of the piano. For stubborn dirt, slightly dampen the cloth with water and wipe gently, then dry immediately. Avoid using abrasive cleaners, solvents, or waxes.
- **Dust Protection:** Use the provided cloth cover to protect the piano from dust when not in use.
- **Key Care:** Keep the keys clean and free from dust and debris. Avoid pressing keys with excessive force.
- **Storage:** If storing the piano for an extended period, disconnect the power adapter and cover the instrument. Store in a cool, dry place away from extreme temperatures.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No sound	Power not connected, volume too low, headphones connected.	Ensure power adapter is plugged in, increase volume, disconnect headphones.
Keys not responding	Instrument off, specific mode activated.	Turn on the piano, check if a mode like "Split" or "Dual" is affecting key response.
Distorted sound	Volume too high, external device interference.	Lower the volume, check for nearby electronic devices causing interference.
Pedals not working	Pedal unit not properly connected.	Ensure the pedal unit cable is securely plugged into the piano.

If you encounter issues not listed here, please contact customer support.

SPECIFICATIONS

Feature	Detail
Brand	MUSTAR
Model Name	Digital Piano
Number of Keys	88
Key Type	Weighted Keyboard Hammer Action
Tones	960
Rhythms	200 Preset Rhythms
Demo Songs	80
Polyphony	64
Speakers	Dual Stereo Speakers
Pedals	3 (Sostenuto, Sustain, Soft)
Connectivity	Headphone Jack, USB/MIDI
Power Source	Corded Electric

Feature	Detail
Dimensions (Overall)	53.7 x 14.6 x 30.6 inches

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your product or visit the official MUSTAR website. If you have any questions or require assistance, please feel free to contact the seller or manufacturer directly.

© 2024 MUSTAR. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question