

tectake 404212

tectake Airfryer Model 404212 (HF-3019TS-D Yaiza) Instruction Manual

Your guide to safe and efficient use of your tectake Airfryer.

1. INTRODUCTION

Thank you for choosing the tectake Airfryer Model 404212 (HF-3019TS-D Yaiza). This appliance is designed for healthy cooking, allowing you to fry, grill, roast, and bake with significantly less oil. Please read this manual thoroughly before first use to ensure safe operation and optimal performance.

2. IMPORTANT SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury.

- Read all instructions before use.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse the cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Ensure the appliance is placed on a stable, heat-resistant surface.
- Do not block any ventilation openings.
- The appliance operates at high temperatures. The housing and handle are made of heat-resistant plastic, but

caution is advised.

3. PRODUCT OVERVIEW

The tectake Airfryer Model 404212 is a versatile kitchen appliance designed for healthy cooking with minimal oil. It features an intuitive touchscreen for easy operation and pre-set programs for various dishes.

3.1 Components

- Main Unit with Control Panel
- Removable Frying Basket with Non-stick Coating
- Removable Grill Plate (if included)
- Handle
- Power Cord
- Ventilation Openings
- Non-slip Rubber Feet



tectake
home



↕ **Enorm volume**
een groot bakvolume met
een inhoud van 4,3 liter

6x **6 geniale programma's**
voor elk gerecht de ideale
kooktijd en temperatuur

♥ **Gezonde toebereiding**
Tot maar liefst 90%
minder vet tijdens frituren

✎ **Eenvoudige bediening**
met een draaiknop en
intuïtief touchscreen

✓ **Veilig in gebruik**
de handgreep wordt niet
warm, maar blijft koel

🍳 **Praktische frituurmand**
uitneembaar, gemakkelijk
reinigen & antiaanbaklaag

Image 3.1: Overview of the tectake Airfryer with its basket and surrounding ingredients.

Innovatief KOKEN

Dit slimme keukenapparaat combineert veelzijdigheid met gemak – voor afwisselende recepten, gezond genieten en een moderne keukencultuur.



MAKKELIJK Gebruik

De heteluchtfunctie zorgt voor knapperige, vetarme gerechten en het antiaanbakmandje is daarna eenvoudig schoon te maken.

Image 3.2: The air fryer with its removable frying basket pulled out, showing the interior.

ROBUUST

Multitalent



Veelzijdig koken
frituren, bakken,
braden en ontthooien

Knapperige resultaten
hogesnelheidscirculatie
warmt snel op

Automatisch uitschakelen
wordt 20 seconden na
afloop geactiveerd

100% stabiliteit
met 4 antislip
rubberen voetjes

Image 3.3: Detailed view of the intuitive touchscreen control panel with various program icons.

4. SETUP AND FIRST USE

4.1 Unpacking

1. Carefully remove all packaging materials from the airfryer.
2. Check that all components listed in Section 3.1 are present and undamaged.
3. Keep packaging materials out of reach of children.

4.2 Cleaning Before First Use

1. Wipe the main unit with a damp cloth. Do not immerse the main unit in water.
2. Wash the frying basket and any removable grill plate with hot water, dish soap, and a non-abrasive sponge. These parts are dishwasher safe.
3. Rinse thoroughly and dry all parts completely before assembly.

4.3 Placement

- Place the airfryer on a stable, level, and heat-resistant surface.

- Ensure there is adequate space (at least 10 cm) around the appliance for proper air circulation, especially around the ventilation openings at the back.
- Do not place the appliance near flammable materials or heat sources.

tectake
home

Productinformatie

AFMETINGEN

Totale afmetingen
28 x 37,5 x 32,5 cm

Binnenafmetingen frituurmand
Ø 22,5 x 9 cm

Handgreep
14 x 3,5 cm

Kabellengte
120 cm

Afmetingen zijn bij benadering

TECHNISCHE DETAILS

Vermogen 1500 W
Bakvolume 4,3 l
Gewicht ca. 4 kg
Timer 0–30 min
Temperatuur 80–200 °C
Materiaal staal, polypropyleen, polycarbonaat, polyamide

INHOUD
 Airfryer met grillplaat
 Uitneembare frituurmand
 Receptenboekje
 Bedieningshandleiding



Image 4.1: Internal view of the airfryer, illustrating the heating element and the removable basket.

5. OPERATING INSTRUCTIONS

5.1 Basic Operation


1. Plug the power cord into a grounded wall outlet (220-240V, 50/60Hz).
2. Pull out the frying basket using the handle.
3. Place your ingredients into the frying basket. Do not overfill.
4. Slide the frying basket back into the airfryer until it clicks into place.
5. The appliance will turn on, and the touchscreen display will illuminate.
6. **Manual Setting:** Use the temperature and timer controls to set your desired cooking parameters (Temperature: 80-200°C, Timer: 0-30 min).

7. **Pre-set Programs:** Select one of the six pre-set programs for common foods like meat, shrimp, fries, fish, chicken nuggets, or pastries. The appliance will automatically set the optimal temperature and time.
8. Press the Start/Pause button to begin cooking.
9. During cooking, you can pull out the basket to shake or turn food. The airfryer will pause automatically and resume when the basket is reinserted.
10. The appliance will beep and automatically shut off when the timer reaches zero.
11. Carefully pull out the basket and empty the cooked food. Use heat-resistant tongs or utensils.



De **gelijkmatige verdeling van de hete lucht** garandeert een knapperig resultaat bij alle gerechten.

De uitneembare frituurmand heeft een **antiaanbaklaag** en is **vaatwasmachinebestendig** voor snelle reiniging.

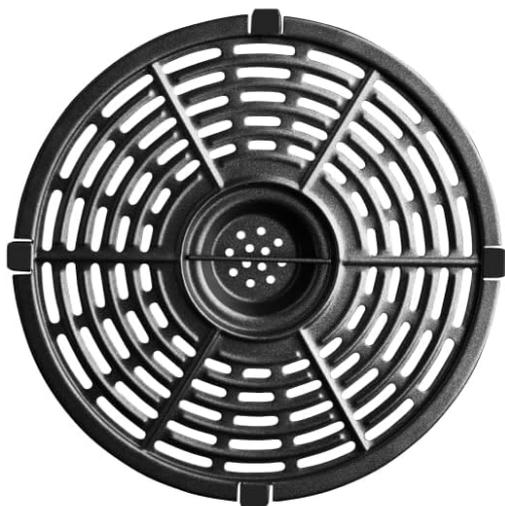

De **uitneembare grillplaat** zorgt voor sappige resultaten en geroosterde aroma's bij vlees.



De **ventilatieopeningen** aan de achterkant zorgen voor een veilige koeling en een stillere werking.

Image 5.1: The airfryer in active operation, showing food being cooked inside the basket.

5.2 Cooking Tips

- For best results, preheat the airfryer for 3-5 minutes before adding food.
- Shake the basket halfway through cooking for even browning, especially for smaller items like fries or nuggets.
- Lightly brush or spray food with oil for extra crispiness, though it's not always necessary.
- Refer to the included recipe booklet for specific cooking times and temperatures for various dishes.

6. CLEANING AND MAINTENANCE

Regular cleaning ensures the longevity and optimal performance of your airfryer.

6.1 Cleaning the Airfryer

1. Always unplug the airfryer and allow it to cool completely before cleaning.
2. Wipe the exterior of the main unit with a damp cloth and mild detergent. Do not use abrasive cleaners.
3. The frying basket and grill plate are dishwasher safe. Alternatively, wash them with hot water, dish soap, and a non-abrasive sponge.
4. Clean the interior of the airfryer with a damp cloth. For stubborn residue, use a soft brush.
5. Ensure all parts are thoroughly dry before storing or next use.



Image 6.1: The airfryer presented with a variety of cooked dishes, demonstrating its versatility.

7. TROUBLESHOOTING

If you encounter issues with your airfryer, refer to the table below for common problems and solutions.

Problem	Possible Cause	Solution
Airfryer does not turn on.	Not plugged in; power outlet malfunction; appliance malfunction.	Check if the power cord is securely plugged in. Try a different outlet. If problem persists, contact customer support.
Food is not cooked evenly.	Basket is overfilled; food not shaken/turned.	Do not overfill the basket. Shake or turn food halfway through cooking.
Food is not crispy.	Not enough oil (for certain foods); temperature too low; cooking time too short.	Lightly brush or spray food with oil. Increase temperature or cooking time as needed.
White smoke comes from the appliance.	Grease residue from previous use; fatty ingredients.	Clean the basket and interior thoroughly. This is normal for very fatty foods.
Appliance smells during first use.	Manufacturing residues burning off.	This is normal for first use and will dissipate. Ensure good ventilation.

8. TECHNICAL SPECIFICATIONS

Specification	Value
Brand	tectake
Model Number	404212 (HF-3019TS-D Yaiza)
Color	Black
Product Dimensions (L x W x H)	28 x 37.5 x 32.5 cm
Capacity	4.3 Liters
Power	1500 Watts
Voltage	220-240 Volts
Frequency	50 Hz / 60 Hz
Material	Polypropylene (body), Stainless Steel with Aluminum & Non-stick Coating (basket), Polyamide (handle), Polycarbonate (display)
Automatic Shut-off Function	Yes (at end of program)
Features	Timer, Touchscreen, Pre-set Programs
Item Weight	4.2 Kilograms
Timer Control	0 - 30 minutes
Temperature Control	80 - 200 °C
Cable Length	Approx. 120 cm

GEMAK ONTMOET
Genot



tectake
home

Beleef nieuwe culinaire hoogtepunten zonder schuldgevoel! Met 6 geoptimaliseerde programma's tover je in een handomdraai zoetigheden, knapperige frietjes of groenten op tafel met deze krachtige airfryer; en dat met nauwelijks olie. Dankzij het receptenboekje kun je direct aan de slag!

Image 8.1: Dimensional diagram of the tectake Airfryer, illustrating its height, width, and depth.

9. WARRANTY AND SUPPORT

Information regarding warranty terms and customer support is typically provided with your purchase documentation or on the manufacturer's official website. For specific warranty details or technical assistance, please refer to the contact information provided by tectake or your retailer.

SGS Certificate: GS/21/HEL/02013

Manufacturer: tectake