

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [HARBOR BREEZE](#) /

› [HARBOR BREEZE 3-Light White Ceiling Fan Light Kit Instruction Manual](#)

HARBOR BREEZE 3-Light Ceiling Fan Light Kit

HARBOR BREEZE 3-Light White Ceiling Fan Light Kit Instruction Manual

Model: 3-Light Ceiling Fan Light Kit

1. IMPORTANT SAFETY INFORMATION

Please read and understand all instructions before beginning installation. Failure to follow these instructions may result in electric shock, fire, or other injuries which could be hazardous or fatal.

- **Disconnect Power:** Always disconnect power at the main circuit breaker or fuse box before beginning installation or performing any maintenance.
- **Qualified Electrician:** If you are unsure about the installation process, consult a qualified, licensed electrician.
- **Wiring:** Ensure all electrical connections comply with local codes and ordinances, as well as the National Electrical Code (NEC).
- **Wet Rated:** This light kit is wet rated and suitable for outdoor use, such as on porches or patios. Ensure all connections are properly sealed for outdoor environments.
- **Bulb Wattage:** Do not exceed the maximum wattage specified for the light kit.
- **Secure Mounting:** Ensure the ceiling fan to which this light kit is attached is securely mounted and capable of supporting the additional weight.

2. PACKAGE CONTENTS

Verify that all components are present before proceeding with installation.

- 1x 3-Light Ceiling Fan Light Kit Housing (White finish)
- 3x Alabaster Glass Shades
- 3x 6.5 Watt Medium Base Bulbs
- Mounting Hardware (typically included with the light kit for attachment to a fan)



Image 1: HARBOR BREEZE 3-Light White Ceiling Fan Light Kit. This image displays the complete light kit assembly, featuring a white central housing, three downward-facing light sockets, each fitted with an alabaster glass shade. A metallic pull chain for operation is visible extending from the center of the housing.

3. SETUP AND INSTALLATION

This light kit is designed for universal compatibility with most HARBOR BREEZE ceiling fans. Refer to your specific ceiling fan's instruction manual for detailed wiring and mounting procedures if necessary.

1. Prepare for Installation:

- Ensure power to the ceiling fan circuit is turned OFF at the main breaker.
- Gather necessary tools: screwdriver, wire strippers, electrical tape.

2. Remove Existing Light Kit (if applicable):

- Carefully disconnect any existing light kit from the ceiling fan by unscrewing mounting screws and detaching electrical wires.

3. Connect Wiring:

- Identify the light kit wires (typically white for neutral, black for hot, and green/bare copper for ground).
- Connect the light kit's white wire to the fan's white (neutral) wire.
- Connect the light kit's black wire to the fan's black (hot) wire for the light function.
- Connect the light kit's ground wire to the fan's ground wire.
- Secure all connections with wire nuts and electrical tape.

4. Attach Light Kit to Fan:

- Align the light kit with the mounting holes on the bottom of the ceiling fan motor housing.
- Secure the light kit using the provided mounting screws. Do not overtighten.

5. Install Bulbs and Shades:

- Carefully screw the three 6.5 watt medium base bulbs into the light kit sockets.
- Attach the alabaster glass shades by aligning them with the shade holders and securing them according to the fan's design (e.g., by twisting or using retention screws).

6. Restore Power:

- Once installation is complete, restore power at the main circuit breaker.
- Test the light kit for proper operation.

4. OPERATING INSTRUCTIONS

The HARBOR BREEZE 3-Light Ceiling Fan Light Kit can be operated via its integrated pull chain or, if your ceiling fan supports it, through a compatible remote control system.

- **Pull Chain Operation:** Gently pull the metallic chain extending from the center of the light kit to cycle through the light settings (e.g., On/Off).
- **Remote Control Operation (if applicable):** If your ceiling fan is equipped with a remote control that includes light functions, use the designated light button(s) on the remote to control the light kit. Ensure the pull chain is set to the "On" position for remote control functionality.

5. MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your light kit.

- **Cleaning:**
 - Before cleaning, ensure power is disconnected at the circuit breaker.
 - Wipe the light kit housing and glass shades with a soft, damp cloth. Do not use abrasive cleaners or solvents, as these may damage the finish or glass.
 - Allow all parts to dry completely before restoring power.
- **Bulb Replacement:**
 - Ensure power is disconnected at the circuit breaker and bulbs are cool to the touch.
 - Carefully unscrew the old bulb from its socket.
 - Screw in a new medium base bulb (E26/E27) of the same type and wattage (max 6.5 watts, or equivalent LED/CFL).
 - Restore power and test.

6. TROUBLESHOOTING

If you experience issues with your light kit, refer to the following common problems and solutions.

| Problem | Possible Cause | Solution |
|------------------------|---|---|
| Lights do not turn on. | <ul style="list-style-type: none">• Power is off at the breaker.• Loose wire connections.• Faulty bulb(s).• Pull chain is in the "Off" position. | <ul style="list-style-type: none">• Check the circuit breaker and ensure power is on.• Verify all wire connections are secure (with power off).• Replace bulbs with new ones.• Pull the chain to cycle the light to the "On" position. |
| Lights flicker or dim. | <ul style="list-style-type: none">• Loose bulb(s).• Incorrect bulb type or wattage.• Loose wiring. | <ul style="list-style-type: none">• Tighten bulbs in their sockets.• Ensure bulbs are compatible with the light kit and within wattage limits.• Check wire connections (with power off). |

| Problem | Possible Cause | Solution |
|---|---|--|
| Light kit does not respond to remote control. | <ul style="list-style-type: none">Pull chain is in the "Off" position.Remote control issues (e.g., batteries).Incompatibility with fan's remote system. | <ul style="list-style-type: none">Ensure the light kit's pull chain is in the "On" position.Refer to your ceiling fan's remote control manual for troubleshooting.Confirm your fan's remote system is designed to control a universal light kit. |

7. SPECIFICATIONS

| | |
|-----------------------------|--|
| Brand | HARBOR BREEZE |
| Model Name | 3-Light Ceiling Fan Light Kit |
| Indoor/Outdoor Usage | Outdoor (Wet Rated) |
| Number of Lights | 3 |
| Light Source Type | Fluorescent, Halogen, LED (Medium Base) |
| Included Bulbs | 3x 6.5 Watt Medium Base Bulbs |
| Shade Material | Alabaster Glass |
| Shade Color | White |
| Control Method | Pull Chain (Remote compatible with certain fans) |
| Power Source | Corded Electric |
| Item Weight | 2.7 pounds |
| Package Dimensions | 13.5 x 6 x 5.25 inches |
| UPC | 080629263529 |
| ASIN | B09RG621C6 |

8. WARRANTY AND SUPPORT

For warranty information or technical support, please contact HARBOR BREEZE customer service. Keep your purchase receipt as proof of purchase.

Contact details are typically found on the product packaging or the official HARBOR BREEZE website.