

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [LEGAMI](#) /

› [Legami - Handsfree and Bluetooth® Water Resistant Speaker Instruction Manual](#)

## LEGAMI SHOW0008

# Legami - Handsfree and Bluetooth® Water Resistant Speaker Instruction Manual

## INTRODUCTION

---

Thank you for purchasing the Legami Handsfree and Bluetooth® Water Resistant Speaker. This speaker is designed to provide a high-quality audio experience in various environments, including wet conditions like showers, thanks to its water-resistant design and integrated microphone for hands-free calls. Please read this manual carefully before using the product to ensure proper operation and to maximize its lifespan.

## SAFETY INFORMATION

---

- Do not disassemble, repair, or modify the speaker. This may cause electric shock, malfunction, or fire.
- Keep the speaker away from extreme temperatures, direct sunlight, and open flames.
- Ensure the charging port cover is securely closed when using the speaker in wet environments to maintain water resistance.
- Do not immerse the speaker completely in water. It is water-resistant, not waterproof.
- Use only the provided USB charging cable or a certified equivalent.
- Keep out of reach of children.

## PACKAGE CONTENTS

---

- Legami Handsfree and Bluetooth® Water Resistant Speaker
- USB Charging Cable

## PRODUCT OVERVIEW

---

Familiarize yourself with the components and controls of your Legami Bluetooth speaker.



Figure 1: Front view of the Legami Bluetooth Speaker, showing its heart shape and the transparent suction cup base.



Figure 2: Top view of the Legami Bluetooth Speaker, highlighting the control panel with power, play/pause, track skip, and call buttons.

### Controls and Indicators:

- **Power Button:** Press and hold to turn the speaker on or off.
- **Play/Pause Button:** Press to play or pause music.
- **Previous Track/Volume Down Button:** Press to go to the previous track. Press and hold to decrease volume.
- **Next Track/Volume Up Button:** Press to go to the next track. Press and hold to increase volume.
- **Call Button:** Press to answer or end a call. Press and hold to reject a call.
- **Microphone:** Integrated for hands-free calling.
- **Charging Port:** Located on the side, covered by a silicone flap.
- **Suction Cup:** Located on the bottom for attaching to smooth surfaces.

## SETUP

---

## 1. Charging the Speaker:

Before first use, fully charge the speaker.

1. Open the silicone flap covering the charging port.
2. Connect the small end of the USB charging cable to the speaker's charging port.
3. Connect the larger end of the USB cable to a USB power adapter (not included) or a computer's USB port.
4. The charging indicator light will illuminate. Charging time is approximately 1 hour.
5. Once fully charged, the indicator light will change or turn off (refer to specific model behavior if different). Disconnect the cable and securely close the silicone flap to maintain water resistance.

## 2. Powering On/Off:

- **To Power On:** Press and hold the Power button for approximately 3 seconds until you hear an audible prompt or see an indicator light.
- **To Power Off:** Press and hold the Power button again for approximately 3 seconds until you hear an audible prompt or the indicator light turns off.

## 3. Bluetooth Pairing:

Pair your speaker with a Bluetooth-enabled device (smartphone, tablet, computer).

1. Ensure the speaker is powered on and in pairing mode (usually indicated by a flashing LED light). If it doesn't enter pairing mode automatically, power it off and on again.
2. On your device, go to the Bluetooth settings.
3. Search for available devices. The speaker will appear as "Legami Singing in the Shower" or similar.
4. Select the speaker from the list to connect. Once successfully paired, you will hear a confirmation sound, and the LED indicator will stop flashing and remain solid.
5. The speaker will automatically connect to the last paired device when powered on, if the device's Bluetooth is active and within range.

## OPERATING INSTRUCTIONS

---

### Music Playback:

- **Play/Pause:** Press the Play/Pause button once.
- **Next Track:** Press the Next Track button once.
- **Previous Track:** Press the Previous Track button once.
- **Volume Up:** Press and hold the Volume Up button.
- **Volume Down:** Press and hold the Volume Down button.

### Hands-Free Calling:

- **Answer Call:** When a call comes in, press the Call button once.
- **End Call:** During a call, press the Call button once to hang up.
- **Reject Call:** When a call comes in, press and hold the Call button for 2 seconds.
- **Redial Last Number:** Double-press the Call button (functionality may vary by device).

### Attaching the Speaker:

The speaker features a suction cup for easy attachment to smooth, non-porous surfaces like shower tiles, glass, or

mirrors.

- Ensure the surface is clean and dry.
- Press the suction cup firmly against the desired surface until it adheres securely.
- To remove, gently pull the edge of the suction cup to release the seal.

## MAINTENANCE

---

### Cleaning:

Wipe the speaker with a soft, damp cloth. Do not use abrasive cleaners, alcohol, or chemical solvents, as these may damage the surface or internal components. Ensure the charging port flap is closed before cleaning with a damp cloth.

### Storage:

Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures when not in use for extended periods. If storing for a long time, charge the battery periodically to maintain its health.

## TROUBLESHOOTING

---

| Problem                            | Possible Cause   | Solution  |
|------------------------------------|--|---|
| Speaker does not turn on.          | Battery is depleted.   | Charge the speaker for at least 1 hour.   |
| Cannot pair with Bluetooth device. | Speaker is not in pairing mode; device's Bluetooth is off; speaker is too far from device. | Ensure speaker is in pairing mode (flashing LED). Turn on Bluetooth on your device. Move speaker closer to your device (within 10 meters). Forget the device on your phone and try pairing again. |
| No sound or low volume.            | Volume on speaker or device is too low; speaker is not connected.                          | Increase volume on both the speaker and your connected device. Ensure the speaker is successfully paired and connected.   |
| Suction cup does not stick.        | Surface is dirty, wet, or porous; suction cup is dirty.                                    | Clean and dry the surface. Clean the suction cup with water and let it air dry. Ensure the surface is smooth and non-porous.  |

## SPECIFICATIONS

---

| Feature            | Detail                                   |
|--------------------|--|
| Model Name         | Singing in the Shower                    |
| Model Number       | SHOW0008                                 |
| Brand              | LEGAMI                                   |
| Product Dimensions | 8.5 x 8 cm (approx. 9 x 8 x 4 cm; 170 g) |
| Material           | ABS + Silicone                           |

| Feature                 | Detail                                 |
|-------------------------|--|
| Connectivity Technology | Bluetooth                              |
| Special Feature         | Water-resistant, Integrated Microphone |
| Speaker Type            | Multimedia                             |
| Audio Output Mode       | Stereo                                 |
| Power Supply            | Wired (USB Charging)                   |
| Charging Time           | 1 Hour (approx.)                       |

## WARRANTY AND SUPPORT

---

For information regarding warranty, returns, or technical support, please refer to the retailer's policy where the product was purchased or visit the official Legami website. Keep your proof of purchase for any warranty claims.

