

[Manuals.plus](#) /

› [Waterpulse](#) /

› WaterPulse WP-V500 Portable Water Flosser User Manual

Waterpulse V500

WaterPulse WP-V500 Portable Water Flosser User Manual

Model: **WP-V500** | Brand: **Waterpulse**

INTRODUCTION

The WaterPulse WP-V500 Portable Water Flosser is designed to provide effective oral hygiene through powerful, pulsating water jets. This device helps remove plaque and food debris from areas inaccessible to traditional toothbrushes, promoting healthier gums and brighter teeth. Its portable and rechargeable design ensures convenient use at home or while traveling.

SAFETY INFORMATION

Warning:

- Do not use the device with broken or damaged parts.
- Keep the device out of reach of children.
- Always follow all usage and maintenance instructions provided in this manual.
- Ensure the charging adapter is 5V or lower to prevent battery damage.

PACKAGE CONTENTS

The WaterPulse WP-V500 package typically includes:

- WaterPulse WP-V500 Portable Water Flosser unit

- Multiple nozzle tips (e.g., classic, tongue cleaner, deep cleaning)
- USB charging cable (adapter not included)
- User Manual



Image: The WaterPulse WP-V500 Water Flosser shown with its retail packaging and a selection of interchangeable nozzle tips.

PRODUCT OVERVIEW

The WaterPulse WP-V500 features a compact, ergonomic design for comfortable handling. It includes a water reservoir,

power button, mode selection button, and indicator lights for pressure settings and battery status.

Otomatik Basınç Hafızası ve 4 Farklı Kullanım Ucu

3 Farklı Basınç Seviyesi

Klasik Uçlar
Genel Kullanım İçin

Dil Temizleyici

Derin Temizlik Ucu
Diş Etleri Arası Temizliği

Image: The WaterPulse WP-V500 Water Flosser unit, highlighting its automatic pressure memory feature and showing three types of nozzle tips: classic, tongue cleaner, and deep cleaning.

SETUP

1. **Charge the Device:** Before first use, fully charge the water flosser. Connect the USB charging cable to the device and a 5V USB power adapter (not included). The battery indicator will show charging status. A full charge provides

approximately 14 days of use.

14 GÜN • Tek Şarjla 14 Gün Kullanım Süresi

1400mAh Şarj Edilebilir Li-ion Pili tamamen şarj olduktan sonra 2 haftaya kadar çalışabilir. Düşük pil hatırlatıcısı ile batarya bitmeden haberdar olun

LOW
MEDIUM
HIGH

Düşük Pil Uyarısı

waterpulse

Image: The WaterPulse WP-V500 Water Flosser with an illustration indicating up to 14 days of battery life and a low battery warning.

2. **Fill the Water Reservoir:** Open the water tank cover and fill the 320 ml reservoir with lukewarm water. Close the cover securely.
3. **Attach Nozzle Tip:** Insert your desired nozzle tip into the opening on top of the device until it clicks into place.

OPERATING INSTRUCTIONS

1. **Select Pressure Setting:** Press the 'M' (Mode) button to cycle through the available pressure settings: Low, Medium, and High. The device also features a massage mode. Choose a setting comfortable for your gums.



3 V500 ile
AŞAMALI TEMİZLİK

Ağız ve Diş Temizliğiniz İçin İstedığınız Su Basıncı Seçin

Basınç Aralığı: 60 ~ 120 PSI

Güçlü Basınç
Derin diş temizliği için

Standart Basınç
Çoğu insan için etkili temizlik basıncı

Hafif Basınç
Hassas dişler ve diş etleri için

waterpulse **TEKNORAKS**

Image: A diagram showing the three adjustable pressure settings (Low, Medium, High) for personalized cleaning with the WaterPulse WP-V500.

İki Çalışma Modu

- Temizleme
- Masaj

Temizleme modundayken diş fırçası ve diş ipi ile ulaşılan temizlikten daha fazlasını size sunar.

Masaj modunda ise diş etlerinizdeki kan akışını hızlandırarak daha sağlıklı olmaları için destekler



waterpulse



Image: The WaterPulse WP-V500 Water Flosser illustrating its two primary operational modes: Cleaning and Massage, with a visual of water jets.

2. **Position the Tip:** Lean over a sink and place the irrigator tip into your mouth, aiming the tip at your gumline at a 90-degree angle.
3. **Start Cleaning:** Press the power button to start the water flow. Move the tip along your gumline, pausing briefly between teeth. Allow the water to flow into the sink.
4. **Clean All Areas:** Ensure you clean both the front and back surfaces of your teeth, as well as between teeth and along the gumline. The 320 ml tank provides approximately 90 seconds of continuous use.
5. **Turn Off:** Press the power button again to stop the water flosser.

Kablosuz Profesyonel



ABD'de en çok satılan ağız
duşu modeli artık Türkiye'de

Geleneksel Diş Temizliğinden
çok daha etkili

Kablosuz Tasarımı ile her
yerde kullanılabilir



Image: A user demonstrating the WaterPulse WP-V500 Water Flosser in action, showing the powerful water jet effectively cleaning teeth and gums.

MAINTENANCE

- Empty and Dry:** After each use, empty any remaining water from the reservoir. Detach the nozzle tip and allow both the tip and the main unit to air dry.
- Clean the Reservoir:** Periodically clean the water reservoir with warm, soapy water. Rinse thoroughly.

3. **Clean the Nozzle Tips:** Rinse nozzle tips under running water. For deeper cleaning, soak them in a solution of 2 parts water and 1 part white vinegar for 5-10 minutes, then rinse.
4. **Store Properly:** Store the device in a clean, dry place.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not turn on.	Low battery or device malfunction.	Charge the device fully. If the problem persists, contact customer support.
Weak water pressure.	Low battery, clogged nozzle tip, or low water level.	Charge the device. Clean the nozzle tip. Refill the water reservoir.
Water leaks from the device.	Water reservoir cover not securely closed or damaged seal.	Ensure the water reservoir cover is tightly closed. Inspect seals for damage.

SPECIFICATIONS

Brand	Waterpulse
Model Number	V500
Product Dimensions	9 x 2.6 x 0.8 cm; 430 grams
Water Tank Capacity	320 ml
Power Source	Battery Powered (2000 mAh)
Features	Multiple Pressure Settings, Massage Mode, Portable, Cordless
Color	White
Material	Plastic
Country of Origin	China

WARRANTY AND SUPPORT

The WaterPulse WP-V500 Water Flosser comes with a **2-year warranty** from the date of purchase. This warranty covers manufacturing defects under normal use.

For warranty claims, technical support, or any questions regarding your device, please contact your retailer or the Waterpulse customer service department. Please have your proof of purchase and model number ready when contacting support.

© 2024 Waterpulse. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question