

Roidmi 1C381SAW

Roidmi Cordless Upright Vacuum Cleaner S2 XCQ12RM User Manual

Model: 1C381SAW

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using this appliance. Retain this manual for future reference.

- This appliance is for household use only. Do not use outdoors or on wet surfaces.
- Do not allow children to operate the vacuum cleaner. Close supervision is necessary when used near children.
- Do not pick up flammable or combustible materials (lighter fluid, gasoline, kerosene, etc.) or use in areas where they may be present.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without the dust cup and filters in place.
- Turn off the appliance before connecting or disconnecting the brush roll or other accessories.
- Use only Roidmi recommended attachments and replacement parts.
- Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts.
- Exercise extra care when cleaning on stairs.
- If the charging cable is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons to avoid a hazard.

2. PRODUCT OVERVIEW

Familiarize yourself with the components of your Roidmi Cordless Upright Vacuum Cleaner.



Image 1: Main view of the Roidmi Cordless Upright Vacuum Cleaner, showing the handle, main unit with dustbin, extension rod, and floor brush.



Image 2: Upright view of the Roidmi Cordless Upright Vacuum Cleaner, highlighting its slim profile and integrated design.

Components:

- Main Unit (includes motor, dustbin, and battery)
- Extension Rod
- Soft Roller Brush Head
- Power Adapter/Charger

3. ASSEMBLY AND SETUP

Follow these steps for initial assembly:

1. **Connect the Extension Rod:** Align the electrical contacts on the extension rod with those on the main unit. Push firmly until it clicks into place.
2. **Attach the Floor Brush:** Align the electrical contacts on the floor brush with those on the extension rod. Push firmly

until it clicks into place.

3. **Initial Charge:** Before first use, fully charge the vacuum cleaner. Refer to the 'Charging' section for details.

4. CHARGING

To charge your Roidmi Cordless Upright Vacuum Cleaner:

1. Ensure the vacuum cleaner is turned off.
2. Connect the power adapter to the charging port on the main unit.
3. Plug the power adapter into a suitable wall outlet (110 Volts).
4. The charging indicator lights on the main unit will illuminate to show charging status. Refer to the product's specific indicator light patterns for full charge indication.
5. Once fully charged, disconnect the power adapter.

5. OPERATION

Using your Roidmi Cordless Upright Vacuum Cleaner:

1. **Power On/Off:** Press the power button located on the handle to turn the vacuum cleaner on. Press it again to turn off.
2. **Suction Modes:** If your model has multiple suction modes, press the mode selection button (if present) to cycle through different power levels (e.g., Standard, Max).
3. **Cleaning:** Guide the floor brush over the surface to be cleaned. The soft roller brush is designed for effective cleaning on various floor types.
4. **Battery Life:** Monitor the battery indicator lights during operation. Recharge when the battery is low.

6. MAINTENANCE

Regular maintenance ensures optimal performance and extends the life of your vacuum cleaner.

6.1 Emptying the Dustbin

1. Ensure the vacuum cleaner is turned off.
2. Locate the dustbin release button on the main unit.
3. Press the button to detach the dustbin.
4. Empty the contents into a waste bin.
5. Reattach the dustbin to the main unit until it clicks securely.

6.2 Cleaning Filters

The vacuum cleaner uses a cartridge filter system. Clean filters regularly for best suction.

1. Remove the dustbin as described above.
2. Twist or pull to remove the filter assembly from the dustbin.
3. Separate the pre-filter and HEPA filter (if applicable).
4. Tap off loose dirt. Rinse filters under cold running water until the water runs clear. Do not use detergent.

5. Allow filters to air dry completely for at least 24 hours before reassembling and placing back into the dustbin. Do not use a hairdryer or other heating devices.

6.3 Cleaning the Brush Roll



Image 3: Close-up view of the soft roller brush head, showing the brush roll and its protective cover.

1. Ensure the vacuum cleaner is turned off.
2. Locate the brush roll release mechanism on the side of the floor brush.
3. Remove the brush roll.
4. Use scissors or a cleaning tool to cut and remove any hair or debris wrapped around the brush roll.
5. Wipe the brush roll and its housing with a dry cloth.
6. Reinsert the brush roll and secure the release mechanism.

7. TROUBLESHOOTING

If you encounter issues, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Vacuum does not turn on	Battery is depleted Power button not pressed correctly	Charge the battery fully Ensure the power button is pressed firmly
Weak suction	Dustbin is full Filters are clogged Obstruction in the brush head or rod	Empty the dustbin Clean or replace filters Check and clear any blockages
Brush roll not spinning	Hair or debris tangled Brush roll not properly installed	Clean the brush roll Ensure the brush roll is securely in place
Unusual noise	Obstruction in the air path Damaged component	Check for and remove any blockages Contact customer support if noise persists

8. SPECIFICATIONS

- **Brand:** Roidmi
- **Model Number:** 1C381SAW
- **Power / Wattage:** 130 watts
- **Voltage:** 110 Volts
- **Item Weight:** 2.7 Kilograms
- **Special Features:** Cordless
- **Filter Type:** Cartridge
- **Power Source:** Battery Powered
- **Included Components:** Accessory, Charger

9. WARRANTY AND SUPPORT

Your Roidmi Cordless Upright Vacuum Cleaner is covered by a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions.

For technical support, spare parts, or warranty claims, please contact Roidmi customer service through their official website or the retailer where the product was purchased.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question