

[Manuals.plus](#) /

› [Power Rangers](#) /

› Power Rangers Dino Master Mode Gold Ranger Action Figure Instruction Manual

Power Rangers F4500

Power Rangers Dino Master Mode Gold Ranger Action Figure Instruction Manual

Model: F4500

PRODUCT OVERVIEW

The Power Rangers Dino Master Mode Gold Ranger action figure brings the excitement of the Power Rangers Dino Fury series to life. This 6-inch figure allows fans to recreate martial arts action and adventures inspired by the TV show.

Key features include:

- **6-Inch Dino Fury Dino Master Mode Gold Ranger Action Figure:** Designed for imaginative play based on the TV series.
- **Includes Dino Key Accessory:** Inspired by the Dino Fury Keys from the show. This key can unlock sounds in the Dino Fury Morpher (sold separately, subject to availability).
- **Dino Master Saber Weapon Accessory:** The figure comes with a weapon accessory, the Dino Master Saber, as seen in the Power Rangers Dino Fury TV show.
- **Inspired by the Power Rangers TV Show:** The Gold Ranger utilizes the Dino Master Saber to activate the powerful Dino Master Mode.



The Power Rangers Dino Master Mode Gold Ranger action figure, displayed with its included Dino Master Saber and Dino Key accessories.

What's Included

Your Power Rangers Dino Master Mode Gold Ranger package contains the following items:

- 1 x Gold Ranger Action Figure
- 1 x Dino Master Saber Accessory
- 1 x Dino Key Accessory





The Dino Key accessory, designed to unlock sounds in compatible Dino Fury Morphers.





The Dino Master Saber weapon accessory, used by the Gold Ranger to activate Dino Master Mode.

SETUP INSTRUCTIONS

1. **Unboxing:** Carefully remove the action figure and its accessories from the packaging. Ensure all components listed in the 'What's Included' section are present.
2. **Attaching Accessories:** The Dino Master Saber can be placed in the figure's hand. The Dino Key can be held by the figure or stored separately.
3. **Cape Assembly:** The Gold Ranger's cape is typically pre-attached. If it requires minor adjustment, gently position it as desired.



OPERATING THE FIGURE

1. **Posing the Figure:** The action figure features multiple points of articulation, allowing for various poses. Gently move the limbs and head to achieve desired stances. Avoid excessive force to prevent damage.
2. **Using the Dino Master Saber:** Place the Dino Master Saber in the figure's hand to recreate battle scenes or display the figure in its Dino Master Mode.
3. **Dino Key Functionality:** The included Dino Key is designed to unlock sounds in the Power Rangers Dino Fury Morpher (sold separately). Insert the key into the Morpher as directed by the Morpher's instructions to activate specific sounds.

used, followed by immediate drying. Avoid harsh chemicals or abrasive cleaners.

- **Storage:** Store the figure and its accessories in a cool, dry place away from direct sunlight and extreme temperatures. This helps preserve the plastic material and paint finish.
- **Handling:** Handle the figure with care. Avoid bending or twisting parts excessively, especially small or thin components, to prevent breakage.

TROUBLESHOOTING

- **Stiff Joints:** If a joint feels stiff, gently manipulate it back and forth a few times. Do not force it.
- **Loose Accessories:** If an accessory does not stay firmly in place, ensure it is correctly inserted into the designated slot or hand.
- **Missing Parts:** If any parts are missing upon unboxing, please refer to the customer support section for assistance.

PRODUCT SPECIFICATIONS

Specification	Detail
Brand	Power Rangers
Model Name	DNF CORE FIGURE GOLD RANGER
Model Number	F4500
UPC	195166174563
Figure Type	Action Figure
Character	Gold Ranger
Size	6 inches
Material	Plastic
Recommended Age	4+ Years
Included Components	Figure, accessory, and Dino Key.

SAFETY INFORMATION

WARNING: Small parts may be generated. Not for children under 3 years.

Please ensure that children playing with this toy are within the recommended age range (4+ years) and are supervised, especially when handling small accessories like the Dino Key and Dino Master Saber.

WARRANTY INFORMATION

This product is manufactured by Hasbro. For specific warranty details, please refer to the information provided on the product packaging or visit the official Hasbro website. General warranty terms typically cover manufacturing defects under normal use.

CUSTOMER SUPPORT

For further assistance, questions, or concerns regarding your Power Rangers Dino Master Mode Gold Ranger action figure, please contact Hasbro customer service. Contact information can typically be found on the product packaging or their official website.

You may also visit the official Power Rangers store on Amazon for more product information [Power Rangers Store](#)

© 2024 Power Rangers. All rights reserved. Manufactured by Hasbro.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question